

Autonics

LCD Display PID Temperature Controller

TX SERIES

INSTRUCTION MANUAL



Thank you for choosing our Autonics product.
Please read the following safety considerations before use.

Safety Considerations

※Please observe all safety considerations for safe and proper product operation to avoid hazards.

※Safety considerations are categorized as follows.

Warning Failure to follow these instructions may result in serious injury or death.

Caution Failure to follow these instructions may result in personal injury or product damage.

※The symbols used on the product and instruction manual represent the following

▲ symbol represents caution due to special circumstances in which hazards may occur.

Warning

- Fail-safe device must be installed when using the unit with machinery that may cause serious injury or substantial economic loss.** (e.g. nuclear power control, medical equipment, ships, vehicles, railways, aircraft, combustion apparatus, safety equipment, crime/disaster prevention devices, etc.) Failure to follow this instruction may result in fire, personal injury, or economic loss.
- Install on a device panel to use.** Failure to follow this instruction may result in electric shock.
- Do not connect, repair, or inspect the unit while connected to a power source.** Failure to follow this instruction may result in electric shock or fire.
- Check 'Connections' before wiring.** Failure to follow this instruction may result in fire.
- Do not disassemble or modify the unit.** Failure to follow this instruction may result in electric shock or fire.

Caution

- When connecting the power input and relay output, use AWG 20 (0.50mm²) cable or over and tighten the terminal screw with a tightening torque of 0.74 to 0.90Nm.**
When connecting the sensor input and communication cable without dedicated cable, use AWG 28 to 16 cable and tighten the terminal screw with a tightening torque of 0.74 to 0.90Nm.
Failure to follow this instruction may result in fire or malfunction due to contact failure.
- Use the unit within the rated specifications.** Failure to follow this instruction may result in fire or product damage.
- Use dry cloth to clean the unit, and do not use water or organic solvent.** Failure to follow this instruction may result in electric shock or fire.
- Do not use the unit in the place where flammable/explosive/corrosive gas, humidity, direct sunlight, radiant heat, vibration, impact, or salinity may be present.** Failure to follow this instruction may result in fire or explosion.
- Keep metal chip, dust, and wire residue from flowing into the unit.** Failure to follow this instruction may result in fire or product damage.

Ordering Information

TX	4	S	-	1	4	R
				R	Relay output	
				S	SSR drive output	
				C	Selectable current output or SSR drive output	
				4	100-240VAC 50/60Hz	
				1	Alarm output 1	
				2	Alarm output 1+Alarm output 2	
				A	Alarm output 1+Alarm output 2+Trans. output	
				B	Alarm output 1+Alarm output 2+RS485 com. output	
				S	DIN W48×H48mm	
				M	DIN W72×H72mm	
				H	DIN W48×H96mm	
				L	DIN W96×H96mm	
				4	9999(4-digit)	
				TX	LCD display PID temperature controller	

Input Type and Range

Input type	Decimal point	Display	Input range(°C)	Input range(°F)
Thermocouple	1	K (CA)	-50 to 1200	-58 to 2192
	0.1	K (CA)	-50.0 to 999.9	-58.0 to 999.9
	1	J (IC)	-30 to 800	-22 to 1472
	0.1	J (IC)	-30.0 to 800.0	-22.0 to 999.9
	1	L (IC)	-40 to 800	-40 to 1472
	0.1	L (IC)	-40.0 to 800.0	-40.0 to 999.9
	1	T (CC)	-50 to 400	-58 to 752
	0.1	T (CC)	-50.0 to 400.0	-58.0 to 752.0
RTD	1	R (PR)	0 to 1700	32 to 3092
	1	S (PR)	0 to 1700	32 to 3092
	1	DP1 100Ω	-100 to 400	-148 to 752
	0.1	DP1 100Ω	-100.0 to 400.0	-148.0 to 752.0
	1	CU5H	-50 to 200	-58 to 392
	0.1	CU5H	-50.0 to 200.0	-58.0 to 392.0

※The above specifications are subject to change and some models may be discontinued without notice.
※Be sure to follow cautions written in the instruction manual and the technical descriptions (catalog, homepage).

Specifications

Series		TX4S	TX4M	TX4H	TX4L
Power supply		100-240VAC~ 50/60Hz			
Allowable voltage range		90 to 110% of rated voltage			
Power consumption		Max. 8VA			
Display method		11-segments (PV: white, SV: green), other display (yellow) with LCD method ^{※1}			
Character size	PV(W×H) SV(W×H)	7.2×14mm 3.9×7.6mm	10.7×17.3mm 6.8×11mm	7.2×15.8mm 6.2×13.7mm	16×26.8mm 10.7×17.8mm
Input type	RTD TC	DP1100Ω, Cu50Ω (permissible line resistance max. 5Ω) K (CA), J (IC), L (IC), T (CC), R (PR), S (PR)			
Display accuracy ^{※2}	RTD TC	●At room temperature: (23°C±5°C): (PV ±0.3% or ±1°C, select the higher one) ±1-digit ●Out of room temperature: (PV ±0.5% or ±2°C, select the higher one) ±1-digit			
Control output	Relay SSR Current	250VAC~ 3A, 30VDC~ 3A, 1a Max. 12VDC~ ±2V 20mA Max. 13VDC~ ±3V 20mA DC4-20mA or DC0-20mA (load resistance max. 500Ω)			
Option output	Alarm output Trans. output Com. output	AL1, AL2: 250VAC 3A~, 30VDC 3A~ 1a DC4-20mA (load resistance max. 500Ω, output accuracy: ±0.3%F.S.) RS485 communication output (Modbus RTU method)			
Control method		ON/OFF control, P, PI, PD, PID control			
Hysteresis		1 to 100°C/°F (0.1 to 50.0°C/°F) variable			
Proportional band(P)		0.1 to 999.9°C/°F			
Integral time(I)		0 to 9999 sec			
Derivative time(D)		0 to 9999 sec			
Control period(T)		0.5 to 120.0 sec			
Manual reset		0.0 to 100.0%			
Sampling period		50ms			
Dielectric strength		3,000VAC 50/60Hz for 1 min (between primary circuit and secondary circuit)			
Vibration		0.75mm amplitude at frequency 5 to 55Hz (for 1 min) in each X, Y, Z direction for 2 hours			
Relay life cycle	Mechanical Electrical	OUT, AL1/2: min 5,000,000 operations OUT, AL1/2: min 200,000 (250VAC 3A resistance load)			
Insulation resistance		Min. 100MΩ (at 500VDC megger)			
Noise resistance		Square shaped noise by noise simulator (pulse width 1μs) ±2kV R-phase, S-phase			
Memory retention		Approx. 10 years (non-volatile semiconductor memory type)			
Environment	Ambient temp. Ambient humi.	-10 to 50°C, storage: -20 to 60°C 35 to 85%RH, storage: 35 to 85%RH			
Protection structure		IP50 (front panel, IEC standards)			
Insulation type		Double insulation (mark: ■ dielectric strength between primary circuit and secondary circuit: 3kV)			
Approval		CE, RoHS, US Mark			
Weight ^{※3}		Approx. 146.1g (approx. 88.7g)	Approx. 233g (approx. 143g)	Approx. 214g (approx. 133g)	Approx. 290g (approx. 206g)

※1: When using the unit at low temperature (below 0°C), display cycle is slow.

Control output operates normally.

※2: ● At room temperature (23°C±5°C)

• TC R(PR), S(PR), below 200°C: (PV ±0.5% or ±3°C, select the higher one) ±1-digit

• over 200°C: (PV ±0.5% or ±2°C, select the higher one) ±1-digit

• TC L(IC), RTD Cu50Ω: (PV ±0.5% or ±2°C, select the higher one) ±1-digit

● Out of room temperature range

• TC R(PR), S(PR): (PV ±1.0% or ±5°C, select the higher one) ±1-digit

• TC L(IC), RTD Cu50Ω: (PV ±0.5% or ±3°C, select the higher one) ±1-digit

※3: The weight includes packaging. The weight in parenthesis is for unit only.


※Environment resistance is rated at no freezing or condensation.

Unit Description


- Measured value (PV) component:**
RUN mode: Displays current measured value (PV).
SETTING mode: Displays parameters.
- Temperature unit(°C/°F) indicator:**
Displays the set temperature unit as temperature unit [Unit: °C] of parameter 2 group.
- Setting value (SV) display component:**
RUN mode: Displays setting value(SV).
SETTING mode: Displays setting value of parameter.
- Auto-tuning indicator:**
Flashes during auto-tuning every 1 sec.
- Control output (OUT1) indicator:** Turns ON while control output is ON.
※ Turns ON when MV is over 3.0% at cycle/phase control of SSR drive output method.
- Alarm output (AL1, AL2) indicator:**
Turns ON when the corresponding alarm output turns ON.
- MODE key:** Enters parameter group, returns to RUN mode, moves parameters, and saves the setting value.
- Setting value adjustment key:** Enters SV setting mode and move digits.
- Digital input key:** Press the [Up] + [Down] keys for 3 sec to execute the digital input key functions which is set at digital input key [d1 ~ d4] of parameter 2 group (RUN/STOP, clear alarm output, auto-tuning).
- PC loader port:** It is for serial communication to set parameter and monitoring by DAQMaster installed in PC. Use this for connection EXT-US (converter cable, sold separately) + SCM-US (USB/Serial converter, sold separately).

Installation

TX4S (48×48mm) series

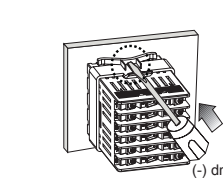

Other series

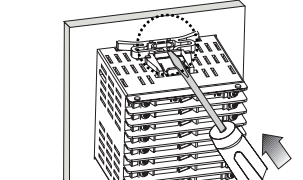

※Insert the unit into a panel, fasten the bracket by pushing with tools with a (-) driver.

Comprehensive Device Management Program[DAQMaster]

DAQMaster is a comprehensive device management software for setting parameters and monitoring processes. DAQMaster can be downloaded from our web site at www.autonics.com.


Item	Minimum specifications
System	IBM PC compatible computer with Pentium III or above
Operations	Windows 98/NT/XP/Vista/7/8/10
Memory	256MB+
Hard disk	1GB+ of available hard disk space
VGA	Resolution: 1024×768 or higher
Others	RS232C serial port (9-pin), USB port

Connections

※Shaded terminals is standard model.

TX4S Series

OUT
SSR
12VDC±2V 20mA Max.
Current
DC0-4-20mA
Load 500ΩMax.
Relay
250VAC 3A 1a
30VDC 3A 1a
RESISTIVE LOAD

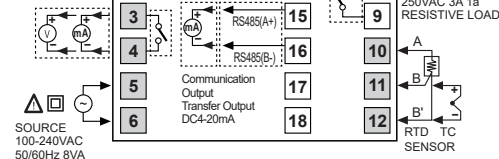


※Use terminals of size specified below.

	<Round>	<Forked>
a	Min. 3.0mm	Min. 3.0mm
b	Max. 5.8mm	Max. 5.8mm


TX4M Series

OUT
Current
DC4-20mA
Load 500ΩMax.
OUT
SSR
13VDC±3V
20mA Max.
OUT
Relay
250VAC 3A 1a
30VDC 3A 1a
RESISTIVE LOAD

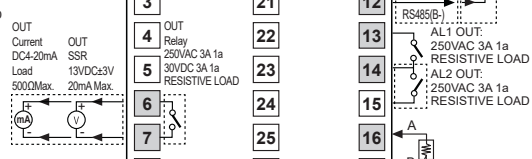


TX4H, L Series

OUT
Current
DC4-20mA
Load 500ΩMax.
OUT
SSR
13VDC±3V
20mA Max.
OUT
Relay
250VAC 3A 1a
30VDC 3A 1a
RESISTIVE LOAD

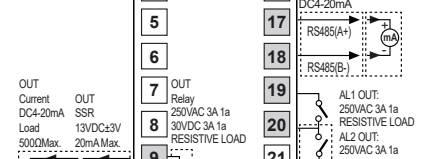


Dimensions


TX4S

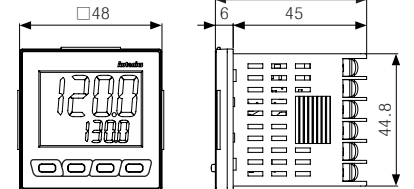


TX4M

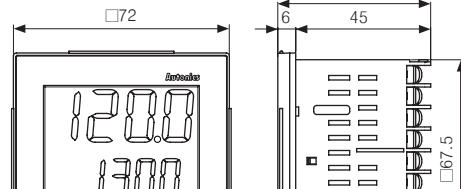

TX4H

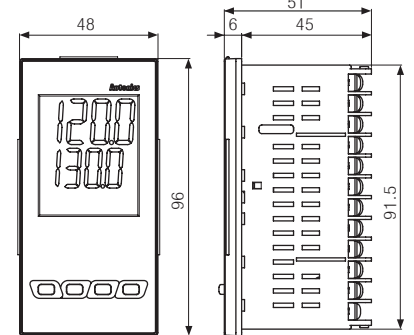


TX4L

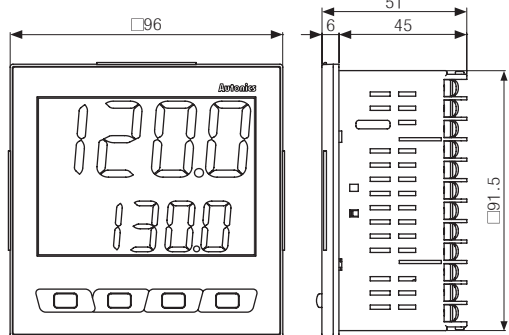


Terminal cover (sold separately)


• RSA-COVER(48×48mm)

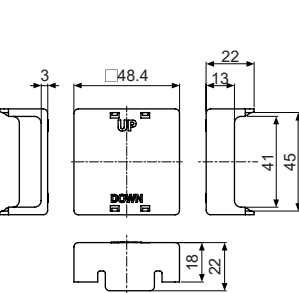


• RMA-COVER(72×72mm)

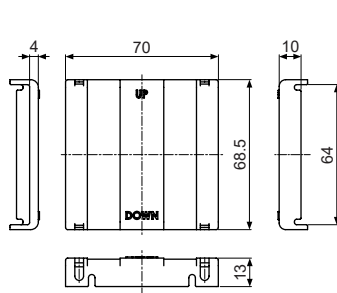


• RHA-COVER(48×96mm)

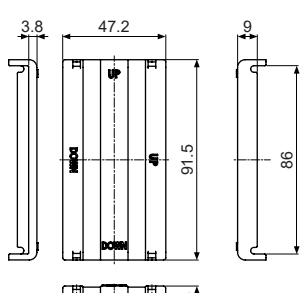

• RLA-COVER(96×96mm)

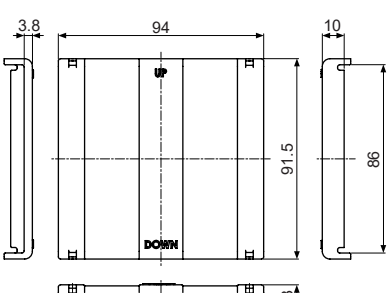

Panel cut-out

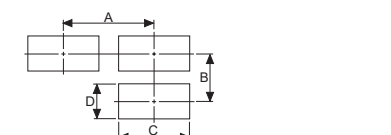


(unit: mm)

Model\Size	A	B	C	D
TX4S	Min. 65	Min. 65	45 ^{+0.6} ₀	45 ^{+0.6} ₀
TX4M	Min. 90	Min. 90	68 ^{+0.7} ₀	68 ^{+0.7} ₀
TX4H	Min. 115	Min. 65	45 ^{+0.6} ₀	92 ^{+0.8} ₀
TX4L	Min. 115	Min. 115	92 ^{+0.8} ₀	92 ^{+0.8} ₀

SV Setting

※To change set temperature from 210°C to 250°C

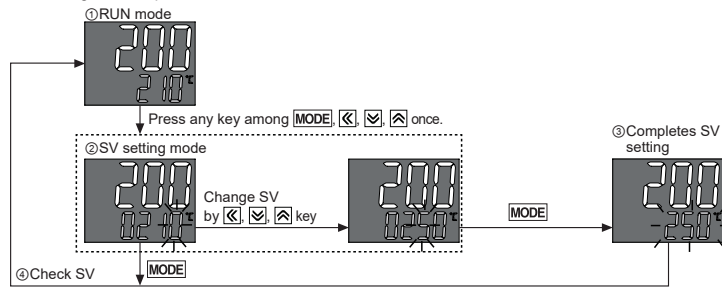

※If there is no key input for 3 sec while setting SV, the new setting is applied and the unit will return to RUN mode.

Factory Default

SV setting

Parameter	Factory default
-	0


Parameter 1 group

Parameter	Factory default
RL1	1250
RL2	OFF
P	10.0
i	240
d	49
RES	500
HYS	2

Parameter 2 group


Parameter	Factory default	Parameter	Factory default
IN-E	K (CA)	AL1	1
UNIT	°C	AL2	0
IN-b	0	AL3	2
MAVF	0.1	F5-L	-50
L-SV	-50	F5-H	1200
H-SV	1200	AdRS	1
o-F	HEAT	bPS	96
C-M	PI	PR	Y
oU	CURR	S	P
SSRM	SEN	RS	W
oMR	4-20	CoM	W
t	200 (Relay)	d1-K	5
AL-1	AM1A	ER	W
AL-2	AM2A	L	oC
		oFF	

Parameter Groups

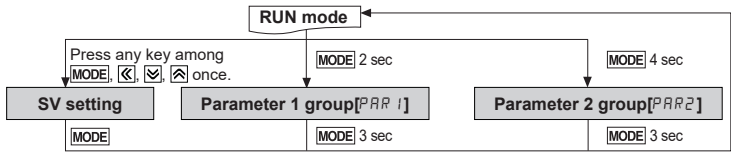


- Order of parameter setup: **Parameter 2 group** → **Parameter 1 group** → **SV setting**
- All parameters are related one another. Set the parameters as above order.
- If there is no key input for 30 sec while setting parameters, the new settings are ignored, and the unit will return to RUN mode with previous settings.
- When returning to RUN mode by holding the [MODE] key for over 3 sec, press the [MODE] key within 1 sec to re-enter the first parameter of previous parameter group.
- Hold the [F] + [F] + [F] keys for 5 sec in RUN mode, to enter re-set parameter menu. Select 'YES' and all parameters are reset as factory default.


Parameter 2 group

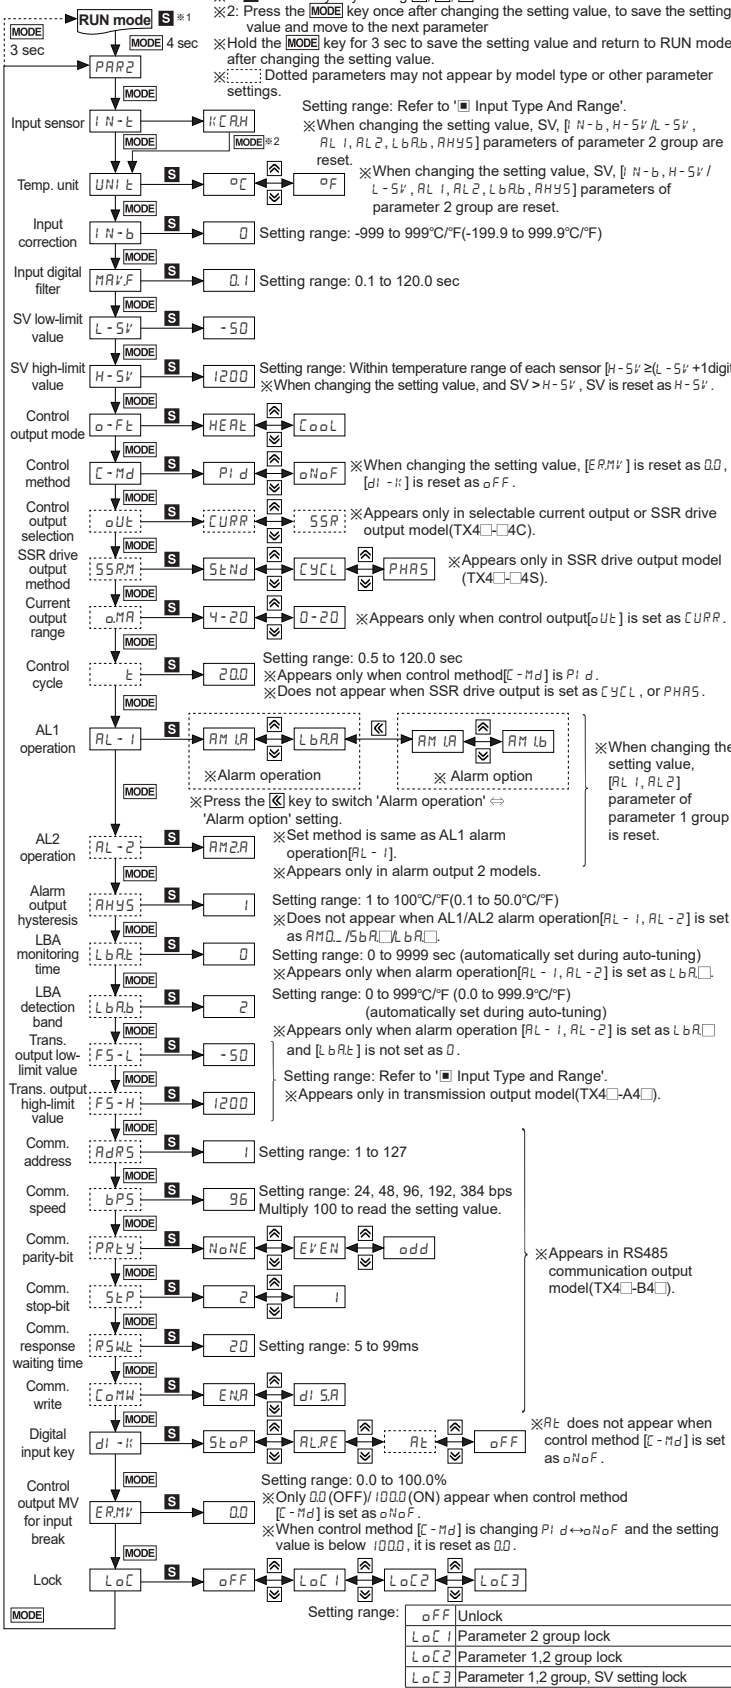

Parameter 1 group

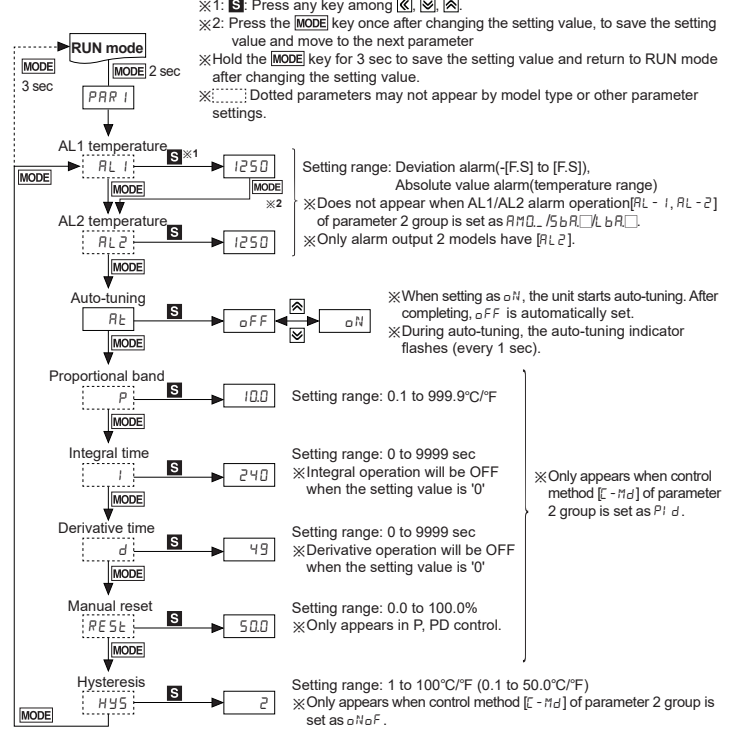

Alarm[AL-1/AL-2]

 

Alarm operation

Mode	Name	Alarm operation	Description
AL0	-	-	No alarm output
AL1	Deviation high-limit alarm	OFF → ON (High-limit deviation: Set as 10°C)	If deviation between PV and SV as high-limit is higher than set value of deviation temperature, the alarm output will be ON.
AL2	Deviation low-limit alarm	ON → OFF (Low-limit deviation: Set as 10°C)	If deviation between PV and SV as low-limit is higher than set value of deviation temperature, the alarm output will be ON.
AL3	Deviation high/low-limit alarm	ON → OFF (High, Low-limit deviation: Set as 10°C)	If deviation between PV and SV as high/low-limit is higher than set value of deviation temperature, the alarm output will be ON.
AL4	Deviation high/low-limit reserve alarm	OFF → ON (High, Low-limit deviation: Set as 10°C)	If deviation between PV and SV as high/low-limit is higher than set value of deviation temperature, the alarm output will be OFF.
AL5	Absolute value high limit alarm	OFF → ON (Alarm absolute-value: Set as 90°C)	If PV is higher than the absolute value, the output will be ON.
AL6	Absolute value low limit alarm	ON → OFF (Alarm absolute-value: Set as 110°C)	If PV is lower than the absolute value, the output will be ON.
SbR	Sensor break alarm	-	It will be ON when it detects sensor disconnection.
LbR	Loop break alarm	-	It will be ON when it detects loop break.

※ H: Alarm output hysteresis [RHYS]

Alarm option

Option	Name	Description
AL0A	Standard alarm	If it is an alarm condition, alarm output is ON. If it is a clear alarm condition, alarm output is OFF.
AL0b	Alarm latch	If it is an alarm condition, alarm output is ON and maintains ON status. (Alarm output HOLD)
AL0C	Standby sequence 1	First alarm condition is ignored and from second alarm condition, standard alarm operates. When power is supplied and it is an alarm condition, this first alarm condition is ignored and from the second alarm condition, standard alarm operates.
AL0d	Alarm latch and standby sequence 1	If it is an alarm condition, it operates both alarm latch and standby sequence. When power is supplied and it is an alarm condition, this first alarm condition is ignored and from the second alarm condition, alarm latch operates.
AL0E	Standby sequence 2	First alarm condition is ignored and from second alarm condition, standard alarm operates. When re-applied standby sequence and if it is alarm condition, alarm output does not turn ON. After clearing alarm condition, standard alarm operates.
AL0F	Alarm latch and standby sequence 2	Basic operation is same as alarm latch and standby sequence 1. It operates not only by power ON/OFF, but also alarm setting value, or alarm option changing. When re-applied standby sequence and if it is alarm condition, alarm output does not turn ON. After clearing alarm condition, alarm latch operates.

※ Condition of re-applied standby sequence for standby sequence 1, alarm latch and standby sequence 1: Power ON
Condition of re-applied standby sequence for standby sequence 2, alarm latch and standby sequence 2: Power ON, changing set temperature, alarm temperature [AL-1, AL-2] or alarm operation [AL-1, AL-2], switching STOP mode to RUN mode.

Sensor break alarm

The function that alarm output will be ON when sensor is not connected or when sensor's disconnection is detected during temperature controlling. You can check whether the sensor is connected with buzzer or other units using alarm output contact. It is selectable between standard alarm [SbR] or alarm latch [LbR].

Functions

Input correction[N-b]


Controller itself does not have errors but there may be error by external input temperature sensor. This function is for correcting this error.
Ex) If actual temperature is 80°C but controller displays 78°C, set input correction value [N-b] as '2' and controller displays 80°C.
※ As the result of input correction, if current temperature value (PV) is over each temperature range of input sensor, it displays HHHH or LLLL.

Input digital filter[TRF]


If current temperature (PV) is fluctuating repeatedly by rapid change of input signal, it reflects to MV and stable control is impossible. Therefore, digital filter function stabilizes current temperature value.
For example, set input digital filter value as 0.4 sec, and it applies digital filter to input values during 0.4 sec and displays these values. Current temperature may be different by actual input value.

SSR drive output method (SSRP function)[SSRM]

- SSRP function is selectable one of standard ON/OFF control, cycle control, phase control by utilizing standard SSR drive output.
- This function parameter appears only in SSR drive output model (TX4□□4S).
- Realizing high accuracy and cost effective temperature control with both current output (4-20mA) and linear output(cycle control and phase control)
- Select one of standard ON/OFF control [SSRM], cycle control [CYCL], phase control [PHAS] at SSRM parameter of parameter 2 group. For cycle control, connect a zero cross turn-on SSR or random turn-on SSR. For phase control, connect random turn-on SSR.

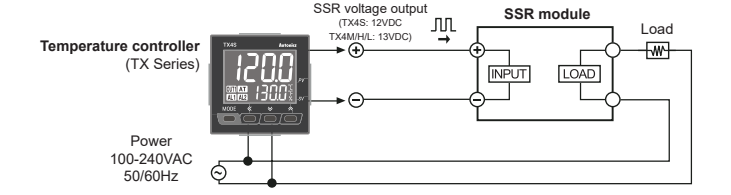

※ When selecting cycle or phase control mode, the power supply for a load and a temperature controller must be the same.
※ Control cycle[] is able to set only when control method[] of parameter group 2 is set as P1d and SSR drive output method [SSRM] is set as SSRM.
※ In case of selectable current output or SSR drive output model (TX4□□4C), this parameter does not appear. Standard ON/OFF control by SSR is only available.

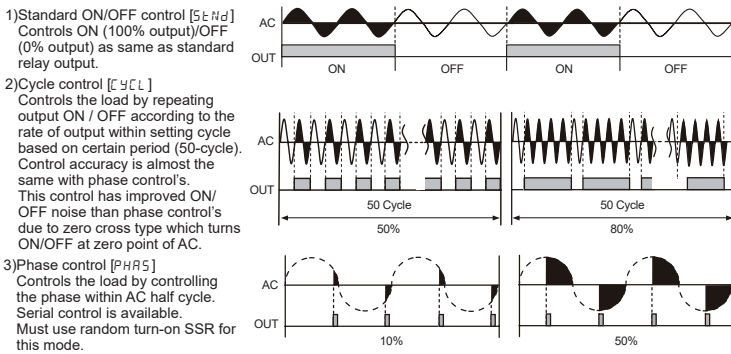

Current output range[CURP]


In case of selectable current output or SSR drive output model (TX4□□4C), when control output [OUT] of parameter 2 group is set as CURP, you can select high/low-limit range, 4-20mA [4-20] or 0-20mA [0-20] of current output.

Hysteresis[RHYS]

Set interval between ON and OFF of control output for ON/OFF control.
• If hysteresis is too narrow, hunting (oscillation, chattering) could occur due to external noise.
• In case of ON / OFF control mode, even if PV reaches stable status, there still occurs hunting. It could be due to hysteresis [RHYS] setting value, load's response characteristics or sensor's location. In order to reduce hunting to a minimum, it is required to take into following factors consideration when designing temp. controlling: proper Hysteresis [RHYS], heater's capacity, thermal characteristics, sensor's response and location.

Loop break alarm (LBA)

It checks control loop and outputs alarm by temperature change of the subject. For heating control (cooling control), when control output MV is 100% (0% for cooling control) and PV is not increased over than LBA detection band [LbRb] during LBA monitoring time [LbRt], loop break alarm (LBA) turns ON after LBA monitoring time. If PV is not decreased below than LBA detection band [LbRb] during LBA monitoring time [LbRt], alarm output turns ON.

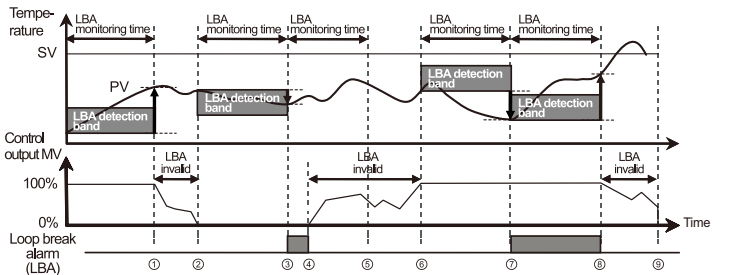

Start control to	Description
①	When control output MV is 100%, PV is increased over than LBA detection band [LbRb] during LBA monitoring time [LbRt].
① to ②	The status of changing control output MV (LBA monitoring time is reset.)
② to ③	When control output MV is 0% and PV is not decreased below than LBA detection band [LbRb] during LBA monitoring time [LbRt], loop break alarm (LBA) turns ON after LBA monitoring time.
③ to ④	Control output MV is 0% and loop break alarm (LBA) turns and maintains ON.
④ to ⑥	The status of changing control output MV (LBA monitoring time is reset.)
⑥ to ⑦	When control output MV is 100% and PV is not increased over than LBA detection band [LbRb] during LBA monitoring time [LbRt], loop break alarm (LBA) turns ON after LBA monitoring time.
⑦ to ⑧	When control output MV is 100% and PV is increased over than LBA detection band [LbRb] during LBA monitoring time [LbRt], loop break alarm (LBA) turns OFF after LBA monitoring time.
⑧ to ⑨	The status of changing control output MV (LBA monitoring time is reset.)

※ When executing auto-tuning, LBA detection band [LbRb] and LBA monitoring time are automatically set based on auto tuning value. When alarm operation mode [AL-1, AL-2] is set as loop break alarm (LBA) [LbR], LBA detection band [LbRb] and LBA monitoring time [LbRt] parameter is displayed.

Digital input key[] + [] 3 sec [d1 - k]

Parameter	Operation
OFF	oFF
RUN/STOP	5t oP
Clear alarm	ALRE
Auto-tuning	Rt

Control output MV for input break[ERMV]

When input sensor is break, set control output MV.
When control method [] of parameter 2 group is set as oNoF, set control output MV as 00 (OFF) or 1000 (ON). When control method [] is set as P1d, setting range for control output MV is 00 to 1000.


Communication Setting

It is for parameter setting and monitoring via external devices (PC, PLC, etc.).
Applicable for models with RS485 communication output through option output (TX4□□B4□).
Please refer to 'Ordering Information'.

Interface

Comm. protocol	Modbus RTU	Comm. speed	4800, 9600 (default), 19200, 38400, 115200 bps
Connection type	RS485	Response waiting time	5 to 99ms (default: 20ms)
Application standard	EIA RS485 Compliance with	Start bit	1-bit (fixed)
Max. connection	31 units (address: 01 to 127)	Data bit	8-bit (fixed)
Synchronous method	Asynchronous	Parity bit	None (default), Odd, Even
Comm. method	Two-wire half duplex	Stop bit	1-bit, 2-bit (default)
Comm. effective range	Max. 800m		

Application of system organization

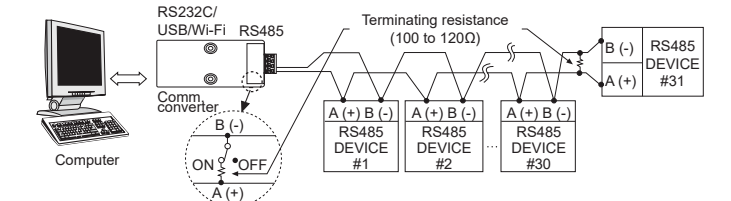

※ It is recommended to use Autonics communication converter: SCM-WF48 (Wi-Fi to RS485-USB wireless communication converter, sold separately), SCM-US481 (USB to RS485 converter, sold separately), SCM-381 (RS232C to RS485 converter, sold separately), SCM-US (USB to Serial converter, sold separately). Please use twisted pair wire, which is suitable for RS485 communication, for SCM-WF48, SCM-US481 and SCM-381.

Manual

For the detail information and instructions of communication setting and Modbus mapping table, please refer to user manual for communication, and be sure to follow cautions in the technical descriptions (catalog, homepage).
Visit our homepage (www.autonics.com) to download manuals.

Error

Display	Description	Troubleshooting
oPEN	Flashes when input sensor is disconnected or sensor is not connected.	Check input sensor status.
HHHH	Flashes when measured value is higher than input range.	When input is within the rated input range, this display disappears.
LLLL	Flashes when measured value is lower than input range.	

Cautions during Use

- Follow instructions in 'Cautions during Use'. Otherwise, it may cause unexpected accidents.
- Check the polarity of the terminals before wiring the temperature sensor.
- For RTD temperature sensor, wire it as 3-wire type, using cables in same thickness and length. For thermocouple (CT) temperature sensor, use the designated compensation wire for extending wire.
- Keep away from high voltage lines or power lines to prevent inductive noise.
- In case installing power line and input signal line closely, use line filter or varistor at power line and shielded wire at input signal line.
- Do not use near the equipment which generates strong magnetic force or high frequency noise.
- Do not apply excessive power when connecting or disconnecting the connectors of the product.
- Install a power switch or circuit breaker in the easily accessible place for supplying or disconnecting the power.
- Do not use the unit for other purpose (e.g. voltmeter, ammeter), but temperature controller.
- When changing the input sensor, turn off the power first before changing.
- After changing the input sensor, modify the value of the corresponding parameter.
- Do not overlapping communication line and power line.
- Use twisted pair wire for communication line and connect ferrite bead at each end of line to reduce the effect of external noise.
- Make a required space around the unit for radiation of heat.
- For accurate temperature measurement, warm up the unit over 20 min after turning on the power.
- Make sure that power supply voltage reaches to the rated voltage within 2 sec after supplying power.
- Do not wire to terminals which are not used.
- This unit may be used in the following environments.
 - ① Indoors (in the environment condition rated in 'Specifications')
 - ② Pollution degree 2
 - ③ Altitude max. 2,000m
 - ④ Installation category II

Major Products

- Photoelectric Sensors
- Fiber Optic Sensors
- Door Sensors
- Door Side Sensors
- Area Sensors
- Proximity Sensors
- Pressure Sensors
- Rotary Encoders
- Connector/Sockets
- Switching Mode Power Supplies
- Control Switches/Lamps/Buzzers
- I/O Terminal Blocks & Cables
- Stepper Motors/Drivers/Motion Controllers
- Graphic/Logic Panels
- Field Network Devices
- Laser Marking System (Fiber, Co., Nd:Yag)
- Laser Welding/Cutting System
- Temperature Controllers
- Temperature/Humidity Transducers
- SSRP/Power Controllers
- Counters
- Timers
- Panel Meters
- Tachometer/Pulse(Rate)/Meters
- Display Units
- Sensor Controllers

Autonics Corporation
http://www.autonics.com

■ HEADQUARTERS:
18, Bongsong-ro 513beon-gil, Haendae-gu, Busan,
South Korea, 48002
TEL: 82-51-519-3232
■ E-mail: sales@autonics.com