

LE•MEGA

LIFE & ALOUD

M5P MUSIC SYSTEM WITH CD PLAYER



Owner's manual


Safety

Safety Instructions

Please store this instruction manual for future reference.

- **WARNING:** To reduce the risk of fire or electric shock, do not expose this apparatus to rain or moisture. The apparatus shall not be exposed to dripping or splashing and that objects filled with liquids, such as vases, shall not be placed on apparatus.
- **WARNING:** The direct plug-in adapter is used as disconnect device, the disconnect device shall remain readily operable.



- This lightning flash with arrowhead symbol within an equilateral triangle is intended to alert the user to the presence of non-insulated "dangerous voltage" within the product's enclosure that may be of sufficient magnitude to constitute a risk of electric shock.
- **Warning:** To reduce the risk of electric shock, do not remove cover (or back) as there are no user-serviceable parts inside. Refer servicing to qualified personnel.
- The exclamation point within an equilateral triangle is intended to alert the user to the presence of important operating and maintenance instructions in the literature accompanying the appliance.
-  **Correct Disposal of this product.** This marking indicates that this product should not be disposed with other household wastes throughout the EU. To prevent possible harm to the environment or human health from uncontrolled waste disposal, recycle it responsibly to promote the sustainable reuse of material resources. To return your used device, please use the return and collection systems or contact the retailer where the product was purchased. They can take this product for environmental safe recycling.
- No naked flame sources, such as lighted candles, should not be placed on the apparatus.
- Do not use this product near water or moisture.
- Clean only with a dry cloth.
- Unplug this product from the wall outlet before cleaning.
- Place the unit on a solid surface.

- Do not put it in a closed bookcase or a cabinet that may keep air from flowing through its ventilation openings.
- Do not install near any heat sources, such as radiators, heat registers, stoves or other appliances that produce heat.
- Protect the power cord from being walked on or pinched, particularly at plugs and the point where they exit from the product.
- Servicing is required when the product has been damaged. Do not attempt to service this product yourself. Opening or removing covers may expose you to dangerous voltages or other hazards. Please contact the manufacturer to be referred to an authorized service center near you.
- To prevent risk of fire or electric shock, avoid over loading wall outlets, extension cords, or integral convenience receptacles.
- Do not let objects or liquids enter the product.
- Use proper power sources. Plug the product into a proper power source, As described in the operating instructions or as marked on the product.
- Changing sources while a CD is playing causes the CD to stop playback. Playback will resume when the source is set to CD again.
- The sound quality of MP3, CD-R/CD-RW, and even commercially recorded discs can vary greatly. The same holds true for the sound quality of portable MP3 players.
- Do NOT use any CD lens cleaning discs since these are not designed for slot-load machines.
- Avoid bending the disc when loading or ejecting.
- Do not move the unit while a disc is playing and do not ship the unit with a CD inside.
- Do not try to insert a disc in the slot if one is already inside the unit.
- Do not insert specially shaped discs or 3" CD "single" discs.

You may experience a delay in playback when inserting MP3 or WMA discs while the player reads the directory. Paper labels stuck to CD-R/CD-RWs may become loose and possibly damage the player.

 
- CDs with severe scratches may not play properly.
- Do not insert anything except a CD inside the loading slot in the rare event you experience an error, unplug the power cord for 60 seconds and then plug it back in firmly.

Carton contents

After you unpack the box, you will find the following items:

- 1 M5P unit
- 1 power cord
- 1 owner's manual
- 1 Remote Control

Main controls

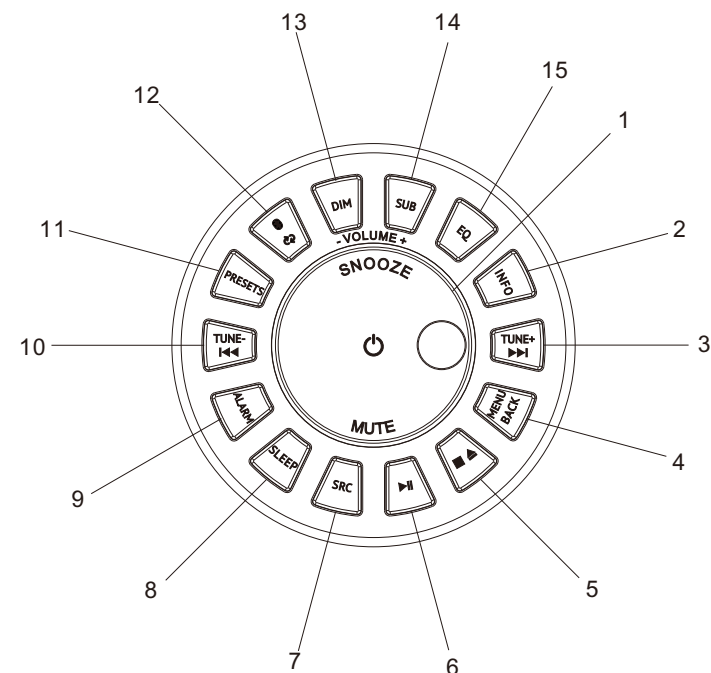

1. KNOB: SELECT/ VOLUME/MUTE/SNOOZE:

- SELECT:** Turn to scroll through a menu or station list. The chosen option is highlighted, Press to the button to select.
- VOLUME:** Turn to the button to adjust the volume up or down when playback.
- MUTE:** Press to the button to mute the music when playing.
- SNOOZE:** Press the button to snooze a set time when alarm sounding.
- POWER ON | OFF the unit:** Long press this button to power on/off the unit.

2. INFO: View more information about the station or track playing. Press again to cycle through further information screens then return to the normal Now playing screen.

3. ►► / [TUNE+]: Next: Press to select the next track under FM/DAB/ Bluetooth / CD mode; Press and hold the Tune+ button 2 seconds to auto scan the stations under the FM mode.

4. BACK/MENU:

- BACK:** press the BACK to return to the previous screen.
- MENU:** press the MENU to show the MENU for the current mode. Press again to show now playing screen.

5. ■ ▲ : In CD mode, Press to stop CD track. Press again for CD ejection.

6. ►|| : Press to select Play/Pause under internet radio, Spotify, My music , Bluetooth and CD mode. In FM mode, press to do auto scan the stations.

7. SOURCE: Press to Source to select different modes internet radio, Spotify, Music Player, DAB, FM, Bluetooth, CD and AUX.

8. SLEEP: When playing, press Sleep, M5P will back to set sleep time. When playing, opens the sleep menu to set the time interval before the unit is set to Standby mode. When alarm is sounding, allows you to set the snooze interval.

9. ALARM: Press to Alarm, the screen will display Alarm 1 and Alarm 2; then Rotate and press the SELECT button to select alarm 1 or alarm 2 to set up.

10. ◀◀ / [TUNE-]: Previous: Press to select the previous track under FM/DAB / Bluetooth/CD mode; Press and hold the Tune- button 2 seconds to auto-scan the stations under the FM mode.

11. PRESET

Saving Presets--Internet Radio & Podcast, FM, DAB[optional]

To save preset, press and hold the Preset button for 2 seconds, use the navigation control ◀◀ / ▶▶ or rotate the knob to select and push Select knob to save.

Recall Presets--Internet Radio & Podcast, FM, DAB[optional]

Press the Preset button and use the navigation control ◀◀ / ▶▶ or rotate the knob to tune into the station.

12. BT PAIR: In BT mode, Press this button for pairing and unpaired.

 
13. DIM: Press Dim to adjust the brightness to High/Mid/Low in turn.

14. SUB: Press to turn on Subwoofer on or Off.

15. EQ: Press this button to access Flat/Rockdirectly.

Connectors


As shown below has connectors from left to right)for the followings:

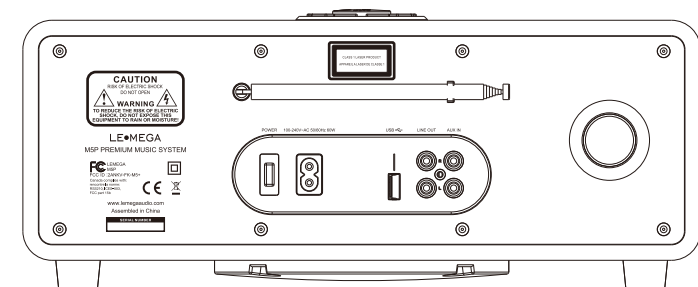

- Power switch
- Power input (100-240V)
- USB socket for USB stick with MP3 music playback (not for charging).
- Line out (to connect to an external amplifier or active speaker)
- Aux in (to connect external MP3 music source from the iPod, or Pad other devices
- Headphones out on front panel for the headphone playback.

Remote control

 Most of the functions of the LEMEGA M5P can be controlled using either the product or the remote control.

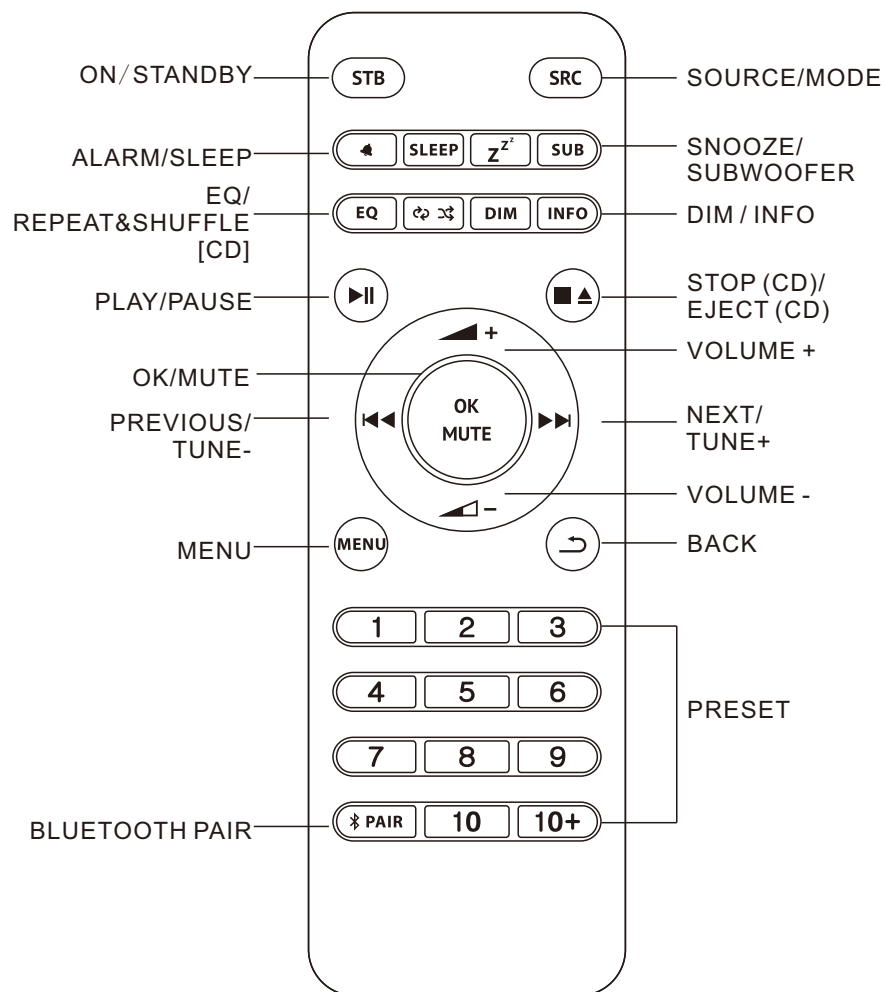

First steps with M5P

Insert the power cord on the backside.

Extend the telescopic antenna in its full length for better FM/DAB reception.

Press the Power Knob once to begin start-up process

MENU / BACK BUTTON

Pressing the button will take you to the Source Menu for the particular mode of operation you are in. For example, pressing MENU button when in DAB Mode will take you to the DAB MODE MENU. Pressing the button for a second time will return you to the 'playing screen' that you just left.

NAVIGATING THE MENU

Most of the functions of M5P can be accessed in 2 ways:

- via MENU button
- using the optional remote control (shortcuts)

MENU button displays different contents, depending on the current selected mode.

Follow instructions on the display, and

- Use Knob to select and confirm
- Back to step back in the menu tree
- Press MENU to exit menu
- Press SRC [Source] to select MODE

During playback, press INFO button to display current mode additional information.

PRESETS

PRESETS button is used to conveniently store and recall your favorites. It works

- in FM mode
- in DAB mode
- In INTERNET RADIO mode
- in SPOTIFY mode

NOTE: Podcasts can be stored when in INTERNET RADIO presets list.

In order to save a preset:

- keep PRESETS button pressed
- select preset position on the list with the knob
- press knob to confirm

To recall presets:

- Press PRESETS button
- select preset with the knob
- press knob to confirm

OKTIV

You can control M5P with your smartphone using **OKTIV**, available for Apple and Google devices.

NOTE: your smart phone and M5P must run under the same Wi-Fi network to work correctly.

Internet Setup

The first time you use M5P, you will be asked whether you would like to run the SETUP WIZARD.

The 'WIZARD*' will run through a series of questions, and is the simplest way to get internet radio up and running on your device.

You can run the SETUP WIZARD again at any time, it can be found under the NETWORK heading in the SYSTEM SETTINGS MENU.

To set up your radio for online operation using the INTERNET WIZARD, follow these steps:

Press the Knob, and start the SETUP WIZARD procedure.

 
USING THE INTERNET RADIO SETUP WIZARD

Press the SELECT knob, and start the SETUP WIZARD procedure.

- 1 Choose and select your preferred hour format (12 or 24 hour).
- 2 Choose and select UPDATE FROM NETWORK.
- 3 Scroll and select your local time zone from the menu.
- 4 Choose and select your preferred daylight savings status.

5 Scroll and select your Wlan region.

6 Scroll and select your NETWORK. In some cases your radio may find more than one. Simply choose the one you want to use.

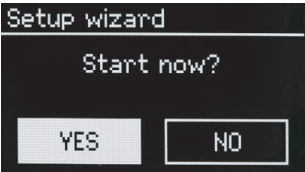

7 If your wireless network is not password protected, M5P will automatically connect, and the following screen will be displayed:

SSID	Key:	Network settings
AirportExtreme_Soaks		Please wait Connecting.
AndroidAP2337	0123456789.-@, [BKSP]	
[WPS]Another IR2.5 so...	abcdefghijklmnopqrstuvwxyz [OK]	
BBC RADIOVIS	DEFGHIJKLMNOPQR [CANCEL]	
[WPS]DLNA_TEST_only		

Available networks list Password Connection attempt

8 If you do use password protection, enter your network password using the knob to scroll through the alphanumeric characters, pressing SELECT KNOB to enter each number or letter. When you have correctly entered your entire password, select OK.

Select BKSP (back space) if you have entered an incorrect character.

M5P will save the password into its memory. There will be no need to re-enter the password again.

Additional Functions

EQUALIZER

Press MENU > System Setting > Equalizer and pick your favourite EQ setting. M5P can also store Bass/Treble combination. Select "MY EQ Settings" and adjust settings at your preference.

ALARM

M5P can store 2 independent alarms. Press MENU Button > Main Menu > Alarms and follow

Sources [mode]

M5P can play different sources:

FM, DAB, CD, AUX, BLUETOOTH, INTERNET RADIO, SPOTIFY, PODCASTS

Press SRC [SOURCE] to display sources list and press KNOB to select.

FM

When listening to FM radio, M5P displays the station name and other RDS/BDS informations when available.

CHANGE STATION

Press and hold |◀◀ or ▶▶| to automatically tune to the previous or next available FM station. Short Press |◀◀ or ▶▶| to select the Previous or next stations.

SCAN SETTING

You can change the scan settings to only stop at stations with a strong signal by selecting Menu/Scan setting/Strong stations only.

PRESETS

Keep pressed PRESETS button to access presets list and save your favourite stations.

To recall a preset, press PRESETS button and select your favourite station.

MONO

As an FM signal becomes weaker, the level of hiss can increase.

To reduce it, select Menu/Mono

DAB [Optional]

When listening to DAB radio, M5P displays the station name and other DLS informations. The first time you select DAB Radio, M5P performs an auto-scan of available stations.

CHANGE STATION

Press **◀◀** or **▶▶** to automatically tune to the next available DAB station. Scroll dial can be used to list all available stations. Highlight the station you wish to listen and press the Scroll dial to confirm.

PRESETS

Keep pressed PRESETS button to access presets list and save your favourite stations.

To recall a preset, press PRESETS button and select your favourite station

STATION ORDER

The DAB station list can be ordered by Alphanumeric, Ensemble or Valid. To change station order, select Menu/Station order and make your selection.

STATION SCAN

We recommend to perform a full scan from time to time to discover new stations. Press the MENU button and select Scan to perform the scan

Internet Radio

M5P can play thousands of Internet Radio stations and Podcasts [Internet connection is required]

Press MENU button and select Station List to view all stations divided by location, Genre, etc

Presets can be saved same as for FM and DAB stations.

CD

M5P can play CDs. To insert a CD, gently push it into the CD slot. Once loaded, it will play automatically. Track number and time is shown on the display, together with CD text, if available. Use buttons on M5P or on the optional remote to perform basic functions like pause, next track, stop, etc. Press eject button to unload the CD. Keep pressed eject button to force eject process.

Bluetooth

M5P can connect to Bluetooth devices and stream in CD quality. As soon as you switch to Bluetooth, M5P attempts to connect to the last device it was paired with. If it is the first time, M5P displays "Bluetooth discoverable": check your Bluetooth device setting page and select "M5P" in the available devices list.

To connect a new device, press MENU button > Connect Device. Use buttons on M5P or on the optional remote to perform basic functions like pause, next track, stop, etc. Please refer to your Bluetooth device to start playing music on M5P.

Connect your Bluetooth headset to the M5P

With the M5P you have the possibility to connect a Bluetooth headset via Bluetooth. Please switch your headphones to the pairing mode.

1. Press the menu button in any mode, **except** Bluetooth mode and go to **Bluetooth headphone**.
2. Choose "Bluetooth On"
3. The Bluetooth symbol is flashing and waiting for pairing
4. After successful pairing, the symbol is not flashing and you can enjoy your music.

Tips: The headphone must have the function "simple pairing" or automatic "handshake"

Line-In / Aux

M5P accepts analogue audio sources, using a mini jack connector. For best performance, we recommend to balance the volume level on your device.

Spotify

Use your phone, tablet or computer as a remote control for Spotify. Go to spotify.com/connect to learn how. The Spotify software is subject to third party license found here: <http://www.spotify.com/connect/third-party-license>

SLEEP

M5P can set a 15-30-45-60 minutes sleep timer. Press SLEEP Button and scroll the SELECT knob to choose the time you want.

USB Playback

Connect a USB memory stick*, select 'Music Player' mode and listen to stored MP3 music files.

FIRMWARE UPDATE

Press MENU > System Settings > Software upgrade and confirm with the SELECT knob.

FACTORY RESET

Press MENU > System Settings > Factory reset and confirm with the SELECT knob.

TROUBLESHOOTING AND ERRORS MESSAGES

Problem	Cause	Solution
FM: HISS DAB:Burbling/Intermittent Cut-Out	Low signal strength	Check/move antenna Move radio Rescan local (high-strength) stations only
DAB: 'No stations available' message	Low signal strength	As above then rescan stations.
Cannot connect to network	Network down	Check that network is working between a computer and the router
	Router restricts access to listed MAC addresses	Obtain the M5P MAC address from Menu > System settings > Network > View settings and add to router list.
	Insufficient Wi-Fi signal strength	Check distance to router; see if a computer can connect to the network in this location
	Unusual network configuration	Setup network manually through Menu > System settings > Network > Manual settings
	Firewall preventing access	Check the following ports are open on the router: UDP and TCP ports 80 and 123; DNS port 53. Windows shares: ports 135 – 139 and 445.
Cannot connect to Internet	Internet connection down	Check that Internet is working for a computer connected to the same network
	Firewall preventing access	Check the following ports are open: UDP and TCP ports 80 and 123; DNS port 53. Some Internet radio stations may require additional ports to be opened.

Cannot play particular Internet radio station	Station not broadcasting, overloaded or insufficient bandwidth. Station broadcasting using unknown codec. Link out of date.	Try other stations; try listening on computer via Internet radio portal website; try later.
---	---	---

Bluetooth Mode: Can't connect to a paired device		Select BT DISCONNECT from the Bluetooth Menu and delete M5P's profile from your Bluetooth device, then re-pair the devices as normal
--	--	--

Bluetooth Mode: Poor audio quality	<ul style="list-style-type: none"> Your Bluetooth device may be out of range Electromagnetic interference 	Move your Bluetooth device closer to M5P Move your Bluetooth device away from other sources of interference such as other Bluetooth devices, wireless routers etc.
------------------------------------	---	---

CD playback does not start	CD format is not compatible	CD format is not compatible
	CD is damaged	Insert a different CD into the CD slot
	CD is dirty	Clean the CD

Message	Description	Example
Failed to connect	Correct key entered, but router rejects request.	MAC filtering enabled on router.
Network error	Problem past router - incorrect data being received from network.	Data obtained from server is unreadable.
Service not available (DAB)	No DAB reception.	
Update failed	Software upgrade failed.	
Network not ready	problem with connection to router.	Router switched off.

TECHNICAL SPECIFICATION:

Model:	M5P Music System with CD player
Type:	CD/ WiFi / Spotify HIFI / Internet radio /DAB/DAB+/FM/AUX/Bluetooth Music System
Speaker:	2 x 2.5" (full range), 1 x 5.25" woofer
Power:	RMS 35W
Power Supply:	100-240V mains supply
Dimension (mm):	350W x 124H x 215D
Weight:	4.8 KG

Specifications are subject to change without notice.

If you have any questions or suggestions, Please share with us.

www.lemegaaudio.com
info@lemegaaudio.com



This device complies with Part 15 of the FCC rules. Operation is subject to the following two conditions: 1) this device may not cause harmful interference, and 2) this device must accept any interference received, including interference that may cause undesired operation.

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

LE•MEGA

LIFE & ALOUD

M5P MUSIC SYSTEM WITH CD PLAYER



Scan me on your
smartphone camera
for more information

If you have any questions or suggestions,
please share with us.

info@lemegaaudio.com
www.lemegaaudio.com