

User & Maintenance Manual

Product: Pop-up and Instant Canopies

Setup Instructions

Choose Location: Select a flat, stable surface free from overhead obstacles.

Unpack & Unfold: Remove the canopy from its carrying bag. With two people, gently pull the frame outward until it is partially expanded.

Attach Canopy Top (if not pre-attached): Drape the fabric over the frame and secure with Velcro or hooks at each corner.

Fully Expand: Pull the frame outward until fully extended. Secure each corner by locking the slider brackets into place.

Adjust Height: Extend the legs to your desired height using the push-button or telescopic system.

Secure in Place: Use stakes or weight bags to anchor each leg, especially in windy conditions.

Usage Tips

Do not leave the canopy unattended in harsh weather.

Always use the guy ropes and weight bags for added stability.

Ideal for temporary use only; not designed for permanent installation.

Maintenance Guidelines

Cleaning: Use mild soap and water. Avoid harsh chemicals or pressure washers. Allow fabric to dry completely before storing.

Storage: Always store in a dry, cool place. Ensure the canopy is completely dry before packing to prevent mold and mildew.

Inspection: Regularly check for loose screws, worn parts, or tears in the fabric.
Replace damaged components promptly.

Safety Precautions

Not intended for use during heavy rain, snow, or strong winds.

Keep clear of power lines and flammable materials.

Ensure all frame locks are secure before use.