

# User & Maintenance Manual

## Product: Pop-up and Instant Canopies

### Setup Instructions

**Choose Location:** Select a flat, stable surface free from overhead obstacles.

**Unpack & Unfold:** Remove the canopy from its carrying bag. With two people, gently pull the frame outward until it is partially expanded.

**Attach Canopy Top** (if not pre-attached): Drape the fabric over the frame and secure with Velcro or hooks at each corner.

**Fully Expand:** Pull the frame outward until fully extended. Secure each corner by locking the slider brackets into place.

**Adjust Height:** Extend the legs to your desired height using the push-button or telescopic system.

**Secure in Place:** Use stakes or weight bags to anchor each leg, especially in windy conditions.

### Usage Tips

Do not leave the canopy unattended in harsh weather.

Always use the guy ropes and weight bags for added stability.

Ideal for temporary use only; not designed for permanent installation.

### Maintenance Guidelines

**Cleaning:** Use mild soap and water. Avoid harsh chemicals or pressure washers. Allow fabric to dry completely before storing.

**Storage:** Always store in a dry, cool place. Ensure the canopy is completely dry before packing to prevent mold and mildew.

**Inspection:** Regularly check for loose screws, worn parts, or tears in the fabric.  
Replace damaged components promptly.

## Safety Precautions

Not intended for use during heavy rain, snow, or strong winds.

Keep clear of power lines and flammable materials.

Ensure all frame locks are secure before use.