

FUNCTION

FN+Esc=`
FN+Shift+Esc=~
FN+1=F1
FN+2=F2
FN+3=F3
FN+4=F4
FN+5=F5
FN+6=F6
FN+7=F7
FN+8=F8
FN+9=F9
FN+0=F10
FN+_- =F11
FN+=+=F12
FN+U=Print Screen

FN+I=Scroll Lock
FN+O=Pause Break
FN+J=Insert
FN+K=home
FN+L=Page Up
FN+M=Delete
FN+, =End
FN+.=Page Down
FN+Q=Home
FN+W=My computer
FN+E=Mail
FN+R=Multimedia player
FN+T=Calculator
FN+Y=Search
FN+A=Previous song

N+S=Next song
FN+D=Play/Pause
FN+F=Play Stop
FN+G=Volume Up
FN+H=Volume Reduce
FN+Backspace=Mute


FN+|= Switches the keyboard
built-in lighting effect
FN+]=Increase the brightness
of the light effect
FN+[=Decrease the brightness
of the light effect
FN+;:=Decrease the speed of
the light effect

FN+”=Increase the speed of the
light effect
FN+R-shift=In three seconds Right
alt, menu and Ctrl switch
to independent direction
keys (power on is normal
by default, press the
three second switch
back function key again)
FN+win=Win key lock/unlock
FN+speace=Reset to the factory
default

www.dieryatech.com



Please feel free to contact us if you
meet any question when using our
products.
customer@dieryatech.com

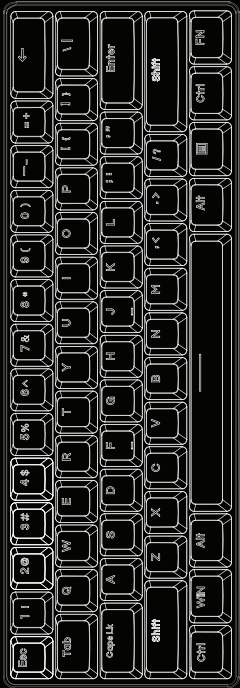

61 SE



MECHANICAL KEYBOARD
MANUAL