



Originale	Sostituto
	Power
	Mute
	Picture / Format
	Sound / Title
	Zoom / Size
	Subtitle / EQ
	Guide / EPG / -/--
	Fav / Marker / PC
	1
	2
	3
	4
	5
	6
	7
	8
	9

Originale	Sostituto
	CHN List
	0
	Return / Back
	Menu
	Up
	Source
	Left
	Enter
	Right
	Down
	Exit
	TV / Radio
	Vol +
	Home
	PR +
	Vol -
	PR -

	Smart / List
	0
	Back / Return
	Menu / Home
	Up
	AV / Input / RDS
	Left
	OK
	Right
	Down
	Exit / Cancel / Clear
	TV/Radio /
	Vol+
	D.Menu / Top
	CH+ / Page+
	Vol-
	CH- / Page-





The image shows a black remote control for a Mandis TV. It features a variety of buttons including a power button, channel selection buttons (TV, DVD, SAT, AUX), volume and channel increment/decrement buttons, a directional pad with an OK button, and a numeric keypad. Playback controls like play, pause, stop, and fast forward are also present. The Mandis logo and website address are printed at the bottom.