

HEINNER

DIGITAL COFFEE MAKER

Model: HCM-D915



- Digital coffee maker
- Capacity: 1.5 L
- Color: Black
- Power: 900 W

www.heinner.com

Thank you for purchasing this product!

I. INTRODUCTION

Before using the appliance, please read carefully this instruction manual and keep it for future reference.

This instruction manual is designed to provide you with all required instructions related to the installation, use and maintenance of the appliance.

In order to operate the unit correctly and safety, please read this instruction manual carefully before installation and usage.

II. CONTENT OF YOUR PACKAGE



- Digital coffee maker
- User manual
- Warranty card


III. SAFETY PRECAUTIONS

When using electrical appliance. Basic safety precautions should always be followed including the following:


1. Read all instructions.
2. Make sure that your outlet voltage corresponds to the voltage stated on the rating label of the coffee maker.
3. To protect against fire, electric shock and injury to persons do not immerse cord, plug, or appliance in water or other liquid.
4. Close supervision is necessary when any appliance is used by or near children.
5. Unplug from outlet when not in use and before cleaning. Allow to cooling before putting on or taking off parts, and before cleaning the appliance.
6. Do not operate any appliance with a damaged cord or plug or after the appliance malfunctions, or has been damaged in any manner. Return appliance to an authorized service facility for examination, repair or adjustment.
7. The use of accessory not recommended by the appliance manufacturer may result in fire, electric shock or injury to persons.
8. Do not use outdoors.
9. Do not let cord hang over edge of table or counter, or touch hot surface.
10. Do not place on or near a hot gas or electric burner, or in a heated oven.
11. Do not use appliance for other than intended use.
12. Do not clean container with cleansers, steel wool pads, or other abrasive material.
13. To disconnect, turn any control to "Off", remove plug from wall outlet. Always hold the plug. But never pull the cord.
14. Scalding may occur if the cover is removed during the brewing cycles. Be careful not to get burned by the steam
15. Some parts of appliance are hot when operated, so do not touch with hand. Use handles or knobs only.
16. Never leave the empty carafe on the warming plate otherwise the carafe is liable to crack.
17. Never use the appliance if the carafe shows any signs of cracks or carafe having a loose or weakened handle. Only use the carafe with this appliance. Use carefully as the carafe is very fragile.
18. This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children unless they are older than 8 and supervised.
19. Keep the appliance and its cord out of reach of children less than 8 years.

20. Children should be supervised to ensure that they do not play with the appliance.
21. Do not set a hot container on a hot or cold surface.
22. Do not let the coffee maker operate without water.
23. This appliance is intended to be used only in household.
24. Save these instructions.

IV. PRODUCT DESCRIPTION

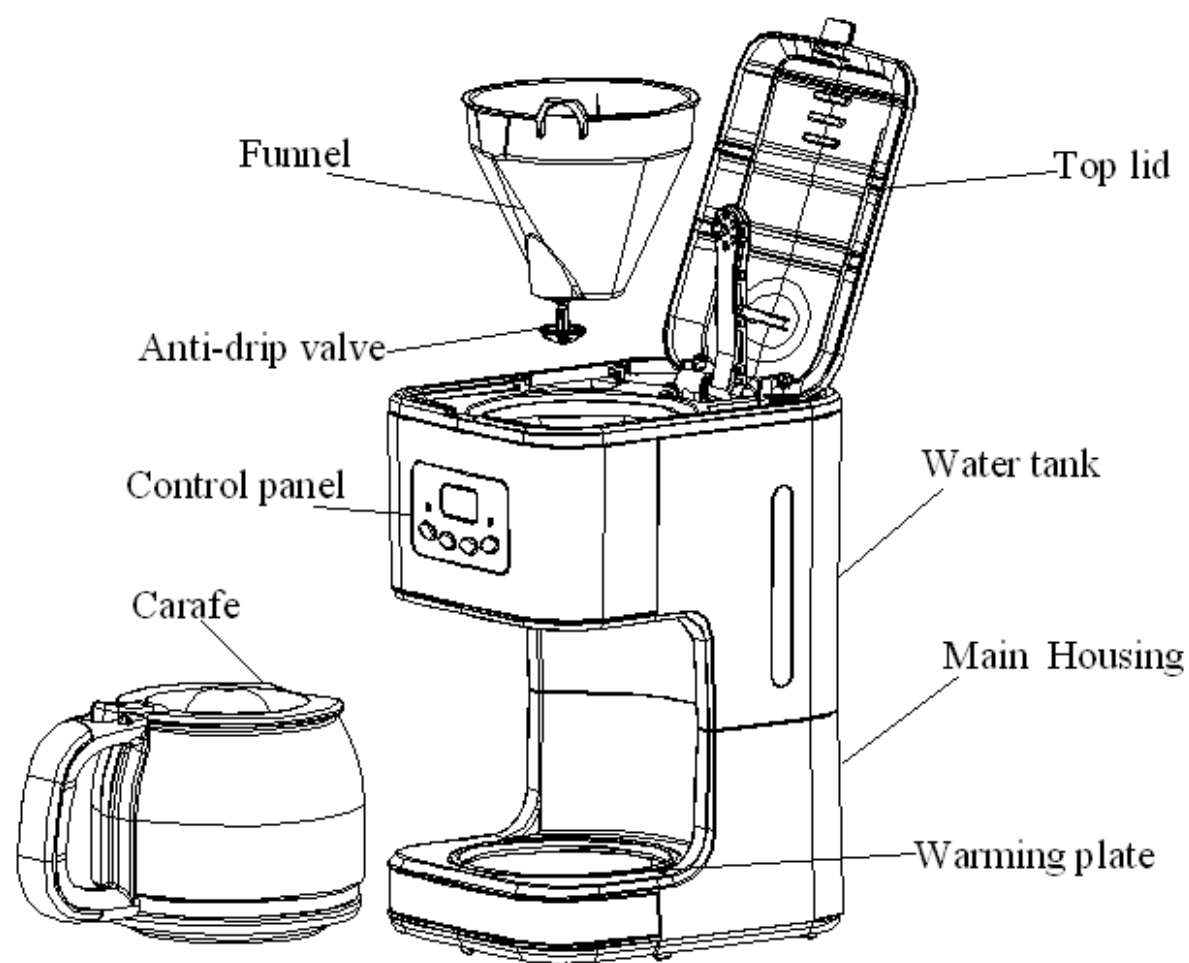

V. CONTROL PANEL

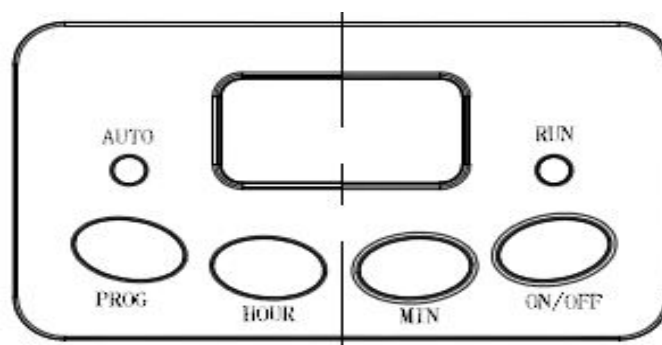

VI. USING INSTRUCTION

➤ Before the first use:

Check that all accessories are complete and the unit is not damaged. Add water into water tank to the max level and brew water for several times without coffee powder, then discard the water. Clean all detachable parts thoroughly with warm water.

➤ USING YOUR COFFEE MAKER

1. Open the top cover and fill the water tank with drinking water. The water level should not exceed MAX level as indicated on the water gauge.
2. Place the funnel into the funnel support and make sure the funnel is assembled correctly, then place the filter in the funnel, and make sure it is assembled correctly.
3. Add proper coffee powder into filter. Usually a cup of coffee need a level spoon of coffee powder, but you may adjust according to personal taste.
4. Insert the carafe with handle closed onto keeping warm plate horizontally.
5. Plug the power cord into the outlet. The LCD will display "12:00" and the colon will flash, but all the button lights will not illuminate.
6. Press ON/OFF button, the indicator will be illuminated red. The appliance will begin working.
7. The brewing process can be interrupted by pressing the ON/OFF button twice again at any time, and the indicator of RUN will be extinguished. The appliance will continue brewing once ON/OFF is pressed again.

Note: You can take out carafe, pour and serve at any time. The appliance will stop dripping automatically. But the time cannot exceed 30 seconds.

8. Remove out carafe to serve when finish brewing (about one minute later after the coffee stops dripping out.)

Note: the coffee you get will less than the water you have added, as some water is absorbed by coffee ground.

9. When the process is finished, if you do not want to serve immediately, keep the coffee maker is energized, the coffee can be kept warm in the warming plate. The appliance will be cut off power automatically after two hours if it has not been manually disconnected at the completion of brewing. For an optimum coffee taste, serve it just after brewing.

➤ **USING YOUR COFFEE MAKER**

10. Always turn the coffee maker off and disconnect the power supply when not use.

Note: pay attention to pour the coffee out, otherwise you may be hurt as the temperature of coffee just finished is high.

➤ **DELAY FUNCTION**

If you do not want the coffee maker to start operation immediately, for example now it is 5:10 pm, you hope that the coffee maker will automatically start at 8:15 in the evening, first follow steps 1 to 5 of above section, then you can set the automatic start function as follows:

1. Press PROG button one time, the word CLOCK is showed at the up-right corner on display.
2. Press the HOUR and MIN button continuously to set the present time (real clock), that is 17:10 (See fig. 1).

Note: the time cycle is 24 hours.

3. Press PROG button once again and the word TIMER shows on up-left corner of display.
4. Set the delayed starting time by pressing HOUR and MIN button repetitively, that is 20:15 (see Fig. 2).

5. Press the ON/OFF twice, the indicator of AUTO will illuminate. The LCD will display the current clock. You may see the automatic start time by pressing PROG.

Note: You may cancel the automatic start function by pressing ON/OFF once to stop machine, or pressing ON/OFF button twice to start brewing immediately. If you want to change the automatic start time, only following the above 1-5 steps again.

When the time is due the indicator of AUTO will go out, while the indicator of RUN turn on and the unit starts brewing. The appliance will be cut off power automatically after two hours if it has not been manually disconnected at the completion of brewing.



Fig.1



Fig.2

VII. CLEANING AND MENTENANCE

CAUTION: Be sure to unplug this appliance before cleaning. To protect against electrical shock, do not immerse cord, plug or unit in water or liquid. After each use, always make sure plug is first removed from wall outlet.

1. Clean all detachable parts after each use in hot sudsy water.
2. Wipe the exterior surface of unit with a soft, damp cloth to remove stains.
3. Water droplets may buildup in the above area of the funnel and drip onto the product base during brewing. To control the dripping, wipe off the area with a clean, dry cloth after each use.
4. Use a damp cloth to gently wipe the keeping warm plate. Never use abrasive cleaner to clean it.
5. Replace all parts and keep for next use.

REMOVING MINERAL DEPOSITS

To keep your coffee maker operating efficiently, you should clean away the mineral deposits left by the water regularly according to the water quality in your area and the frequency use the appliance, the detail is as follows:

1. Fill the water tank with water and descaler to the MAX level in the gauge of coffee maker (the scale of water and descaler is 4:1, the detail refers to the instruction of descaler. Please use "household descaler", you can use the citric acid instead of the descaler (the one hundred parts of water and three parts of citric acid)).
2. Push carafe on warming plate, pay attention to let center line of carafe aligns with that of funnel
3. Press the ON/OFF button once and the indicator of RUN will be illuminated. After a while, water will drop out automatically.
4. After percolate the equivalent of one cup and then switch off the appliance by pressing the ON/OFF button twice again. The indicator of RUN will go out.
5. Leave the solution work for 15 minutes, repeat the steps of 3-5 again.
6. Turn the appliance on by pressing the ON/OFF button once and run off the water until the water tank is completely empty.
7. Rinse by operating the appliance with water at least 3 times.

VIII. TIPS FOR GETTING A GREAT COFFEE

1. A clean coffee maker is essential for making great-tasting coffee. Regularly clean the coffee maker as specified in the "CLEANING AND MAINTENANCE" section. Always use fresh, cold water in the coffee maker.
2. Store unused coffee powder in a cool, dry place. After opening a package of coffee powder, reseal it tightly and store it in a refrigerator to maintain its freshness.
3. For an optimum coffee taste, buy whole coffee beans and finely grind them just before brewing.
4. Do not reuse coffee powder since this will greatly reduce the coffee's flavor. Reheating coffee is not recommended as coffee is at its peak flavor immediately after brewing.
5. Clean the coffee maker when over-extraction causes oiliness. Small oil droplets on the surface of brewed, black coffee are due to the extraction of oil from the coffee powder.
6. Oiliness may occur more frequently if heavily roasted coffees are used.

IX. TECHNICAL FICHE

Power	900W
Voltage	220-240V, 50Hz-60Hz
Capacity	1.5 L
Color	Black

**Environment friendly disposal**

You can help protect the environment!

Please remember to respect the local regulations: hand in the non-working electrical equipment's to an appropriate waste disposal center.



HEINNER is a registered trademark of **Network One Distribution SRL**. Other brands and product names are trademarks or registered trademarks of their respective holders.

No part of the specifications may be reproduced in any form or by any means or used to make any derivative such as translation, transformation, or adaptation without permission from NETWORK ONE DISTRIBUTION.

Copyright © 2013 Network One Distribution. All rights reserved.

www.heinner.com, <http://www.nod.ro>

<http://www.heinner.com>, <http://www.nod.ro>



This product is in conformity with norms and standards of European Community.

Importer: **Network One Distribution**

Str. Marcel Iancu, nr. 3-5, Bucharest, Romania

Tel: +40 21 211 18 56, www.heinner.com, www.nod.ro