


Operating Instructions - Washing Machine Zanussi ZWF1211W

Detergent dispenser drawer


Prewash 

Main wash 

Fabric softener 

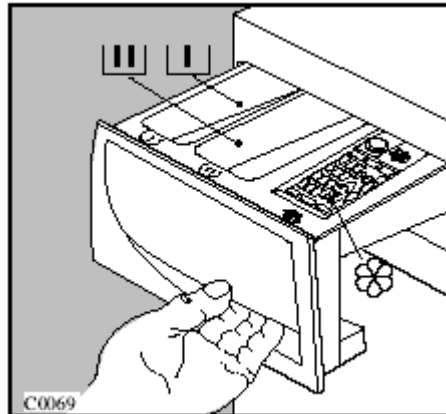

The control panel

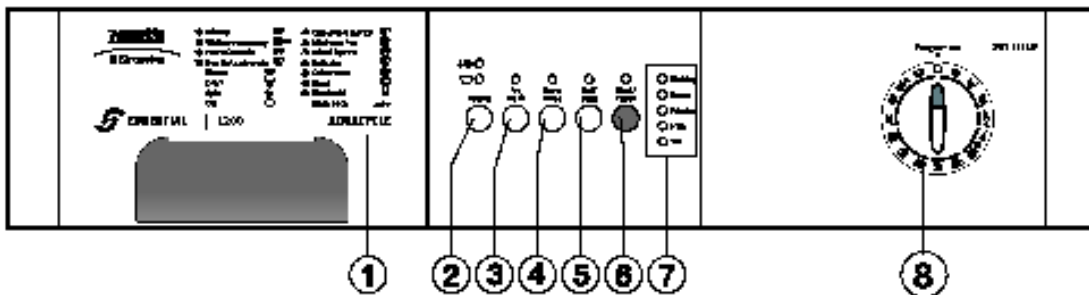

1. Programme guide

Programme option buttons

Depending on the programme, different functions can be combined. These must be selected after choosing the desired programme and before depressing the Start/Pause button. When these buttons are pressed, the corresponding pilot lights come on. When they are pressed again, the pilot lights go out. If an incorrect option is selected, the corresponding pilot light flashes for about 2 seconds.

1. Spin reduction/rinse hold button

By depressing this button the final and the intermediate spin speeds can be reduced or the rinse hold option can be selected.



Spin reduction: by selecting this option the speed will be reduced as follows:

Cotton: from 1200 to 550rpm

Synthetics and wool: from 900 to 450rpm

Delicates: from 700 to 450 rpm



Rinse hold: by selecting this option the water of the last rinse is not emptied out, to prevent the fabrics from creasing.

At the end of the programme the pilot light End illuminates. To drain the water, proceed as follows:

Turn the programme selector dial to position O.

Select programme  (drain) or  (spin).

Press the Start/Pause button.

2. Prewash button

Select this option if you wish your laundry to be prewashed before the main wash (not available for wool). The prewash ends with a short spin in programmes for cotton and synthetic fabrics, whereas in the programme for delicate fabrics the water is only drained.

3. Super rinse button

Can be used with all programmes, except wool. The machine will add 2 rinses to the selected programme.

4. Half load button

Select this button to reduce water consumption on the rinse cycle when washing a smaller load of cottons or linens. The machine will perform 2 rinses instead of 3.

5. Start/Pause button


After having selected the required programme, press this button to start the machine; the corresponding pilot light stops flashing and illuminates continuously.

To interrupt a programme which is running, depress the Start/Pause button: the corresponding pilot light starts to flash.

To restart the programme from the point at which it was interrupted, press the Start/Pause button again.

6. Programme progress display

By selecting the wash programme, the pilot lights corresponding to the various phases making up the programme come on.

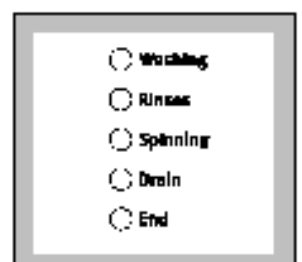

After the machine has started, only the running phase pilot light stays on. The End pilot light flashes in the event of opening problems:

4 flashes = the door has not been closed


2 flashes = the machine does not empty

1 flash = the machine does not fill

The End pilot light comes on when the programme is finished and indicates that the door can be opened.

7. Programme selector dial


The selector dial can be turned either clockwise or anticlockwise. Position O corresponds to Reset programme/Switching OFF of the machine.

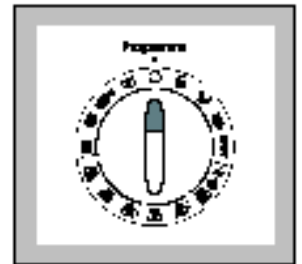

Operating sequence

Load the laundry.

Measure out the amount of detergent required and pour it into the main wash compartment.

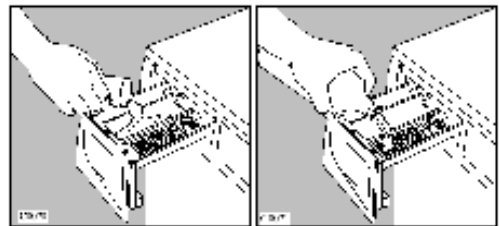




If you wish to carry out a prewash, pour detergent into this compartment also.


Prewash should not be carried out on mixed fabrics or delicates.

If required measure out the fabric softener into the compartment marked .

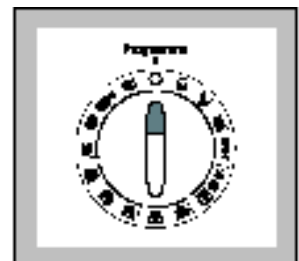
Turn the programme selector dial to the required programme. The Start/Pause button starts to flash. The pilot lights corresponding to the various phases making up the programme come on.



Select the spin reduction  or rinse hold  option by pressing the option button repeatedly, to select the desired option. The relevant light illuminates.

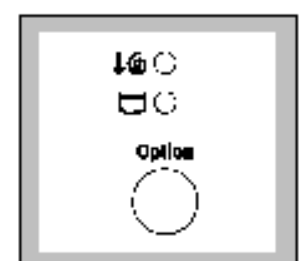

If required, select Prewash, Super Rinse or Half Load (cotton or linens only) option, the corresponding light illuminates.

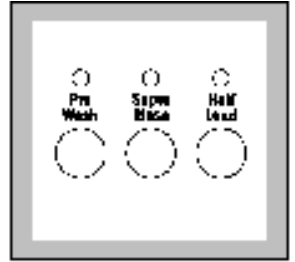

To start the selected programme, press the Start/Pause button; the corresponding light stops flashing. Only the Washing light stays on.

Altering a programme

A programme can be altered before it starts.

When the programme has started, it can only be reset by turning the programme selector dial to O and then selecting the new programme. The washing water remains in the tub. Start the new programme by depressing the Start/Pause button.

Interrupting a programme

Depress the Start/Pause button to interrupt a programme which is running, the corresponding light starts to flash. Depress the button again to restart the programme.

Cancelling a programme

Turn the selector dial to O to cancel a programme which is running and select a new programme.



Opening the door after the programme has started

First set the machine to pause by pressing the Start/Pause button. Wait 2 or 3 minutes for the door lock to be released.

If the machine is already heating, or the water level is above the bottom edge of the door or the drum is turning, it means that the door cannot be opened.



 





If it is necessary to open the door, turn the selector dial to O and after about 2 minutes the door can be opened (pay attention to the water level and temperature).

At the end of the programme the machine stops automatically. If the rinse hold option has been selected the phase light End is on to indicate that the water must be emptied out before opening the door.

To do this first turn the programme selector dial to O and then to either the  (drain) or  (spin) programme. Release of the lock is indicated by the illumination of the End light. Turn the programme selector dial to O to switch the machine off.

Washing programmes


 




 




















Programmes for cotton and linen

| Wash programme/ Washing symbol | Degree of soil and type of laundry | Programme dial position | Description | Possible options | Max. load | Progr. time mins. |
|-----------------------------------|--|---|--|---|--------------|-------------------------|
| WHITES | For heavy soiled cotton items, |  | Wash at 90°C 3 rinses Long spin |  Prewash Super Rinse Half Load | 5 kg | 140 |
| WHITES + ECONOMY | White cotton, for example normally soiled work garments, sheets, household linen, underwear, towels. |  (*) | Wash at 60 °C 3 rinses Long spin |  Prewash Super Rinse Half Load | 5 kg | 125 |
| FAST COLOURED | Fast coloured cotton or linen fabrics, normally soiled, shirts, underwear, towels. |  | Wash at 60 °C 3 rinses Long spin |  Prewash Super Rinse Half Load | 5 kg | 115 |
| NON FAST COLOURED | Non fast coloured cotton or linen fabrics, normally soiled, shirts, blouses, underwear. |  | Wash at 40 °C 3 rinses Long spin |  Prewash Super Rinse Half Load | 5 kg | 113 |
| RESET / OFF | For cancelling the wash programme which is running and for switching the machine off | O | | | | |

(*) This programme is the reference programme for the Energy level according to EEC Directive 92/75.







 








Washing programmes

Programmes for synthetics, mixed fabrics, delicates and wool

| Wash programme/ Washing symbol | Degree of soil and type of laundry | Programme dial position | Description | Possible options | Max. load | Progr. time mins. |
|--|--|---|---|---|--------------|-------------------------|
| COLOUR-FAST FABRICS | Synthetic or mixed fabrics, underwear, coloured garments, non-shrink shirts, blouses. |  | Wash at 60 °C |   PREWASH SUPER RINSE HALF LOAD | 2 kg | 90 |
| MINIMUM IRON | |  | Wash at 50 °C | | | 85 |
| MIXED FABRICS | |  | Wash at 40 °C | | | 80 |
| | | | 3 rinses Short spin | | | |
| DELICATES | Delicate fabrics, for example curtains or colour care fabrics |  | Wash at 40 °C |   PREWASH SUPER RINSE HALF LOAD | 2 kg | 60 |
| COLOUR CARE | |  | Wash at 30 °C | | | 55 |
| | | | 3 rinses Short spin | | | |
| WOOL  | Specially tested programme for wool garments bearing the "Pure new wool, non- shrink, machine washable" label. |  | Wash at 30 °C 3 rinses Short spin |   HALF LOAD | 1 kg | 50 |
| WOOL COLD | Special programme for hand washing fabrics |  | Cold wash 3 rinses Short spin |   HALF LOAD | 1 kg | 43 |
| WORN ONCE | Special short programme for lightly soiled synthetic, mixed fabrics and delicates |  | Wash at 30 °C 2 rinses Short spin |   HALF LOAD | 2 kg | 30 |
| RINSES | Separate rinse cycle for hand washed items of all fabric |  | 3 rinses Short spin |   SUPER RINSE | 5 kg | 30 |
| DRAIN | For emptying out the last rinse water in programmes with the  (rinse hold) option. |  | Draining of water | - | | 4 |
| SPIN | Separate spin for all fabric |  (+) | Spin |  | 5 kg | 1.5 |
| RESET / OFF | For cancelling the wash programme which is running and for switching the machine off |  | | | | |

(*) If the spin reduction option has been selected for this programme, the programme will perform a short spin.

Wash care symbols

| Washing Symbol | Wash Action | Fabric |
|---|--|--|
|  | Normal (Maximum) | White Cotton or Linen without Special Finishes |
|  | Normal (Maximum) | Cotton, Linen or Viscose without Special Finishes Colourfast at 60°C. |
|  | Reduced (Medium) | Nylon, Polyester/Cotton, Viscose with Special Finishes, Cotton/Acrylic Mix. |
|  | Normal (Maximum) | Cotton, Linen or Viscose Colourfast at 40°C but not 60°C. |
|  | Reduced (Medium) | Acrylics, Acetate, Triacetate, Wool mixes, Polyester/wool blends. |
|  | Much Reduced (Minimum) | Wool, wool mixtures, Silks |
|  | Hand wash only | Do not machine wash |
| BLEACHING | | |
|  | Chlorine bleach may be used | |
| IRONING | | |
|  | Hot iron | Cotton, Linen, Viscose |
|  | Warm iron | Polyester mixtures, Wool |
|  | Cool iron | Acrylic, Nylon, Polyester |
| DRY CLEANING | | |
|  | May be dry cleaned. Other letters and/or a bar beneath the circle will indicate the required process to the dry cleaner. | |
| TUMBLE DRYING | | |
|  | May be tumble dried | |
|  | with high heat setting | |
|  | with low heat setting | |
| | A cross through any symbol means «DO NOT» | |