
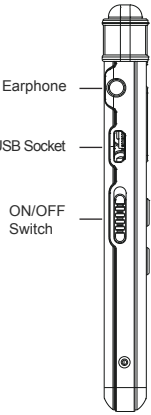
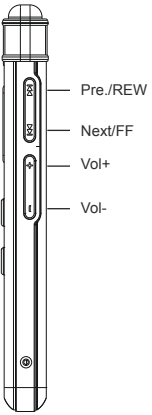
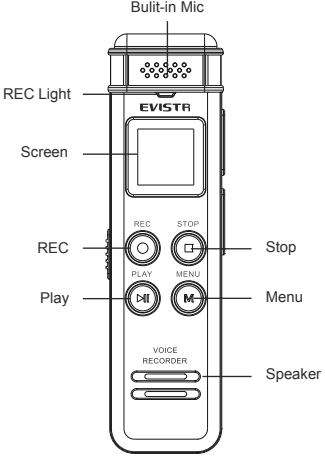
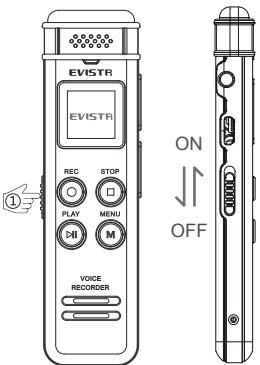
 
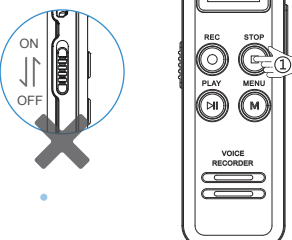

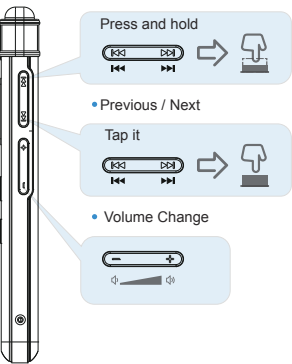
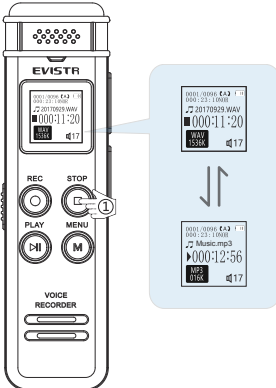
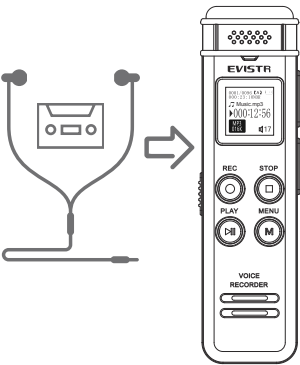
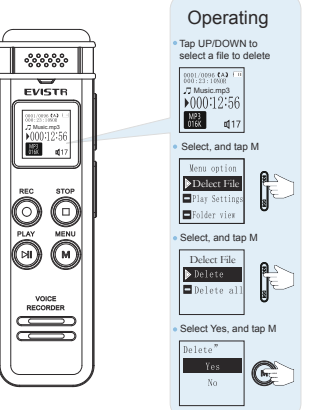
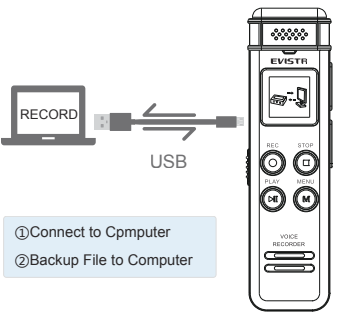
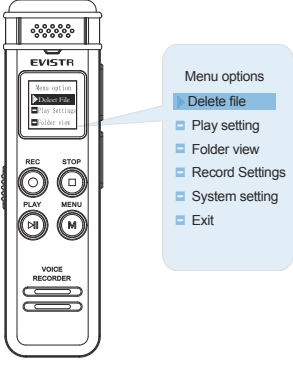
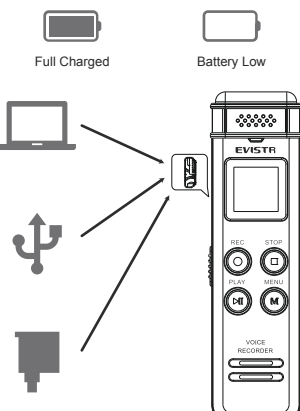


<h1>EVISTR</h1> 	 		<h3>Turn ON</h3>  <p>Push Up the ON/OFF button, turn on device</p>
<h3>REC</h3>  <p>Press REC, start to record</p>	<h3>SAVE</h3>  <p>Press STOP, save recording</p>	<h3>PLAY</h3>  <p>Press PLAY, play the file just saved</p>	<h3>Fast Forward/Volume Adjust</h3>  <ul style="list-style-type: none"> <li>• Fast Forward / Rewind Press and hold</li> <li>• Previous / Next Tap it</li> <li>• Volume Change</li> </ul>
<h3>MUSIC/RECORD Folder Switch</h3>  <p>• Press and hold STOP button, switch between MUSIC and RECORD folder</p>	<h3>Connect to Earphone</h3> 	<h3>Delete File</h3>  <p>Operating</p> <ul style="list-style-type: none"> <li>• Tap UP/DOWN to select a file to delete</li> <li>• Select, and tap M</li> <li>• Menu option</li> <li>• Select, and tap M</li> <li>• Select Yes, and tap M</li> </ul>	<h3>Data Transfer</h3>  <p>① Connect to Computer ② Backup File to Computer</p>
<h3>Menu Options</h3>  <p>Menu options</p> <ul style="list-style-type: none"> <li>Delete file</li> <li>Play setting</li> <li>Folder view</li> <li>Record Settings</li> <li>System setting</li> <li>Exit</li> </ul> <p>By the 3 buttons, easy to set the recorder</p> <p>Selection Return Confirm</p>	<h3>Charging</h3>  <p>Full Charged Battery Low</p>	<h3>Important Notice:</h3> <ol style="list-style-type: none"> <li>1) Set time and date: by pressing UP/DOWN to adjust, by tapping VOL+ to select, and tap the M button to confirm setting</li> <li>2) Restore to Factory Setting: turn on the device, Press Play (turn on device) -&gt; hit M -&gt; use Up/Down to System Settings -&gt; hit M -&gt; to Factory Setting, hit M -&gt; Select Yes, hit M to confirm</li> <li>3) Format Device: will erase all data, do not use it, unless in need. Note: Do not turn off power when formatting device. If, unfortunately, the device is mistakenly cut off, it will show as disk error.</li> <li>4) Unless storing the device, we recommend you keep power button at ON position, turn on/off the device by pressing down the PLAY button.</li> </ol> <p>Restores to factory default. Very helpful if confusion arises when creating settings.</p> <p>To correct disk error. Push down the power button from ON to OFF position. Connect the device to a Windows computer, and format the disk from the computer to return to normal state.</p> <p>Note: If you are using a MAC computer, please contact our customer support. Reformatting on a MAC computer needs different options.</p>	<p>Register VIP: <a href="http://www.evistr.com/vip">http://www.evistr.com/vip</a> or email <a href="mailto:support-us@evistr.com">support-us@evistr.com</a> to register VIP within 30days and receive an extended 18 Month Product Warranty.</p> <p>Download More User Guide from <a href="http://www.evistr.com">http://www.evistr.com</a></p>

<h1>EVISTR L157 User Manual</h1> <div></div>	<p>Thank you for purchasing a recorder from EVISTR. Customer satisfaction is our priority. If you have questions or problems, please feel free to contact us.</p> <ul style="list-style-type: none"><li>- Our web site: <a href="http://www.evistr.com">http://www.evistr.com</a></li><li>- Register as a VIP and receive an extended 18 month warranty: <a href="http://www.evistr.com/vip">www.evistr.com/vip</a></li><li>- Our customer support email: <a href="mailto:support@evistr.com">support@evistr.com</a></li><li>- Keep this booklet for future reference. You may also download detailed instructions from our web site. <a href="http://www.evistr.com">http://www.evistr.com</a></li></ul> <p><b>To Ensure Product Warranty</b></p> <p>Confirm the package contains an authentic, new device from EVISTR. The original package comes film wrapped and has bar code information.</p> <p><b>Package List</b></p> <ul style="list-style-type: none"><li>· 1 x L157 Device</li><li>· 1 x Earphone</li><li>· 1 x USB Cable (for data transfer and charging)</li><li>· 1 x VIP Card</li></ul> <p>We highly recommend you register at our site to receive an extended warranty (18months), to verify the product authentication, and to have better customer service. Registration is free.</p>	<p>Register VIP: <a href="http://www.evistr.com/vip">http://www.evistr.com/vip</a> or email <a href="mailto:support-us@evistr.com">support-us@evistr.com</a> to register VIP and receive an extended 18 Month Product Warranty.</p> <p><b>Product Warranty</b></p> <p>1 year warranty unless registered with Evistr VIP.</p> <p><b>Product Sketch</b></p> <div></div>	<p><b>Learn how to operate the buttons in the product sketch.</b></p> <p><b>Built-in Mic:</b> Captures the voice and records. Do not click on buttons when device is recording.</p> <p><b>Earphone:</b> You may plug in earphones to hear the playback.</p> <p><b>USB:</b> For charging or to download recordings to a computer.</p> <p><b>POWER Button:</b> Switch on/off device power (we recommend you keep power button at ON position unless storing the device).</p> <p><b>PLAY/PAUSE:</b> Play recordings or turn on/off the device (while power button is at the ON position).</p> <p><b>REC:</b> Button for recording.</p> <p><b>STOP:</b> Save recording, stop playback.</p> <p><b>M:</b> Menu options. Use up/down to select, use M to confirm. Press Stop to return to main menu</p> <p><b>Speaker:</b> Device has a built-in speaker. You can hear the playback without earphones.</p> <p><b>UP/DOWN:</b> Selects Menu Options.</p> <p><b>VOL+ / VOL-:</b> Adjusts the speaker volume. When setting date and time, use this button.</p>																		
<div></div> <table><tr><th>NO.</th><th>Function</th></tr><tr><td>1</td><td>Battery Bar (when battery bar is empty, battery needs recharging)</td></tr><tr><td>2</td><td>Length of Recording in minutes/seconds</td></tr><tr><td>3</td><td>Speaker Volume</td></tr><tr><td>4</td><td>Recording format &amp; bit rate</td></tr><tr><td>5</td><td>Remaining Recording Time (remaining capacity)</td></tr><tr><td>6</td><td>Recording Status</td></tr><tr><td>7</td><td>L / R Channel meter</td></tr><tr><td>8</td><td>Total Recording File Count</td></tr></table> <p><b>Quick Start Guide</b></p> <p><b>Turn ON device:</b> Power button to ON position; press PLAY button for two seconds to turn on the device.</p> <p><b>Recording:</b> press REC button to begin recording.</p> <p><b>Save Recording:</b> press STOP button to save</p>	NO.	Function	1	Battery Bar (when battery bar is empty, battery needs recharging)	2	Length of Recording in minutes/seconds	3	Speaker Volume	4	Recording format & bit rate	5	Remaining Recording Time (remaining capacity)	6	Recording Status	7	L / R Channel meter	8	Total Recording File Count	<p>recording</p> <p><b>Delete Recording:</b> press Menu button. Select -&gt; Delete File -&gt; select Delete. This deletes a single recording. To delete all files, go to -&gt; Delete File -&gt; Use Up/Down button to choose Delete All. Use Up/Down button to confirm your choice.</p> <p><b>Play a Recording:</b> Choose the recording you wish to hear by pressing Menu -&gt; use Up/Down button to choose, press PLAY.</p> <p><b>Play Next / Previous Recording:</b> press the Up/Down button.</p> <p><b>Fast Forward / Rewind:</b> press and hold the Up(REW)/Down(FF) button.</p> <p><b>Quick Menu Option Guide Using UP /Down Button</b></p> <p><b>To select and confirm, press Menu (M) button.</b></p> <p><b>Change Record Format/Quality:</b> go to Menu (M) -&gt; Up/Down button to select Record Setting -&gt; Recording quality -&gt; (1536kpbs WAV format, 128kpbs / 64kpbs MP3 format)</p> <p><b>Voice Activated Mode (AVR mode):</b> go to Menu (M) -&gt; select Record Setting -&gt; Up/Down button to Voice-activated mode-&gt; M button to select AVR mode -&gt; select ON.</p> <p><b>Voice Activated Level:</b> go to Menu (M) -&gt; Up/Down button to select Record Setting -&gt; select Voice activated</p>	<p>sensitivity -&gt; select from levels 1 to 5.</p> <p><b>Set Time:</b> go to Menu (M) -&gt; Up/Down button to select System setting -&gt; Up/Down button to select Date and time -&gt; select Set time -&gt; use Up/Down and VOL+ buttons to change time. Press M button to confirm.</p> <p><b>Set Date:</b> go to Menu (M) -&gt; Up/Down button to select System setting -&gt; Up/Down button to select Date and time -&gt; with Up/Down and VOL+ buttons change date, and press M button to confirm.</p> <p><b>Important Notice for Using This Device</b></p> <p><b>DOs</b></p> <ul style="list-style-type: none"><li>· When you receive the recorder, we recommend that you push the POWER button up to the ON position to turn on the device. Unless storing the device, we recommend you turn on off the device by pressing down the PLAY button.</li><li>· Listen to a test file on the device to check sound levels.</li><li>· Backup data as frequently as possible.</li><li>· Charge the device via its USB cable to a computer or wall charger (charger input less than 5V 1A).</li><li>· When battery is low (battery bar empty), save recordings and recharge immediately.</li></ul>	<ul style="list-style-type: none"><li>· The device supports charging and recording at the same time.</li><li>· Remember to hit STOP and save your recording each time.</li><li>· Device won't make any noise during recording. It will flash the Record LED light (this function can be turned off).</li><li>· Keep this booklet for future reference.</li><li>· For any issues, problems, or questions, contact us <a href="mailto:support@evistr.com">support@evistr.com</a></li><li>· Contact customer service with Order ID or System Firmware Version Information, or Bar Code on the package for a more effective reply.</li><li>· Register for VIP service within 30 days to receive effective customer service and extend your recorder's warranty to 18months.</li></ul> <p><b>DON'Ts</b></p> <ul style="list-style-type: none"><li>· Do not shut down the device's power button when it is saving a recording.</li><li>· Do not scratch the recorder body.</li><li>· If typing or writing near the device while record function is on, it will capture the noise.</li><li>· Do not format the device unless the files have been backed up.</li><li>· Do not cut off power while formatting device.</li><li>· Do not delete a file unless the file has been backed up.</li></ul>
NO.	Function																				
1	Battery Bar (when battery bar is empty, battery needs recharging)																				
2	Length of Recording in minutes/seconds																				
3	Speaker Volume																				
4	Recording format & bit rate																				
5	Remaining Recording Time (remaining capacity)																				
6	Recording Status																				
7	L / R Channel meter																				
8	Total Recording File Count																				
<ul style="list-style-type: none"><li>· Do not press any buttons when device is connected to a computer.</li><li>· Do not use non-original micro USB cable to transfer data from device to computer. Not all micro USB cables support data transfer.</li><li>· Do not set View Playing unless needed. It only plays 10s seconds of each file.</li><li>· Do not use the Voice Activated Function unless needed. It may not record some low decibel voice you want recorded.</li><li>· Do not use the Auto Record Function unless needed, as device will automatically boot up to record.</li><li>· Do not turn on the sleeper time function unless needed, as this will force the device to shut down, even if in use.</li><li>· Do not pause the device for a long time, as the device will automatically shut down when there is no operation such as playing or recording.</li></ul> <p><b>Operational Explanations:</b></p> <p>These instructions will say "hit" or "press down."</p> <p><b>Hit:</b> a short press of the button.</p> <p><b>Press and hold:</b> press the button a few seconds until the screen shows the information.</p>	<p><b>Basic Operation Guide</b></p> <p><b>1)Charging the device</b> Use the USB cable provided. Connect to a computer, USB socket, or USB Adapter.</p> <p><b>2) Download file to computer</b> Use the USB cable provided to connect to your computer. Find the file (L157) on your computer. Drag &amp; Drop or Copy and Paste the recordings from the recorder file to your computer and share with friends.</p> <p><b>3) Turn on the recorder</b> When using the device for the first time, push up the ON/OFF power button on the side of the recorder from OFF to ON position. The device will boot up. From then on, press PLAY button to turn ON/OFF the recording device.</p> <p><b>4) Recording</b> Hit REC button to begin recording. Press STOP to automatically save recording.</p> <p><b>5) Pause Recording</b> During recording, hit PLAY button to pause recording. Hit PLAY button again to resume recording.</p> <p><b>6) Play Recording</b> Once you have saved a recording, hit PLAY button and play back what was just recorded.</p> <p><b>7) Adjust Speaker Volume</b> During playback, use VOL+ / VOL- to adjust speaker</p>	<p>volume.</p> <p><b>8) Fast Forward / Rewind</b> During playback, press and hold Down (FF) to use fast forward. During playback, press and hold Up (REW) to rewind.</p> <p><b>9) Previous / Next</b> Tap UP or DOWN to select, move to previous / next recording file (or music track).</p> <p><b>10) Play Music (use as MP3 Player)</b> Attach device to computer. Transfer music file from computer to recorder. Detach device from computer and turn on. Press down STOP button and switch to music folder. Note: the songs do not put inside the RECORD folder, you could create a new folder for it.</p> <p><b>11) Delete Recording</b> Turn on the device by pressing Play. Press M (menu)-&gt; find Delete File, press M again -&gt; select Delete, press M -&gt; select Yes, press M to confirm. File deletes. NOTE: When turning on the device, we can press Up/Down button to select file to Delete, in default, it reads the latest file, so if we will directly go to delete option, it will delete the latest file.</p> <p><b>12) A-B Repeat</b> When in playback, press down M button. A will flash on the display. Press down M button again, and it will</p>	<p>show A-B on the display. The recorder will play back recordings / music from point A to point B again and again.</p> <p><b>13) T-mark</b> During recording, press M button to add a T-mark to the recording. A T-mark flag shows on the display. It is same as adding a bookmark. Each recording file can have ten T-marks at maximum. If recording is played back, you will see the T-mark flag on the display. Press DOWN (FF) to jump to the next T-mark file point.</p> <p><b>Menu Options</b></p> <p><b>1.Play Settings</b></p> <p><b>1.1Play Settings -&gt; Play Mode</b> Press Play (turn on device)-&gt; tap M -&gt; use Up/Down to Play Setting -&gt; Play mode.</p> <p><b>Use Up/Down to select Repeat.</b> Repeat off: select and confirm. Device playback is in normal. Repeat one: repeats single file again and again. Repeat all: repeats all files in directory from A-Z again and again. View Playing: only play 10s seconds of each file. <b>Use up/down to select Shuffle.</b> Shuffle plays back files in random order. To stop</p>																		
<p>shuffle, use Up/Down and select Off.</p> <p><b>1.2 Play Settings -&gt; Sound Setting</b> Press Play (turn on device) -&gt; tap M -&gt; use Up/Down to Play Setting -&gt; Sound Setting -&gt; Equalizer. Use Up/Down to select Rock, Pop, Soft, Jazz, Classical, Techno, Off.</p> <p><b>2.Folder View</b> Press Play (turn on device) -&gt; hit M -&gt; use Up/Down to Folder View -&gt; RECORD. Shows all files recorded on device.</p> <p><b>3.Record Settings</b> Press Play (turn on device) -&gt; hit M -&gt; use Up/Down to Record Settings -&gt; hit M</p> <p><b>Recording Quality:</b> 1536Kbps: default choice, lossless PCM quality, recording format at WAV (12 hours at 8GB, 24 hours at 16GB); 128Kbps, 64Kbps: record at MP3 format.</p> <p><b>Record LED:</b> ON: default. LED indicator light is ON. <b>OFF:</b> turn off the LED indicator light.</p> <p><b>Subsection record</b> Recorder will automatically save the recording file at a selected time length and start a new recording. Half Hour: record each file at 30minutes. One Hour: record each file at 1 hour. Two Hour: record each file at 2 hour. CLOSE: turn off subsection record function.</p>	<p><b>Voice Activated Mode (AVR)</b> When AVR is on, device will record any voice. If no voice is detected, it will not record to reduce blank time and save storage space. At AVR mode, we still need to press STOP to save recordings when we complete a recording task.</p> <p><b>AVR Mode</b> ON: turn on voice activated record function. OFF: turn off voice activated record function.</p> <p><b>Voice Activated Sensitive Level</b> From Level 1 to Level 5: Level 1 only picks up voice or sound above 70db, a very loud sound. Level 5 is very sensitive, so any quiet sound will be recorded. (i.e. normal environmental noise will activate recording). Note: do not turn on this function for important lectures or meetings. It may skip or lose some very important sentences at low decibels. Use regular on/record/stop for meetings.</p> <p><b>Record Monitor</b> ON: when ON, use earphones to hear what it is recording. OFF: turn off this function. Exit:Exit current menu options, return to upper level menu option.</p> <p><b>4.System Settings</b></p>	<p>Menu Options -&gt; Up/Down button -&gt; System Settings</p> <p><b>Sleep Timer:</b> This function will turn off the device at a set time, even if it is playing or recording. Be careful in case you unexpectedly lose an important recording. Select from 10 minutes to a maximum of 120 minutes.</p> <p><b>Backlight timer:</b> Set the time for the display to go dark. Select from 10 seconds to maximum (always on). Note: when display is always on, device will consume a lot of battery power.</p> <p><b>Brightness:</b> Set the display brightness from 00 to 15 (i.e. dark to bright)</p> <p><b>Date and time:</b> Set time: Press UP/DOWN to adjust hour or minute. Press VOL+/VOL- to move to next hour or time. Press M to confirm and save setting. Set date: Press UP/DOWN to adjust year, month, or day. Press VOL+/VOL- to move to next. Press M to confirm and save setting. Language: If, unfortunately, the device is set to the wrong language, please contact customer service. <a href="mailto:support@evistr.com">support@evistr.com</a>.</p> <p><b>Information</b> Player Information: Device shows the firmware version and the release date.</p>	<p>Disk space: Device shows the free space and total space.</p> <p><b>Format Device:</b> This will format the disk and erase all data on the device, so remember to back up important files before doing. Select Yes, press M (menu) confirm. Device will start to reformat and erase all data. Wait until the device reboots and completes the process. <b>Note:</b> Do not turn off power when formatting device. If, unfortunately, the device is mistakenly cut off, it will show as disk error. To correct disk error. Push down the power button from ON to OFF position. Connect the device to a Windows computer, and format the disk from the computer to return to normal state. <b>Note:</b> If you are using a MAC computer, please contact our customer support. Reformatting on a MAC computer needs different options.</p> <p><b>Factory Setting:</b> Restores to factory default. Very helpful if confusion arises when creating settings. Select Yes, press M to confirm. Device will start to restore factory settings.</p>																		

Technical Parameter				
Product Dimension	3.97 X 1.06 X 0.42 inch (101X27X10.8MM)			
Screen Size	96 x 64 LCD screen			
USB Socket	USB 2.0 High Speed (Charging and Data Transfer)			
Charging	Input < 1A 5V			
Record Bit Rate	1536kbps 128kbps 64kbps			
Earphone Output	Max 10mW+ (30Ohm), Freq 20Hz - 20KHz, S/N ratio > 90db, Distortion factor 0.05%			
Memory	8G / 16G / 32G (Subject to the device)			
Battery	3.7V 230mAh Lion Polymer			
Music Playback Battery Time	12 hours (single full charged with earbud, screensaver)			
Max Recording Battery	Time Full charged, recording at 64kbps could work 20 hours			
Support Music Format	MP3 / WAV / FLAC / APE / OGG / WMA			
16				
To restore button function, press M and hold. Device will exit connection mode. <b>8)Cannot Find My Recordings in the Recorder</b> When first opened, the device will first read the Music Folder. Press STOP to switch back to recordings folder. The recorder can also be connected back to the computer to check whether there are recordings in the recorder disk. <b>9)Turn On Voice Activated Function</b> Go to Menu -> Up/Down button to Record Setting -> press M -> Up/Down to Voice Activated Setting -> press M -> select AVR mode, and press M to confirm. Now press REC. You will see VOR on the screen which means voice activated recording function is set. <b>10)How to Use the AVR Mode (Voice Activated Function)</b> When AVR mode is selected, the device will only pick up a loud enough decibel sound or voice. Adjust the voice activated sensitivity in record setting. Select the AVR level to get the best effect for voice activated recording. For the L157 voice recorder, the AVR level can be selected from 1 -5. The lower number requires a higher decibel voice to activate the recorder. In other words, a louder voice. At level 5, the recorder is very sensitive and will pick up quiet speaking.				
20				
Recording Parameter				
	Recording Quality	8GB	16GB	32GB
WAV	1536kbps	12 hours	24 hours	48 hours
	128kbps	145 hours	290 hours	580 hours
	64kbps	290 hours	580 hours	1160 hours
MP3	32kbps	580 hours	1160 hours	2320 hours
	<b>NOTE:</b> This form shows the maximum recording file time that can be stored in the device, not the battery time. Device capacity is subject to the entity.			
<b>TROUBLE SHOOTING</b>				
<b>1)No Voice Recordings</b> If there is no voice recording or all recordings have been deleted, when device is turned on it will display "no voice recordings" or "no songs" on the screen. Not to worry, go ahead and press REC or M (menu). <b>2)How to Turn Off the Record Light</b> Go to Menu Options -> Record setting -> Up/Down button -> Record led -> select OFF. When recording,				
17				
the record light will not light up or flash. <b>3)Format Error</b> This usually happens because of three reasons. During recording, pushing down the POWER BUTTON to OFF position will cause file damage. Before switching off recorder, first press STOP to save the recordings. The recordings time is less than 5 seconds. Computer does not support the .wav file. The recordings were saved as .wav format. For WINDOWS 10 or MAC user who may encounter with this issue, don't worry. Download the free MplayerX / VLC Media Player to solve this issue. <a href="http://mplayerx.org">http://mplayerx.org</a> <a href="http://www.videolan.org/vlc/">http://www.videolan.org/vlc/</a> Record at MP3 format, so recordings will be more widely supported by different computers. <b>4)Disk Error</b> Due to static shock, like over charging, recorder cuts off its power when the formatting process doesn't complete, and device loses system firmware. <b>How to Rescue:</b> Keep power button at OFF position, connect device to Windows computer, and format the recorder disk again. Device will be normal. <b>How to connect to a computer:</b> Use the enclosed cable to connect to your computer, or use an android phone cable. If device fails to connect to the computer, contact				
18				
support@evistr.com to get a quick solution. Or, for the simple way, change to a new socket or use a new cable. (For example, this issue also happens when failing to connect a flash drive to a computer.) <b>5)Failed to Connect to Computer</b> Before connecting the recorder to a computer, turn off the recorder. When connecting to a computer, do not press any buttons on the recorder or do any operations on the recorder. Otherwise, it will exit connection mode, and fail to connect to the computer. At this status, it will only charge the voice recorder. For more failed connect to computer issues, please contact us. We will reply promptly. <b>6)Can Recordings Be Deleted from the Computer?</b> Yes. When the recorder is successfully connected to a computer, find it as the removable drive name "L157." All recordings are saved in a folder named "RECORD" in the drive. You may delete the file or copy the file onto an ordinary USB Flash Drive. <b>7)When Connected to a Computer, the Buttons Do Not Work</b> When connected to computer, the voice recorder is in connection mode. The recorder screen will show "CONNECTION ICON" and no buttons will work.				
19				
This happens when the sleeper time function is ON. When operating the device, or recording, or playing music/recordings, the sleep timer function will force a shut down on the device. Go to System setting -> sleeper time. Select OFF and confirm. This closes the sleep time function. You can also try to restore the recorder to factory settings when this happens if you're not sure how to set the sleep time. <b>(16) Cannot Shut Off My Voice Recorder</b> When the recorder is charging, or connected to computer, even if the POWER BUTTON ON/OFF is at OFF position, recorder will still be ON. The voice recorder cannot be shut off because the voice recorder is directly getting power from the charging socket or computer. <b>(17) How to format the recorder</b> Press M (menu), enter menu options. Select System Setting, press M to enter. Select Format Device, Press M to enter. Enter Format Disk, select Yes. Press M to confirm and start formatting. After formatting is completed, all files on the recorder will be deleted, and all storage (8GB or 16GB storage) will be available on voice recorder again. <b>Note:</b> Do not shut off the device during disk format <b>(18) Space is full</b>				
22				
When the storage space is full, connect to a computer, copy recordings, and save them to the computer. Delete all the recordings from the voice recorder. The voice recorder has a limited storage at 8GB or 16GB. After a while of using, the recorder may be full and needs to be backed up onto a computer. <b>Note:</b> Do not cut off recordings from recorder to computer. This will cause an unsuccessful transfer, and the files cannot be deleted from the recorder successfully.  We will regularly update our E-book, based on customer feedback. We hope to have more interaction with our customers, so please let us know if we can help you. You may find more information on our website:  <a href="http://evistr.com/">http://evistr.com/</a> <a href="mailto:Support@evistr.com">Support@evistr.com</a>				
23				