

MWE Gold V2 550/650/750/850 User Guide

Safety Instructions

- Do not open the power supply unit as this can lead to serious injury or death.
- Do not insert objects into spinning fan. This will damage the power supply unit and can lead to injuries.
- Do not use excessive force when attaching the power connectors to the power supply unit. When correct connectors are used, excessive force is not need to install them.
- Keep power supply unit in dry environments away from humidity. If the power supply unit gets wet, immediately remove the AC power plug from the wall and the power supply unit. For your own safety, it is recommended that you do not use the power supply unit again after getting it wet.
- Avoid using low quality extension cables for the power supply side connectors as this can cause damage to metal and even lead to fire.
- This power supply unit has been tested for PC usage only. We cannot guarantee operation or safety performance when used for other applications.

Installing the Power Supply Unit

- Make sure the main power switch is turned off before installing the power supply unit.
- Secure the power supply unit within the PC case enclosure with 3 or 4 screws for grounding and stability purposes.
- Connect the power connectors according to the motherboard, graphics card, and other device user guides that will be used in the system.
- Connect the AC power connector.
- Switch on the power switch.

Troubleshooting

- If your system does not turn on after installing the power supply, please follow the troubleshooting guide as listed below:
- Make sure the AC power cord is correctly and firmly connected on both sides.
 - Make sure the power switch is turned on.
 - Make sure the main power connector and +12V power connectors are correctly connected to the motherboard.
 - If the power supply does not function properly, please contact our customer support immediately.

Warranty

Cooler Master guarantees this device to be free of defects in material and workmanship and provide a minimum 5-year hardware limited warranty for the power supply on the date of purchase. Please register on our official website to activate your limited warranty. This product was designed and intended for computer usage only. Using this device for other applications will void the warranty. If you are not familiar with computer hardware installation, please ask a professional for assistance.

This warranty only applies to the power supply unit and does not include accessories or connected components. This warranty only applies to damage caused by normal use and is void if it is determined that the device was damaged because of abuse, alteration, misuse, negligence, incorrect voltage supply, air/water pollution, accidents, or natural disasters.

In the event of any defects within the warranty period, please return product to the dealer or retailer from whom you purchased for a replacement/repair.

Please contact our customer service team for any technical or product related questions.

Limited Warranty Period: <http://www.coolermaster.com/service/warranty.html>
Customer Support: <https://account.coolermaster.com>

Pin Layout Connectors

تفاصيل مداخل ومخارج سي بي ايسل طابع
Конектори / 腳位配置接頭 / 针腳布局接口 / Конектори / a gozeleni kolkfo / Pin-Layout-Anschlüsse / Zuwendungs-Steckvorrichtungen / Distribución de patillas / Conectores / Agencement de broches de connecteurs / Pitokeltelitettim asetimla / Конектори за распоред иглица / Csatlakozók érintkező-kiosztása / Конектор Tata Letak Pin / Connettori, layout pin / ピンレイアウトコネクター / 핀 레이아웃 커넥터 / Pinbezzetting van connectors / Kontaktene pinnefordeling / Złącza układu styków / Conectores de pínos / Размещение штырьков / pin layout kontakter / Pin konektori / Pin Yerleşim Konnektörleri / جهات المداخل /

Main Power Connector

Pin1 Pin13	Pin	Description	Pin	Description
	1	+3.3V	13	+3.3V
	2	+3.3V	14	+3.3V
	3	COM	15	COM
	4	+5V	16	PS-ON
	5	COM	17	COM
	6	+5V	18	COM
	7	COM	19	COM
	8	P.G.	20	-----
	9	+5V _{sb}	21	+5V
	10	+12V	22	+5V
	11	+12V	23	+5V
	12	+3.3V	24	COM

+12V Power connector

Pin1	Pin5	Pin1	Pin5	Pin	Description
1	COM	5	COM	5	+12V
2	COM	6	COM	6	+12V
3	COM	7	COM	7	+12V
4	COM	8	COM	8	+12V

PCIe Power connector

Pin	Description	Pin	Description
1	+12V	5	COM
2	+12V	6	COM
3	+12V	7	COM
4	COM	8	COM

Serial ATA Power Connector

Pin	Description
1	+3.3V
2	COM
3	+5V
4	COM
5	+12V

Peripheral Connector

Pin	Description
1	+12V
2	COM
3	COM
4	+5V

Company Information

معلومات الشركة /Информация за компанията / 公司資訊 / 公司信息 / Informace o společnosti / Firmaoplysninger / Unternehmensinformationen / Στοιχεία εταιρείας / Información sobre la empresa / Informations de l'entreprise / Yhtion tiedot / Informácie o tvrtki / Vallati informáci / Informasi perusahaan / Informazioni sull'azienda / 회사정보 / 회사 정보 / Bedrijfsinformatie / Informazioni informazionali / 会社情報 / 会社情報 / Informacje o firmie / Informação da empresa / Информација о компанији / Företagsinformation / Informácie o kompaniji / Širket bilgileri / معلومات الشرك /

Europe – Cooler Master Europe B.V.
Lodewijkstraat 1b, 5652AC Eindhoven, The Netherlands
Tel: +31-(0)40-702-0900

Asia Pacific – Cooler Master Technology Inc.
8F., No. 788-1, Zhongzheng Rd., Zhonghe Dist., New Taipei City 23586, Taiwan (R.O.C.)
Tel: +886-2-2225-3517

North America – Cooler Master NA
2929 East Imperial Highway, Ste 110
Brea, CA 92821, USA
Tel: +1-888-624-5099

China – Cooler Master China
Room 2062, Floor 6, No. 421, Weiqing Rd., Jinshan District, Shanghai City, China
Tel: +86-21-51872177

إذا لم يعمل المخطط الخاص بك بعد تركيب موافر الطاقة يرجى اتباع دليل ا الميناء اداء

- يرجى التأكد من أن سلك الطاقة التيار المتردد موصول بشكل صحيح
- يرجى التأكد من أن مفتاح الطاقة قد تم التشغيل
- يرجى التأكد من أن موصل الطاقة الرئيسي وموصلات الطاقة +12V أو +5V
- إذا لم يعمل موافر الطاقة بالشكل الصحيح، يرجى الاتصال فوراً بدعم العملاء الخاص بنا

هذا المنتج مصمم للاستخدام الكمبيوتر فقط إن استخدام هذا الجهاز في أي تطبيقات أخرى، سيُطيل هذا الضمان إذا كنت غير متأكد من كيفية تركيب أي الكمبيوتر، يرجى طلب مساعدة مهنية.

يسري الضمان على وحدة إمداد الطاقة ولا يشمل الملحقات. يبري الضمان على التثبيت المبدئية خلال الاستخدام العادي. ونضع أيضاً إلتزاماً إن تبين أن الجهاز قد تعرض للثلف بسبب إساءة الاستخدام أو التبديل أو الاستخدام الخاطئ أو الإهمال أو إمداد جهد كهربائي غير صحيح أو ثوبت الهواء الزائد، أو الحوادث أو الكوارث الطبيعية.

في حالة حدوث أي خطأ أثناء فترة الضمان، يرجى إيداع المنتج إلى وكيل أو بائع التجزئة الذي اشترت منه. إلتزامنا بالحد الأدنى.

(Cooler Master Technology Inc., 8F., No. 788-1, Zhongzheng Rd., Zhonghe Dist., New Taipei City 23586, Taiwan (R.O.C.))

Telephone: +886-2-2225-3517 (standard international call charges apply.)

يرجى الاتصال بفريق دعم العملاء الخاص بنا للإجابة على أي استفسارات تقنية متعلقة بالجهاز.

فترة الضمان المحدود: <http://www.coolermaster.com/service/warranty.html>

دعم العملاء: <https://account.coolermaster.com>

أشعارات:                                                     

[illegible]