

MUSIC POD



RGB
Color



HD
Sound



Carrying
Lanyard



SPHERE SPEAKER **4h** SB32 User Manual

INTRODUCTION

Music Pod is exactly the type of speaker you need on hand at all times. It is extremely lightweight and durable. Its strap is specially engineered to make it easier to carry and more secure. It has 4 fun color modes as well as soft mesh outer protection. I think the best part about this speaker is just how small and portable it is. But it packs such a punch you wouldn't assume it could fit so easily in your hand!


PACKAGE CONTENTS

- 1x Speaker
- 1x Charging Cable



1

PRODUCT OVERVIEW

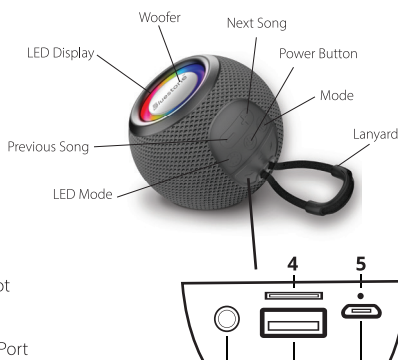


1. AUX-In Slot
2. USB Slot
3. Charging Port
4. TF/Micro SD Card
5. LED Indicator

2

SPECIFICATIONS & FEATURES

- Bluetooth V5.3
- TWS Ready
- Bluetooth Range: 33 ft
- Battery Capacity :1500mAh
- Playtime : Up to 4 hours of play
- Input : AUX/USB/Micro SD
- Charge with Micro USB
- 5W Speaker
- FM Radio
- Hands- Free Calling
- Woofer

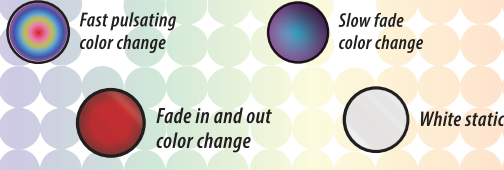

3

HOW TO USE

Using MicroSD (TF) Card Slot - Max Capacity is 16GB

- 1) Insert the Micro SD (TF) Card or USB Drive preloaded with songs.
- 2) Speaker will automatically start playing songs
- 3) During playback, short press the Previous button to go back to the previous track, press the Next button to skip to the next track.

Using Bluetooth

- 1) Power on the product to enter into BT mode.
- 2) Search for and select "Music Pod" on your external Bluetooth device.
- 3) The speaker will issue an indication tone after successful connection.

Using Radio

- 1) Press the mode button and choose FM mode.
- 2) Short press Play/Pause button to begin scanning for all available stations.
- 3) Short press it again to stop searching.
- 4) Press Next button to select the next stations.

Using AUX

- 1) Power on the unit, and cycle through Modes to the AUX IN selection.
- 2) Plug your AUX Cable in the AUX IN Port and use device to select/play music.

4

CARE AND SAFETY

- Do not use this unit for anything other than its intended use.
- Keep the unit away from heat source, direct sunlight, humidity, water or any other liquid.
- Do not expose the device to extremely high or low temperatures, as it may damage the battery.
- Do not operate the unit if it has been wet or moist to prevent against electric shock and/or injury to yourself and damage to the unit.
- Do not use the unit if it has been dropped or damaged in any way.
- Repairs to electrical equipment should only be performed by a qualified electrician. Improper repairs may place the user at serious risk.
- Keep the unit out of reach of children.
- This unit is not a toy.

BATTERY DISPOSAL:

This product contains a lithium polymer battery. Lithium polymer batteries are environmentally safe when fully discharged. Please refer to your local and state laws for battery disposal procedures.