

Manual for electric nail clippers



Safety matters (Please read this carefully for the first time)

- ▲ Babies under 1 year old are prohibited from using, and children aged 1-12 must be operated and used by a guardian.
- ▲ The blade is sharp and should be used by children under adult supervision.
- ▲ Be sure to place it properly to prevent children from touching or playing, in order to avoid danger.
- ▲ Do not touch any body parts other than nails with the blade to avoid danger. (During continuous operation of the equipment, please do not lean against anything other than nails, such as clothing and accessories. Close to the blade, otherwise it may damage the blade or cut the foreign object inside the blade, causing the blade to be damaged or cut.)


Matters needing attention (Please read this carefully for the first time)

- For the first time, please charge the device for at least 1 hour to ensure that the internal battery of the device is charged and long. Please charge it every three months when not in use.
- This product is not suitable for trimming other parts of the body other than nails.
- Do not use this product when there are problems such as wounds around the nail.
- Do not wash or soak this product with water to clean, away from water and the sockets.
- Keep out of reach of children.
- Do not use this product while charging.

Prohibit

- Do not immerse the product in water or any other liquid.
- This product has a built-in rechargeable battery. Do not put it into the fire or charge it at high temperature.
- Do not knock or drop the product. If the product is damaged due to collision or falling, please stop using it.
- Do not transform, disassemble or repair this product by yourself.

Product introduction

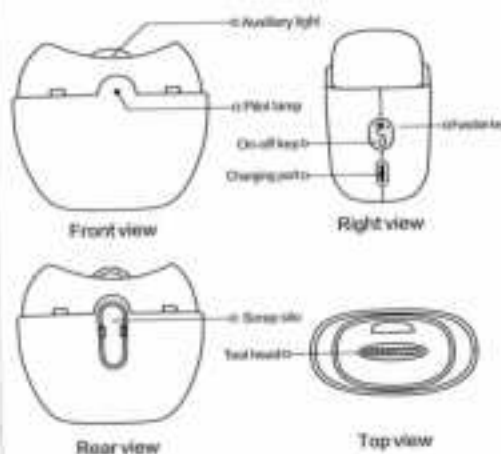

Usage method

1. Switch

- Power on: Press and hold the on key for about 3 seconds (green indicator light on).
- Shutdown: In the startup state, hold down the power button for about 3 seconds to shut down the device.
- If no operation is performed for more than 15 seconds when the device is powered on, the device will automatically shutdown.
- Gear switching: Press the switch key and device when the device is on/switch between 1st (low) and 2nd (high gear), 1st (low/Speed). Green indicator lights once, 2nd gear (high gear) green finger. The indicator lights twice.



2. Use

- Remove the front cover of the device and ensure that the device has working fingers. The side of the indicator light is facing up (the side with the nail dust bin is facing down).
- Place the nail to be trimmed into the opening of the blade and push the nail slightly in the direction of the blade while moving the nail or device slowly (not too fast) to ensure that the entire nail is trimmed.



Tip:

- Do not stay in the same place for a long time to avoid excessive pressure of the area.