

COSTWAY
www.costway.com




COSTWAY®

USER'S MANUAL
Twin Tub Washing Machine

THIS INSTRUCTION BOOKLET CONTAINS IMPORTANT SAFETY INFORMATION. PLEASE READ AND KEEP FOR FUTURE REFERENCE.

Please give us a chance to make it right and do better!
Contact our friendly customer service department for help first.
Replacements for missing or damaged parts will be shipped ASAP!

Follow Costway
Visit us: www.costway.com




COSTWAY
www.costway.com

Product Description

- ◆ **Plastic shell design (selected)**
The double barrel washing machine adopts the construction of whole plastic outer cabinet. This kind of product has the characteristic of durable and will never be rusted. The outer cabinet of the machine is arch-designed so that it looks more bright and beautiful.
- ◆ **Metal shell design (selected)**
The metal shell is more stronger than the plastic one, inside plastic case rust proof with novelty design and safe, compared with other twin-tub washing machines. It has a nice shape, beautiful and attractive and it takes the fancy of consumer. Steel and alloy-aluminum body for choice.
- ◆ **Water fall design (selected)**
During washing, the big water-fall flow through the different directions to wash clothes, it saves wash time and wash clothes more clean.
- ◆ **Hand washing design:**
There are small pulsators add to the big pulsator, image the hand washing, which can cause strong water current to make the clothes clean.
- ◆ **Large capacity design:**
It may solve the whole family washing puzzlement.
- ◆ **Super-quiet design:**
It adopts low noise drive system with balanced running, more quiet washing.
- ◆ **Fine hair filter design:**
It may effectively get rid of fine hair scraps in washing course, keep clothes clean.
- ◆ **Up drain design (selected)**
- ◆ **Different water level for chosen**
- ◆ **Different water current for chosen**

COSTWAY
www.costway.com

Structure Layout & Name of the Parts

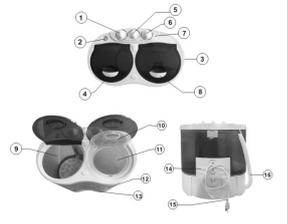

1. Wash timer
2. Wash water inlet
3. Hanging hook
4. Wash lid
5. Wash selector
6. Spin timer
7. Control panel
8. Spin-dry lid
9. Cabinet
10. Spin-dry inner lid
11. Spin-dry basket
12. Outer shell
13. Machine stand
14. Back cover
15. Cable and plug
16. Drainpipe

COSTWAY
www.costway.com

Washing Instruction

- ◆ **Prepare**
 1. The machine should be placed on flat ground. The bottom window of washing machine can not be blocked when use it.
 2. This machine requires to use the an bipolar plug to assure the safety of the machine when working. Do not connect the ground wire to the water pipe, gas pipe, heating pipes and so on.
 3. Lay down the overflow hose. (Do not lay down the hose when machine is on up drain function.)
 4. Use the water hose to connect the water tap to the water inlet.
 5. According to the material and weight of cloth, adjust the level of water.
 6. Switch on power.
 7. Before washing, operator must separate light colour clothes and faded colour clothes.
- ◆ **Washing**
 1. Put the clothes and correct amount of detergent into the tub. (Excessive detergent will make it difficult to get rid of the suds and insufficient rinsing may result)
 2. Turn on the tap valve, inlet water and adjust the water level according to the requirement.
 3. Set the wash drain-switch to strength or tender according to the material and weight of clothes.
 4. Set the wash timer knob to the proper position and start to wash.
 5. After wash, set the wash-drain switch to the drain position to drain water.
 6. It is strictly prohibited to put feather clothes into the Spin-tub to dehydrate.
- ◆ **Spin-drying**
 1. After drain of water, put the clothes to the right spin-tub and hold down the clothes.
 2. Put down the safety lid and spin-dry lid in turn.
 3. Set the spin-dry timer to the proper time according to the clothes.
- ◆ **Drain washing**
 1. After drying, inlet water to the spin-dry barrel for 20-30 seconds.
 2. According to the spin-drying process, dry the clothes for 1 minute, then spin 1-2 minutes again.
- ◆ **Rinsing**
 1. After drying as the spin-dry tub finally stop, open the spin-basket, safety lid and spin-dry lid in turn, take out the clothes to the washing tub and prepare to rinse.
 2. Besides no more putting the detergent, the rinsing process have no difference with the washing process.

COSTWAY
www.costway.com

Attention

- For your safety be sure to connect the ground. If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.
- Never put your hands into the wash and spin dry tub which is still in rotation, to avoid accidents even if the wash and spin-dry tub rotate very slowly, pay special attention to children.
- Never wash the textile, which contain volatile materials in case the machine might be damaged or water might be blocked to drain out.
- The timer should be turned clockwise.
- When abnormal sound movements is observed during operation, stop the machine as soon as possible.
- When washing the water temperature should be not more than 31°F, otherwise it may damage components.
- Children should be supervised to ensure that they do not play with the appliance.

● This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.

COSTWAY
www.costway.com

Maintenance

- Ensure that the machine is unplugged after usage

Do not place the washing machine near fire hazard.

Do not put any hot or heavy objects on the machine.

When cleaning the main body, use soft cloth only. Steel bristle or organic solvent might cause damage to the finishing.

Do not place the machine outdoor, under hot sun or in damp places.

After Use

1. Disconnect the plug and place at the proper position.
2. Drain off the water, which remains in the tub.
3. Turn over the filter and wash it.
4. Bring in the water inlet hose and hang the drain hose.

When the machine is on updrain function bring in the water inlet hose only. Put all lids on. In addition place the machine on a well-ventilated area.

COSTWAY
www.costway.com


Trouble Shoot Table

| Problem | Reason | Solution |
|--------------------------------|--|------------------------------------|
| The pulsator cannot rotate | Power out or switch off | Switch on plug |
| | Transmission belt burst | Assemble the transmission belt |
| | Belt pulley become flexible | Tighten the belt |
| The pulsator rotate too slowly | Pulsator is blocked by something | Remove the blockage |
| | Belt become flexible | Tighten the belt or replace it |
| Abnormal noise and vibration | The flexible screw of motor is loose | Tighten the belt and the screw |
| | The clothes in the spin-dry tub is unbalanced | Place the clothes neatly |
| Water leaks from wash tub | Something is between pulsator and wash tub | Remove it |
| | Wash tub do not tighten with hose | Tighten it |
| Spin-dry basket do not rotate | Loose switch | Adjust the contactor or the switch |
| | The fixed screw of spin-dry basket or shaft coupling is loose | Tighten the screw |
| | The shaft of spin-dry basket is turned by the textile | Remove the textile |
| The spin-tub do not drain | Brake dragline is relaxed | Tighten the dragline |
| | Something drops into the place between spin tub and out basket | Remove it |

● Attention: if above problems cannot be solved, please call qualified repair person.

COSTWAY
www.costway.com

 Electrical Circuit Diagram



Rated Voltage: 110-120V- Rated Frequency: 60Hz
Water-Proof Grade: IPX4 Wash Input Power: 150W
Max Wash Capacity: 9LBS Spin Input Power: 135W
Max Spin Capacity: 7LBS Input Power: 285W

Packing List

| Name | Quantity |
|--------------------------|----------|
| Twin-tub washing machine | 1 |
| Spin-dry safe lid | 1 |
| Affusion pipe | 1 |
| User manual | 1 |

COSTWAY
www.costway.com

Welcome to visit our website and purchase our quality products!

Your suggestions and comments for COSTWAY are really important to us! We sincerely solicit you to go back to our shop and leave a good rating in just a simple click. It would be quite encouraging if you could kindly do so like below:

★★★★★ Great products or fast delivery, easy setup, and working without any issues.

February 24, 2019

With your inspiring rating, COSTWAY will be more consistent to offer you EASY SHOPPING EXPERIENCE, GOOD PRODUCTS and EFFICIENT SERVICE!

US office: Fontana, California
UK office: Ipswich



- Reward Points
- Exclusive Customer Service
- Personalized Recommendations
- Permanent Shopping Cart
- Order History

5 Star Rating

★★★★★

We would like to extend our heartfelt thanks to all of our customers for taking time to assemble this product and giving us valuable feedbacks.

THANK YOU