 



Installation Manual



Notes


- This fitting requires 220-240V AC/50Hz power input to the driver.
- Do not interchange any parts of this fitting.
- It's recommended to have some space (at least 75mm) around the fitting for air ventilation to extend product lifetime.
- Allow a minimum distance of between fitting and illuminated subject of 800mm.
- Do not install the fitting near heat source and do not touch fitting when in use.
- Do not install any inductive loads such as exhaust fans etc. within the same lighting circuit of the current fitting. Issues caused by such connections will not be covered under our warranty policy.
- If the external flexible cable or cord of this luminaire is damaged, it shall be exclusively replaced by the manufacturer or his service agent or a similar qualified person in order to avoid a hazard.
- If you have any questions about the installation of this product, please contact Mondolux.

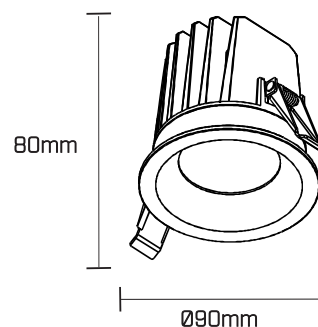


Installation Steps

1. Ensure the mains power is turned off.
2. Cut required holes in ceiling. Ensure minimum space requirements between fitting and driver. See picture 1.
3. Pass the power supply wires through the cutout and plug into mains socket. In case of open flex, please use water proof connectors. See picture 2.
4. Connect the driver to the light fitting using the quick connectors. See picture 3.
5. Hold the spring clips and place the fitting into ceiling. Release the spring clips and secure the fitting in place. See picture 4.
6. Installation is complete. Turn the mains on. See picture 5.


Picture 1

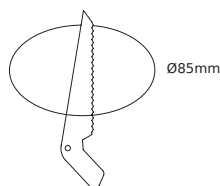


Picture 2

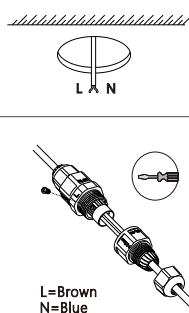

Picture 3

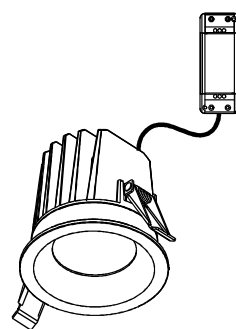

Picture 4

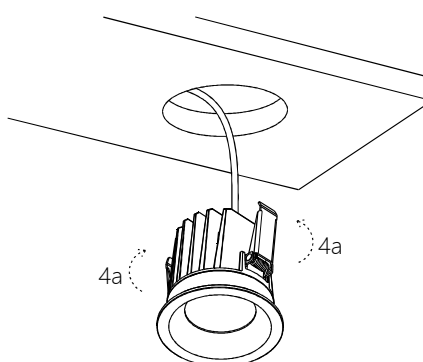

Picture 5

