

# **MECOOOL®** *AX KM9PRO DELUXE*

## USER MANUAL

androidtv



 Google Assistant

 Google Play

 Chromecast

 YouTube

 prime video

androidtv  
**10.0**



*Android TV, Google, Youtube, Prime Video*


## ACCESSORIES




**AX MECOOL KM9PRO**




**USER MANUAL**

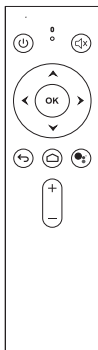

**VOICE REMOTE**

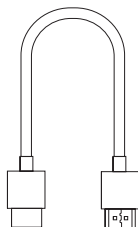


**HDMI CABLE**

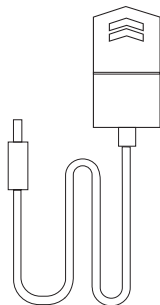


**POWER SUPPLY**

## CONNECTION

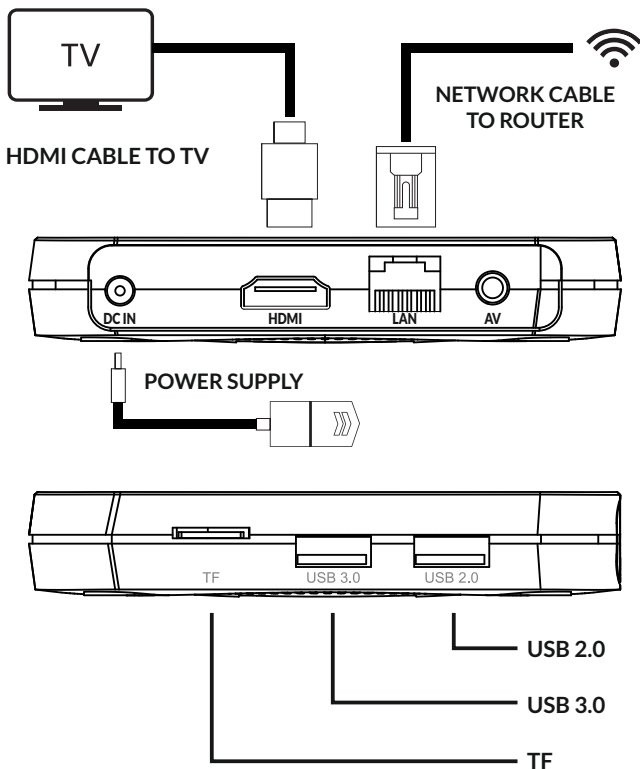

You can connect an external hard drive for media playback or various input devices (e.g. mouse, keyboard, etc.) to the USB ports. You can insert a memory card at the TF input.


## VOICE REMOTE

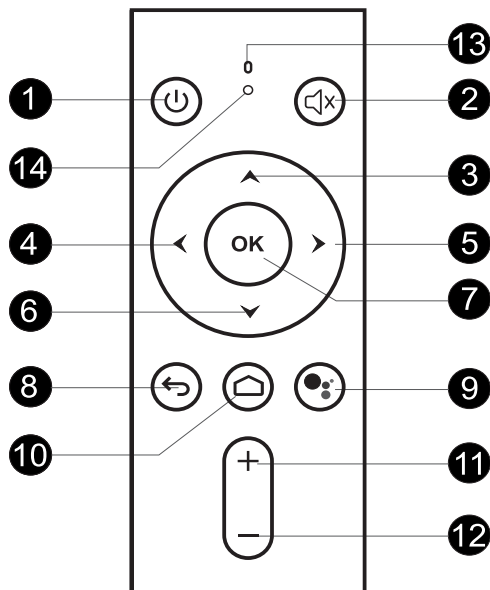

- |                     |                    |
|---------------------|--------------------|
| 1 POWER (on/off)    | 8 Return           |
| 2 Mute              | 9 Voice Control    |
| 3 Navigate to UP    | 10 Show Start menu |
| 4 Navigate to LEFT  | 11 Volume up       |
| 5 Navigate to RIGHT | 12 Volume Down     |
| 6 Navigate to DOWN  | 13 Microphone      |
| 7 Button to CONFIRM | 14 LED Indicator   |

## FIRST INSTALLATION

During the initial installation, you will be guided through the standard settings. The first thing to do is to pair the remote control with the device. To do this, press and hold the volume button „-“ and simultaneously press the OK button until the LED lamp flash.

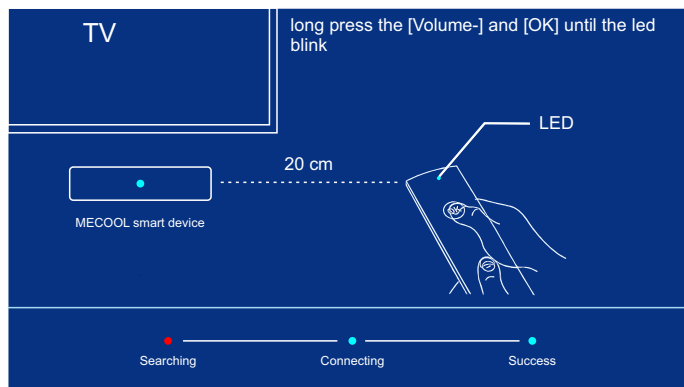


If the connection is successful, you will now be taken to the next **language setting** menu. Use the ▲ ▼ buttons on your remote control to navigate to your desired language e.g. English (United Kingdom) and confirm your selection with the **OK** button.

Now the next menu is for quickly set up your TV with your Android phone. You can select between „**Continue**“ or „**Skip**“. Navigate with the buttons ▲ ▼ to „**Continue**“ and press the **OK** button. Follow the instructions:

1. On your Android Phone open the pre-installed app „Google“
2. Type or say „OK Google, set up my device“
3. Tap **KM9PRO** on the list

Next, configure your **internet connection**. If you have not connected a network cable, the device searches for all available **WiFi networks**. Use the ▲ ▼ buttons on your remote control to navigate to your WiFi network and confirm your selection with the **OK** button. Next, enter your **WiFi password** using the navigation buttons ▲ ▼ ◀ ▶ on your remote control. To do this, navigate to the letters / numbers / characters and confirm them with the **OK** button. When you have completely entered your WLAN password, navigate to the (→) symbol and confirm this by pressing the **OK** button. The connection to your WiFi network is now established.

To make the most of your the TV and the device, you must now login to your **Google account\***. To do this, press the **OK** button for "**Sign In**". Now choose between the registration options "**Use phone or computer**" or "**Use remote control**" by pressing the navigation buttons ▲ ▼ and confirm your selection with the **OK** button. In the example, select "**Use remote control**":

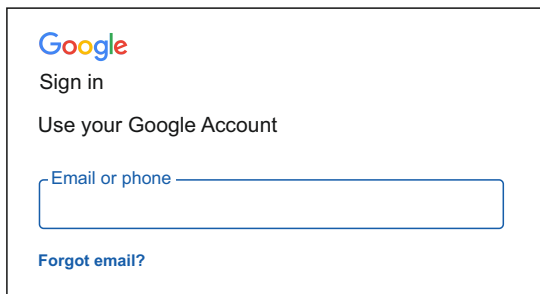A screenshot of the Google sign-in interface. At the top is the Google logo. Below it is the text "Sign in". Underneath is the text "Use your Google Account". There is a text input field with the placeholder text "Email or phone" and a blue border. Below the input field is a link that says "Forgot email?".

Next, enter your **Google email\*** or **telephone number\*** using the navigation buttons ▲ ▼ ◀ ▶. To do this, navigate to the letters / numbers / characters and confirm them with the **OK** button. When you have completely entered your Google E-Mail or telephone number, navigate to the (→) symbol and confirm the selection with the **OK** button.

\* requires an existing Google account (registration at [www.google.com](http://www.google.com))

Now enter your Google password using the navigation buttons ▲▼◀▶ on your remote control. To do this, navigate to the letters / numbers / characters and confirm them with the **OK** button. When you have entered your Google password completely, navigate to the (→) symbol and confirm the selection with the **OK** button. Now accept the „**Terms of Service**“ by pressing the **OK** button.

Now choose whether you want to allow Google access to your **location**. To do this, use the ▲▼ buttons on your remote control to navigate between „**Yes**“ and „**No**“. Confirm your selection by pressing **OK**.

Now choose whether you want to allow Google to **help improve Android**. To do this, use the ▲▼ buttons on your remote control to navigate between „**Yes**“ and „**No**“. Confirm your selection by pressing **OK**.

You will now see the **Google voice control assistant**. Confirm „**Continue**“ by pressing the **OK** button. Confirm the next menu „**A few things that you should know**“ by pressing the **OK** button for **Continue**.

Now decide whether you want to „**Get personal results**“. To do this, use the ▲▼ buttons on your remote control to navigate between „**Turn on**“ and „**No, thanks**“. Confirm your selection by pressing the **OK** button.

Now decide whether you want to get the most out of the „**Google Assistant**“. To do this, use the ▲▼ buttons on your remote control to navigate between „**Yes**“ and „**No**“. Confirm your selection by pressing the **OK** button.

Now decide whether you want to „**Install additional apps**“ from the Google Play Store. Navigate to the specified apps with the navigation buttons ▲▼◀▶ and „**activate**“ or „**deactivate**“ them by pressing the **OK** button. When you have made your selection, use the ▲▼◀▶ buttons to navigate to „**Continue**“ and press the **OK** button.


You have now made the standard settings. The device now shows you some functions. Select one page further by pressing the **OK** button. The device is now ready for operation and starts with the start menu.


## SETTINGS

To make settings, navigate in the start menu with the navigation buttons ▲▼◀▶ to the cogwheel at the top right. Pressing the **OK** button opens the settings menu. You can make all settings here, such as:


Network & Internet	Manage the Network, Proxy, IP, ...
Accounts & Sign-In	Manage Google-Accounts
Apps	Manage the Apps
Device Preferences	Date, Time, Language, Sound, Storage, ...
Remotes & Accessories	Manage the devices (Keymoard, Mouse, ...)
Advance Settings	Display, HDMI CEC, Audio, Picture, etc.)

## THE START MENU

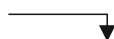Settings 

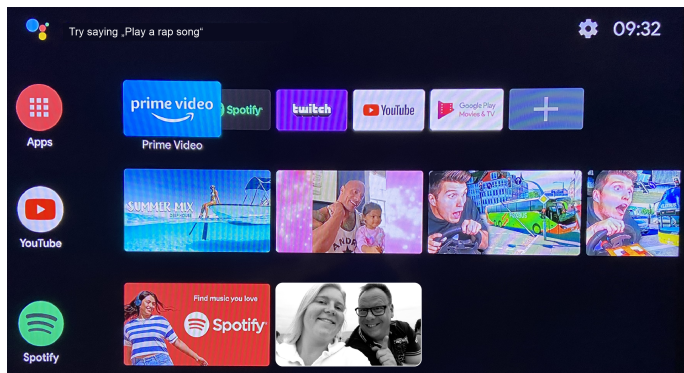

## VOICE COMMANDS

The device uses the Google Android TV system. Log in via your Google account to use the function. By holding the button , you can give voice commands or ask questions.

Examples:

Hold down the button  and say:

- „How is the wather tomorrow in London?“
- „Tell me a joke“
- „Open YouTube“.
- „How high is the Mount Everest“?
- „Start prime video“.
- „How many residents has London“?

## UPDATE FIRMWARE / SOFTWARE

To download the current firmware or operating software, navigate to the menu **settings**. Use the ▲ ▼ buttons to navigate to the menu „**Device Preferences**“. Confirm this by pressing the **OK** button. Use the ▲ ▼ buttons to navigate to the menu item „**About**“. Confirm this by pressing the **OK** button. Use the ▲ ▼ buttons to navigate to the menu item „**UPDATE**“. Confirm this by pressing the **OK** button. Use the ▲ ▼ buttons to navigate to the menu item „**OTA Update**“. Confirm this by pressing the **OK** button.

**Important:** NEVER turn off the device during an UPDATE. Do not download third party software! For manual installation, contact the manufacturer or your seller.

## FCC WARNING

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna
- Increase the separation between the equipment and receiver.  
Connect the equipment into an outlet on a circuit different from that to which the receiver is connected
- Consult the dealer or an experienced radio/TV technician for help.

### Caution:

Any changes or modifications to this device not explicitly approved by manufacturer could void your authority to operate this equipment.

This device complies with part 15 of the FCC Rules.  
Operation is subject to the following two conditions;

- (1) This device may not cause harmful interference
- (2) This device must accept any interference received, including interference that may cause undesired operation.

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with minimum distance 20 cm between the radiator & your body

## TROUBLESHOOTING

Problem	Lösung
No TV signal	<ul style="list-style-type: none"> <li>- Make sure that the LED lights up blue after switching on the device. If the LED on the device is red, press the power button.</li> <li>- Make sure that the cable connection to the TV is correct</li> <li>- Make sure that you have selected the correct TV input source on the TV (see your TV instructions)</li> </ul>
No WiFi connections	<ul style="list-style-type: none"> <li>- Make sure that you have activated WLAN in the settings under Networks &amp; Internet.</li> <li>- Restart the device</li> <li>- If the device is connected with a LAN cable, the WLAN connection is automatically disconnected.</li> <li>- Try another network (e.g. hotspot) If necessary, set up a separate WLAN network with your mobile phone for test purposes.</li> </ul>
Unable to use voice funktion	<ul style="list-style-type: none"> <li>- Make sure that the remote control is connected in the settings under Remote controls &amp; accessories.</li> <li>- If necessary, replace the batteries in the remote control.</li> <li>- Make sure you are connected to the Internet. Start a YouTube video to try it out.</li> </ul>
The Remote does not respond sometimes	<ul style="list-style-type: none"> <li>- If necessary, replace the batteries in the remote control.</li> <li>- Make sure that the maximum distance between the device and the remote control is 6m</li> <li>- Make sure that the remote control is connected in the settings under Remote controls &amp; accessories.</li> </ul>
The Product does not boot the system	<ul style="list-style-type: none"> <li>- Contact your seller or manufacturer</li> </ul>
Picture OK, but no sound	<ul style="list-style-type: none"> <li>- Make sure that the mute button is not active</li> <li>- Adjust the volume louder (volume +)</li> <li>- When playing various video formats, check whether they are supported by the device.</li> <li>- Check the cable connection to your TV set</li> </ul>
An APK file cannot be installed or is not recognized	<ul style="list-style-type: none"> <li>- Make sure it is an original file from GOOGLE PLAY STORE. Third-party files are not supported.</li> <li>- This product is a Google ATV system and does not support mobile versions of an APK.</li> </ul>

## DECLARATION OF CONFORMITY

The manufacturer,  
**AX TECHNOLOGY Sp. z o.o. Sp.k. ul. Szczecińska 1W ; 72-003 Dobra, Poland,**  
hereby declares that the equipment complies with the essential  
requirements and other relevant provisions. The complete declaration of  
conformity can be requested from the manufacturer at any time.

## CE MARK

This device is called the conformity of the EU directives and  
the legal recognition of their conformity. Conformity with  
the guidelines is confirmed by the CE mark.



## Android TV

Android TV is a trademark of Google LLC



The actual appearance of the product may differ from the photograph of  
the instructions and on the packaging. All information is provided without  
warranty. Printing errors, mistakes and changes reserved.

We expressly reserve the right to make technical changes or changes in  
operation that serve to improve the device or that increase the safety  
standard - even without a separate announcement.

In the event of a technical defect, never try to repair the device yourself.  
Opening the device voids the guarantee or warranty and there is a risk of  
receiving an electric shock (even if the device is de-energized). If you have  
any problems with the device, please contact the manufacturer or your  
seller.