
Accessories List

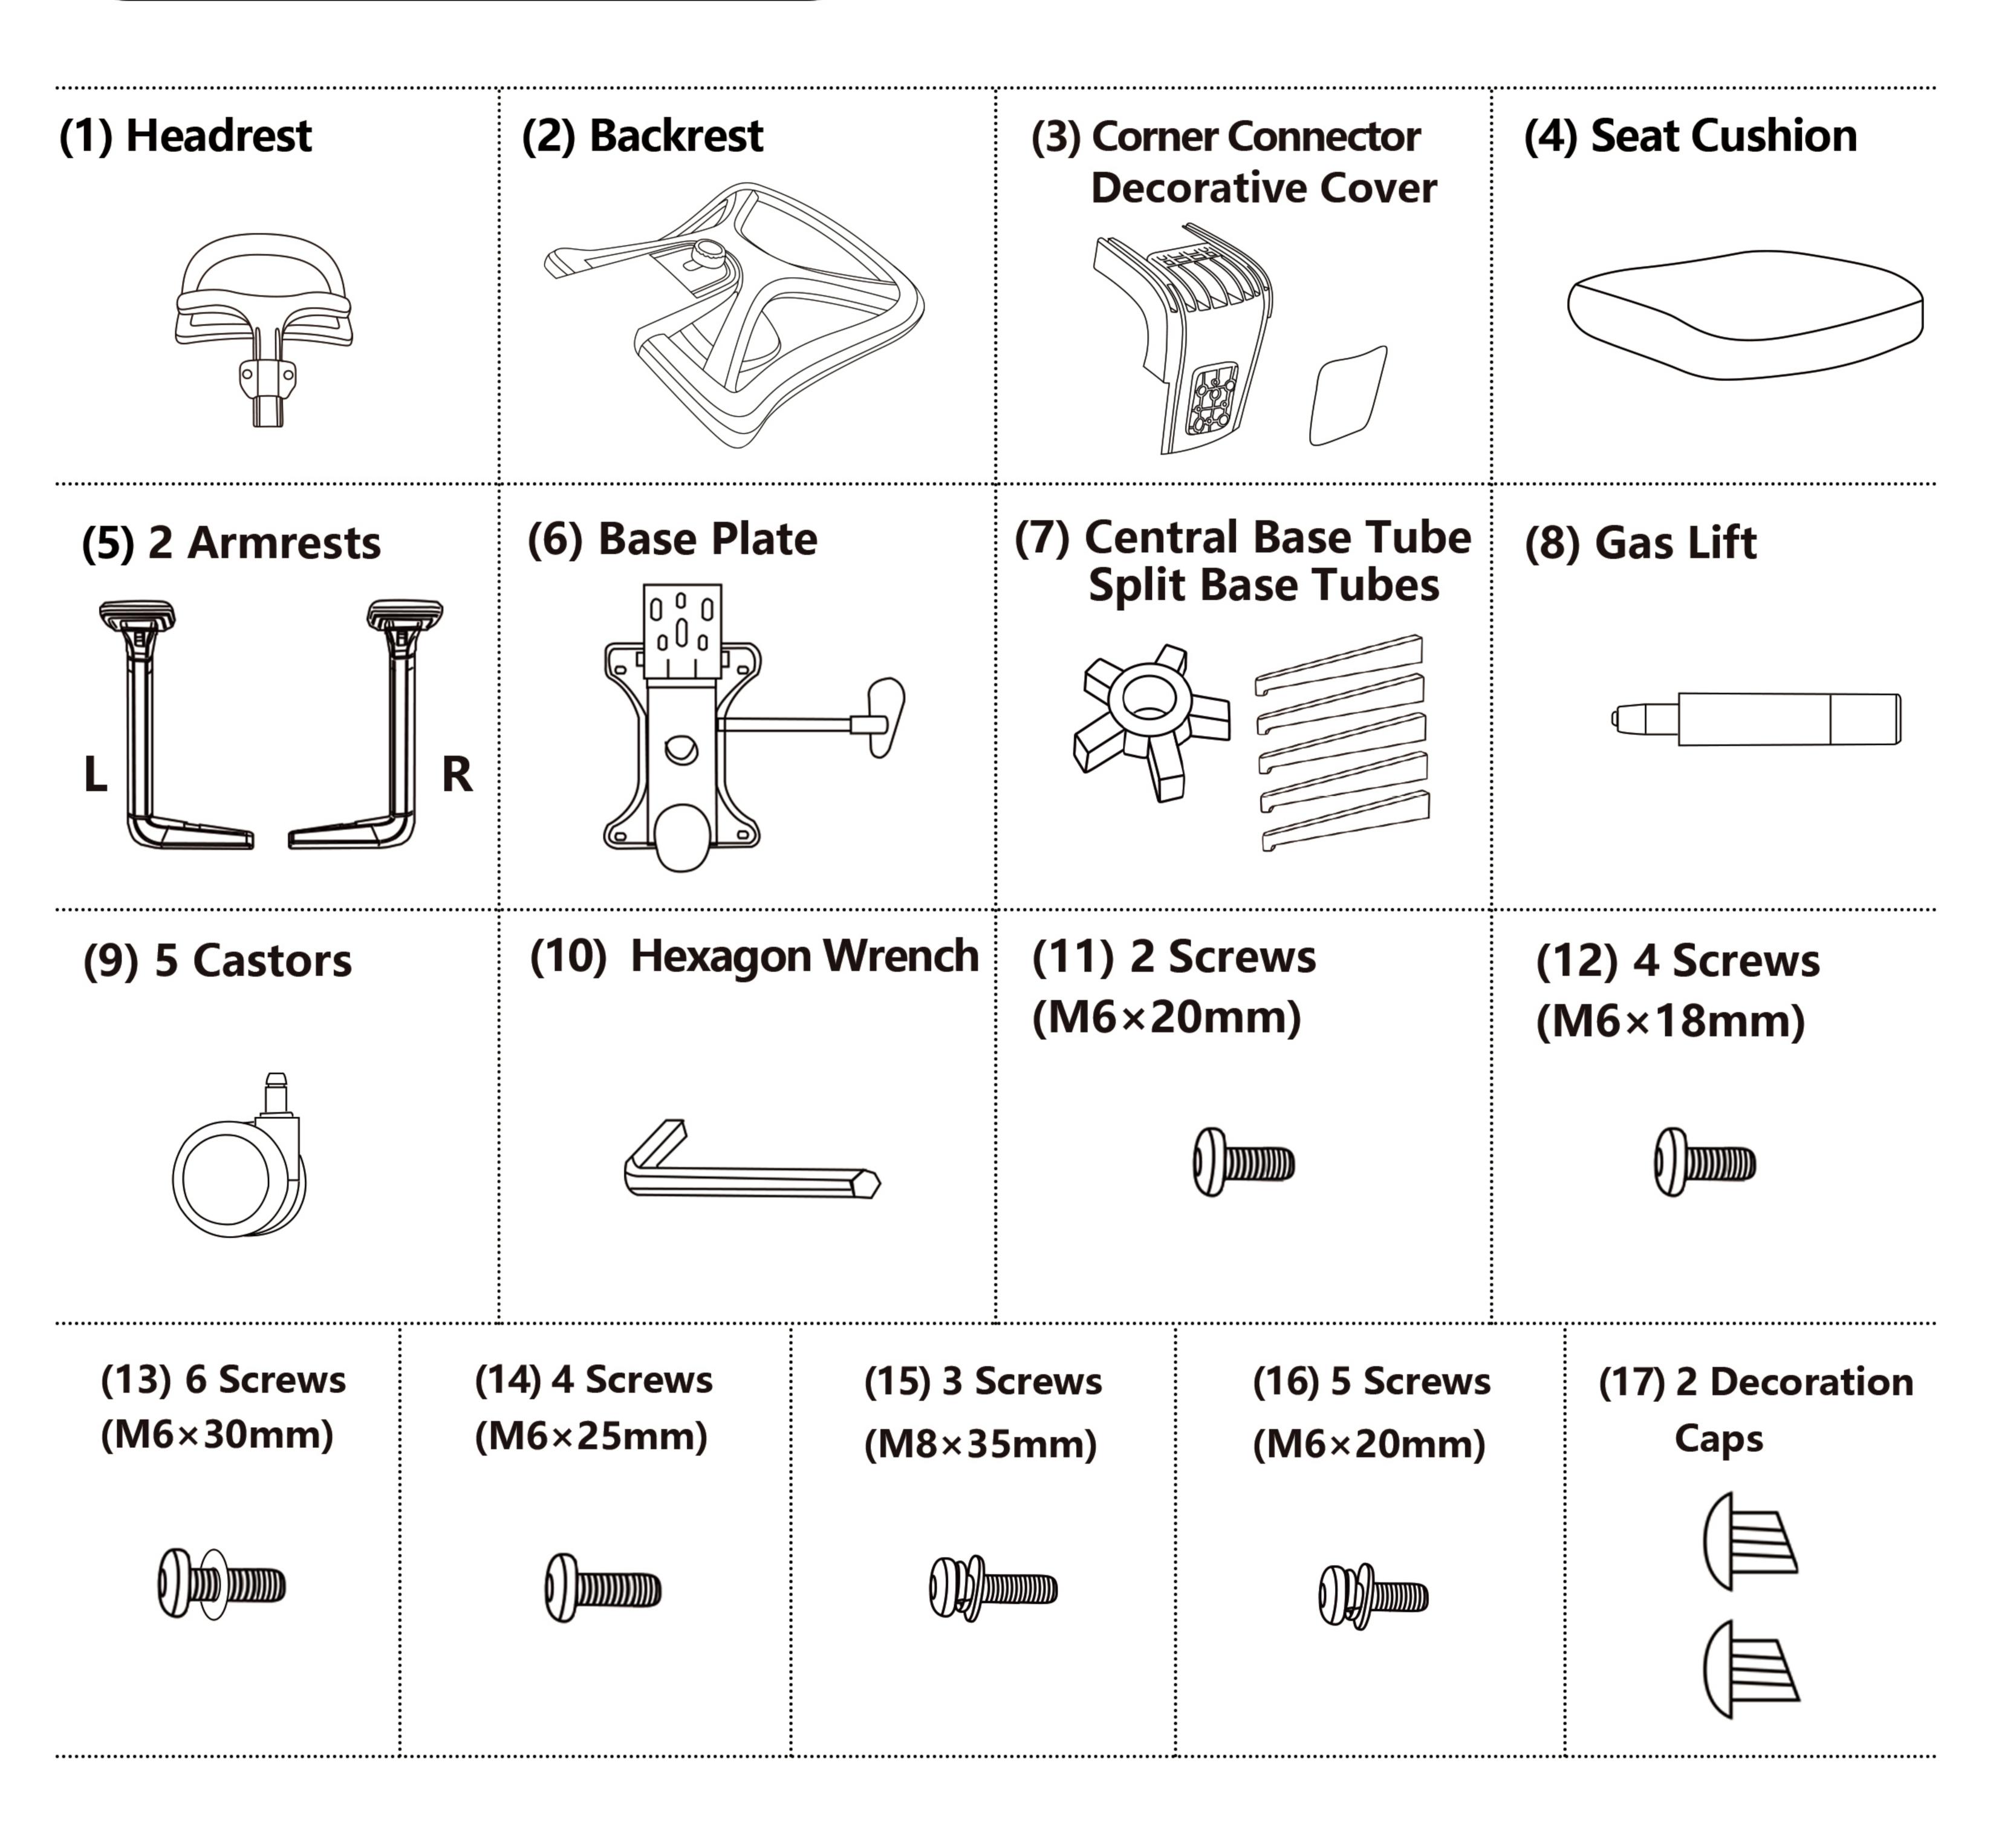

Notice [If any question, contact kerdom-service@outlook.com]

- This is a single chair, so please do not seat 2 or more persons, just seat only one person.
- Do not stand on the chair.
- Do not sit reverse or sit outside of the seat cushion.
- Check the screws once every 6 months, to make sure the screws are tight. Do not use the chair when the screws are loose.
- Please assemble according to the instructions.

nstructions for Use



UP Down Lumbar Support Adjustment 3.93 "

Lockable Tilt Adjustment



Headrest Adjustment

Up and Down Adjustment



Armrests 3D adjustment

Activate Your Warranty Now!


KERDOM serves you wholeheartedly. Before using the product, we recommend that you scan the QR code and activate the warranty first, so that we can bring you a better aftersales guarantee and more considerate service.

Assembly Instruction

Please assemble in a wide and flat place.


Step 1

Take out Split Base Tube (7) and Central Base Tube (7). Insert Split Base Tube (7) into Central Base Tube (7) as shown. You can see there are two screw holes. Align with the holes, tighten Screws M6X20mm (16) with Hexagon Wrench (10) to fix 5 Split Base Tube (7) to Central Base Tube (7). Repeat five times.

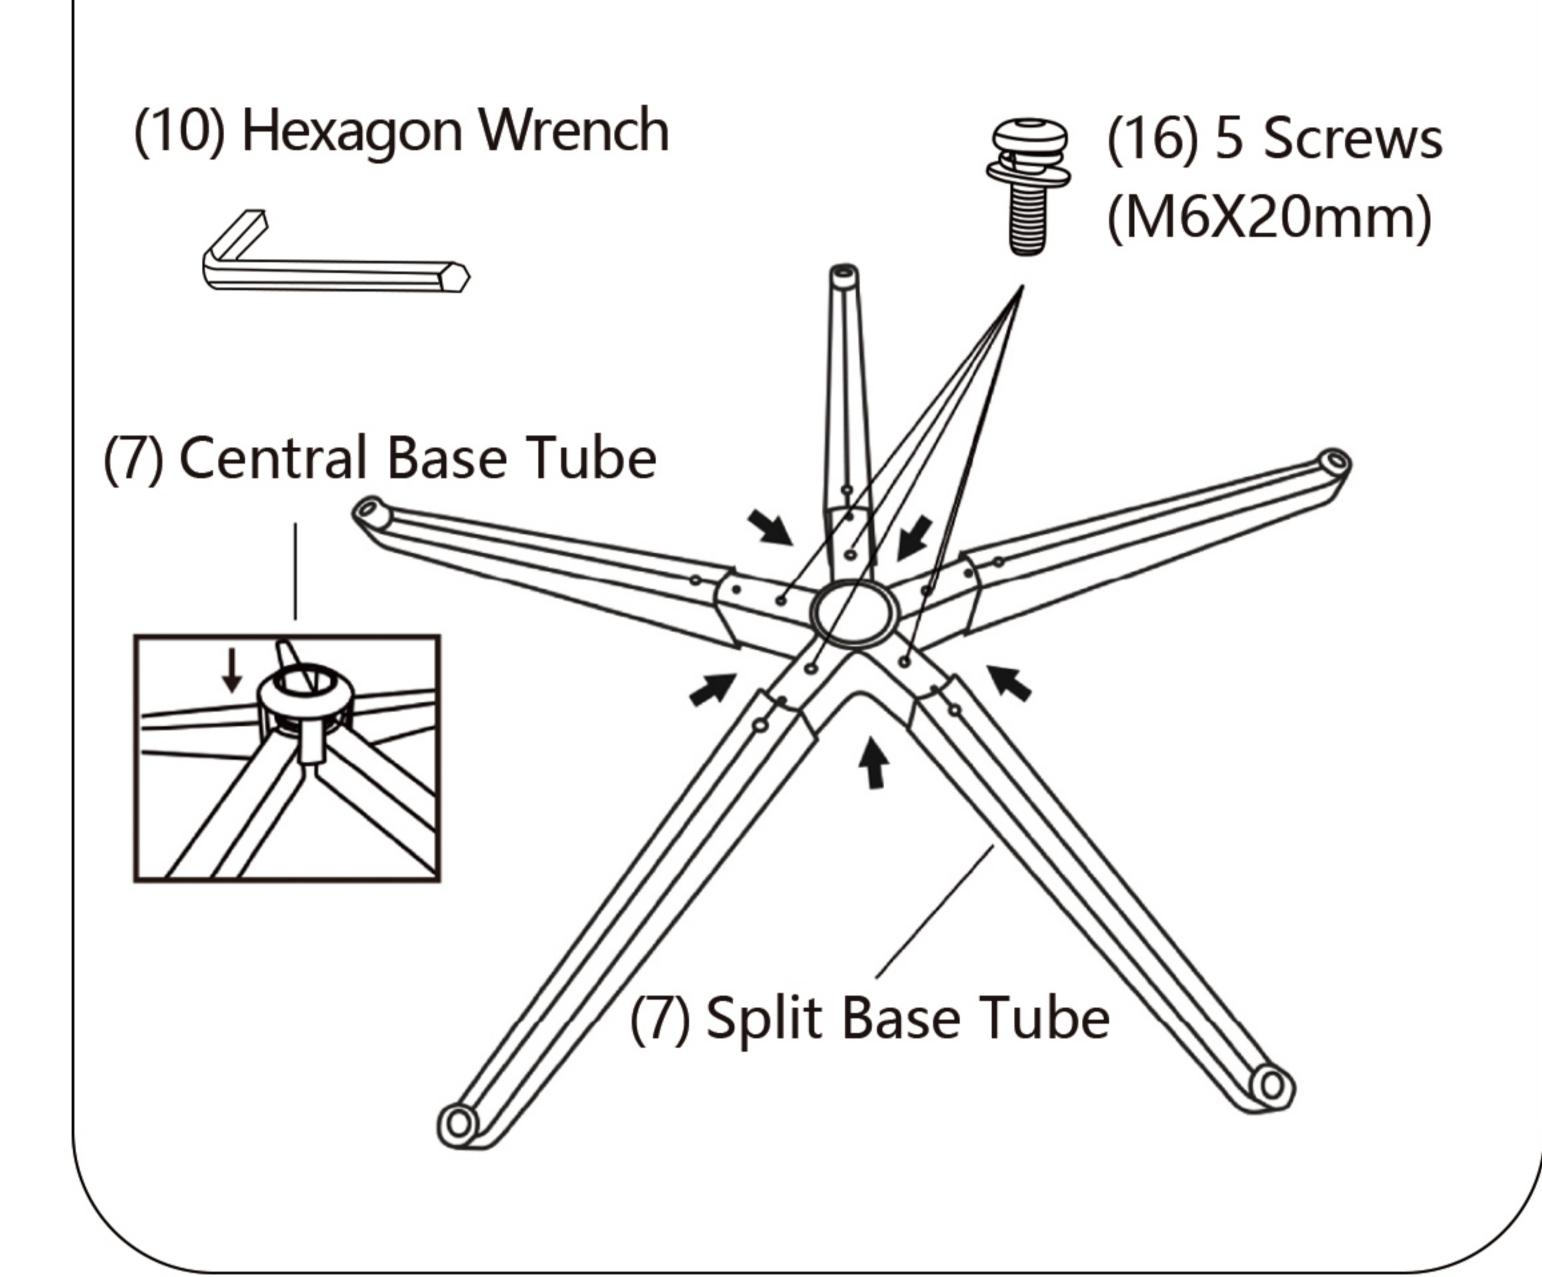


Step 3

First, take out Gas Lift (8). Put Gas lift (8) into the hole of Central Base Tube (7) as shown.

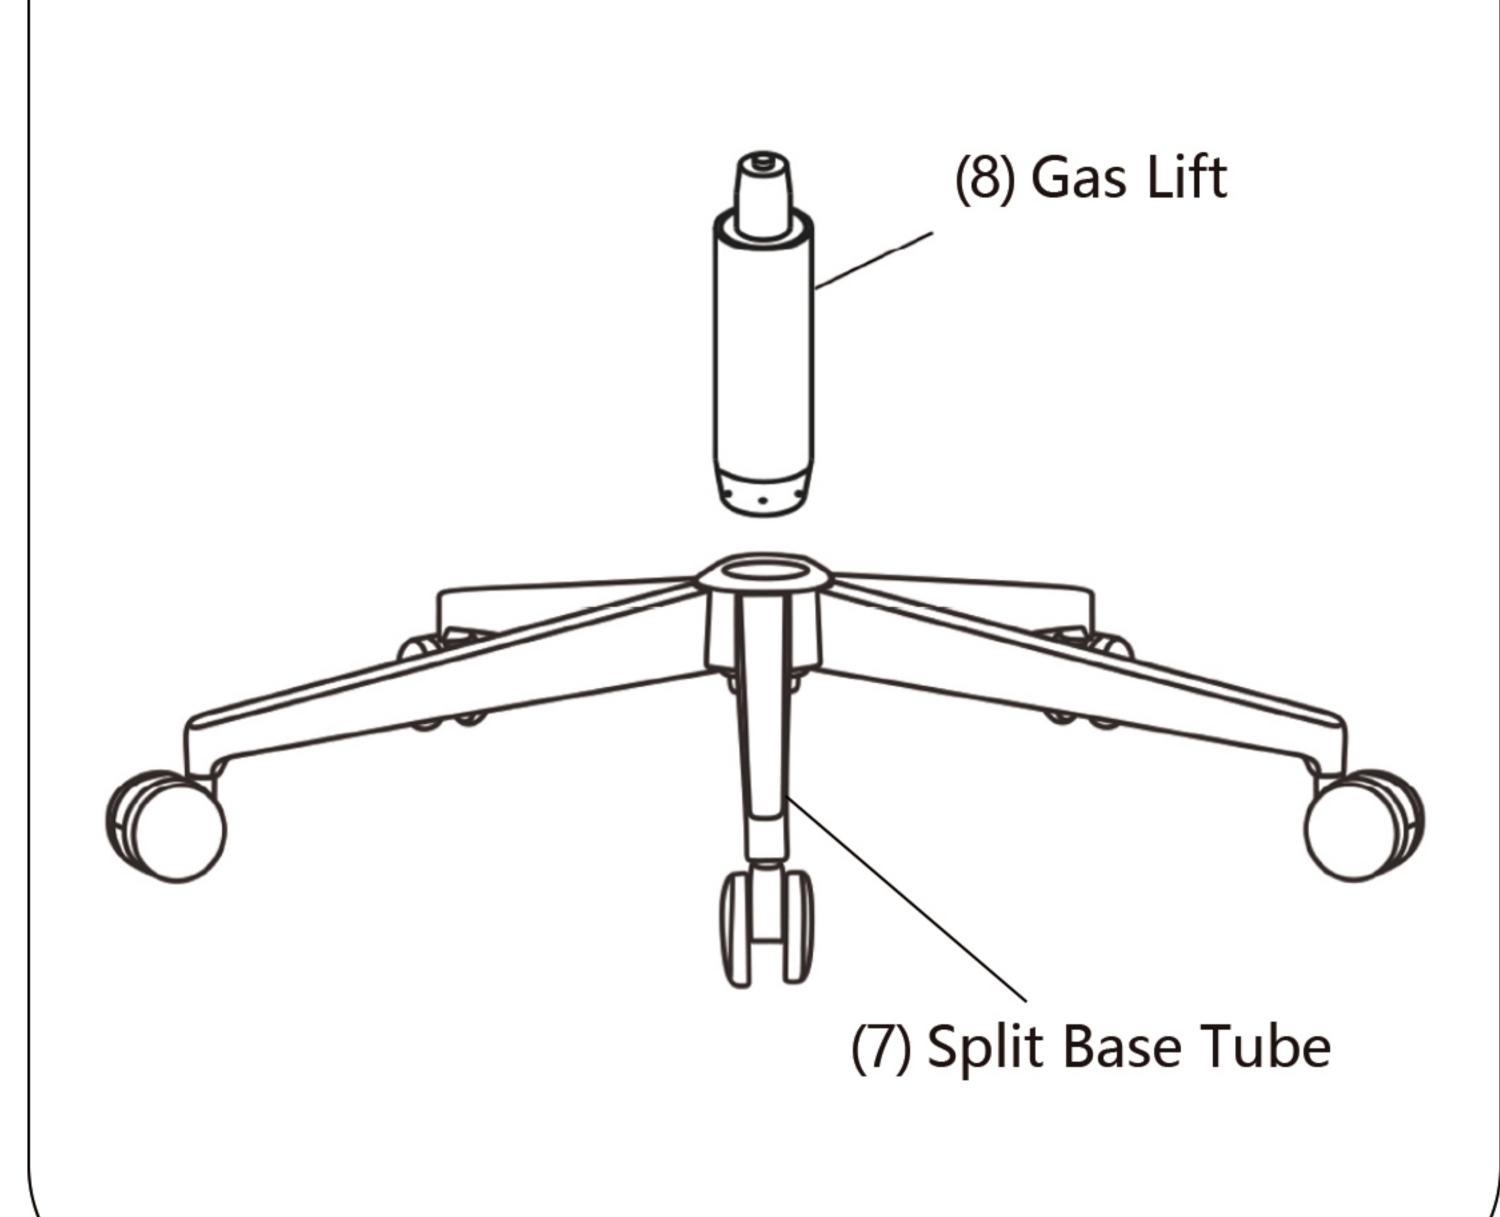


Step 5

Take Base Plate(6). Put Base Plate (6) on the bottom of Seat Cushion (4) as shown. You can see there are four screw holes. Align with the holes, tighten Screws M6×18mm (12), with Hexagon Wrench (10) to fix Base Plate (6) to the bottom of Seat Cushion (4).

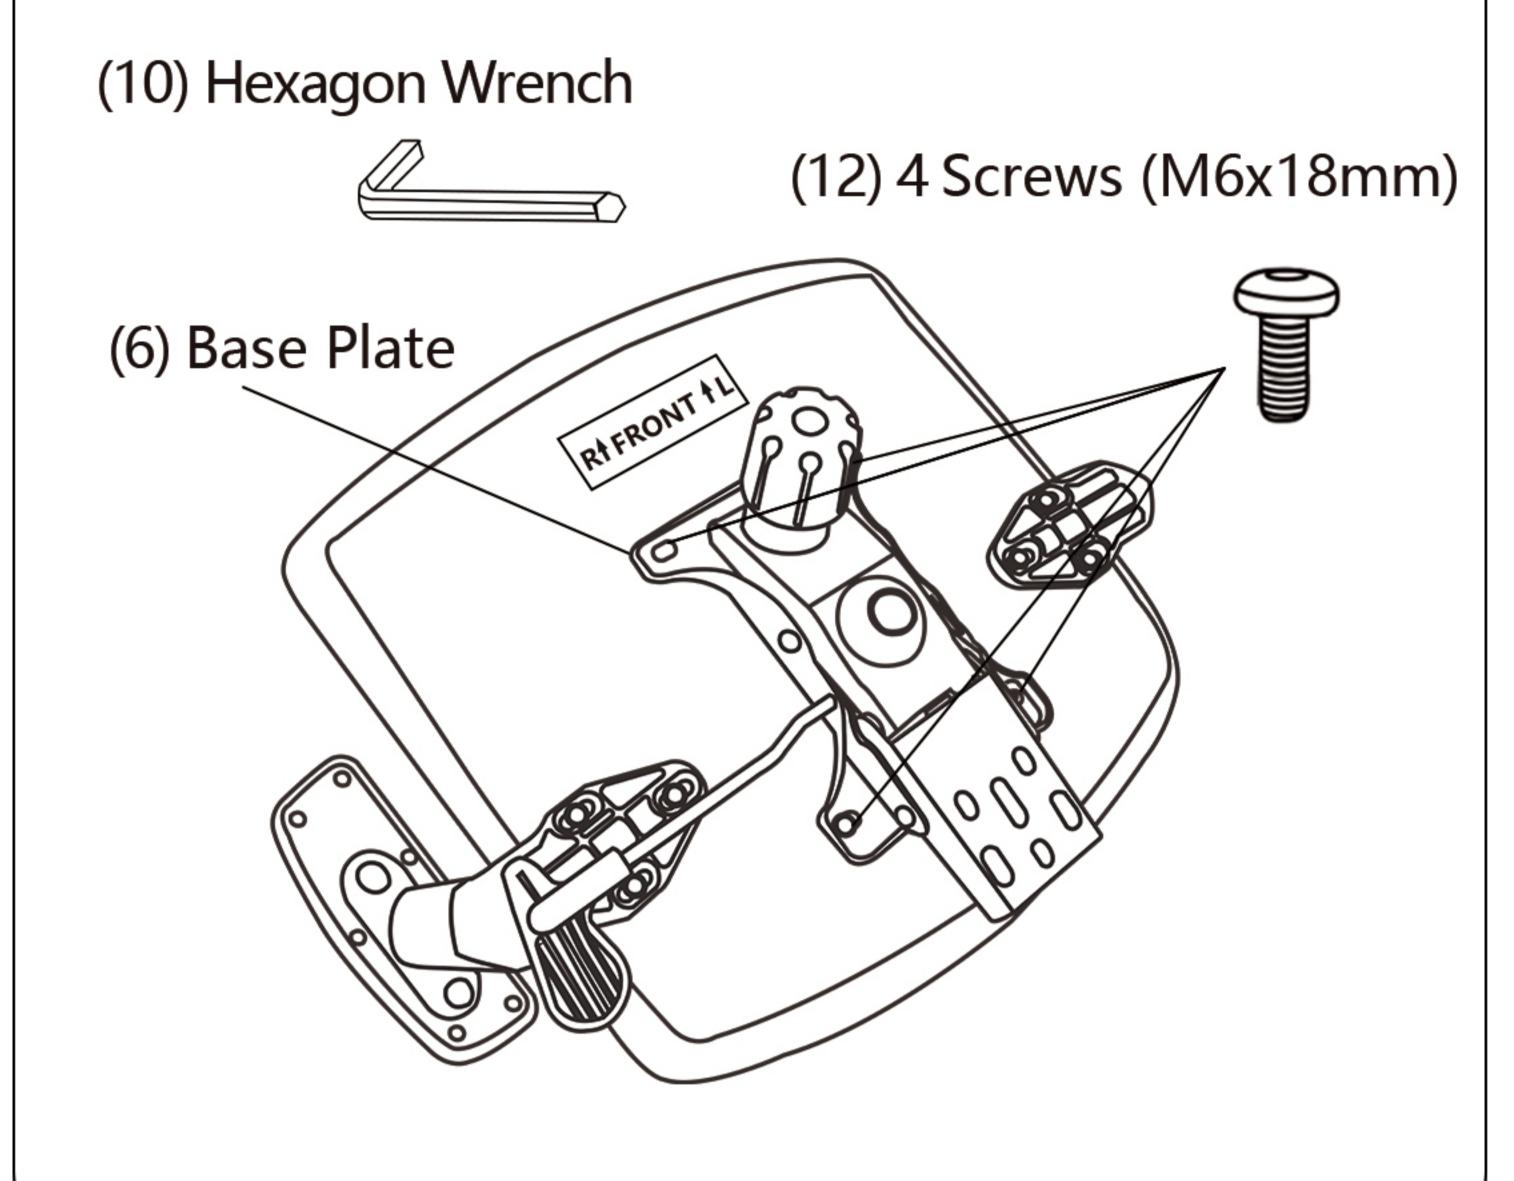


Step 7

You can see there are 4 screw holes. Align with the holes, tighten Screws M6×25mm (14) with Hexagon Wrench (10) to fix Corner Connector (3) to the Backrest (2) Take Decorative Cover (3). Fasten it to the Backrest (2) without screws.

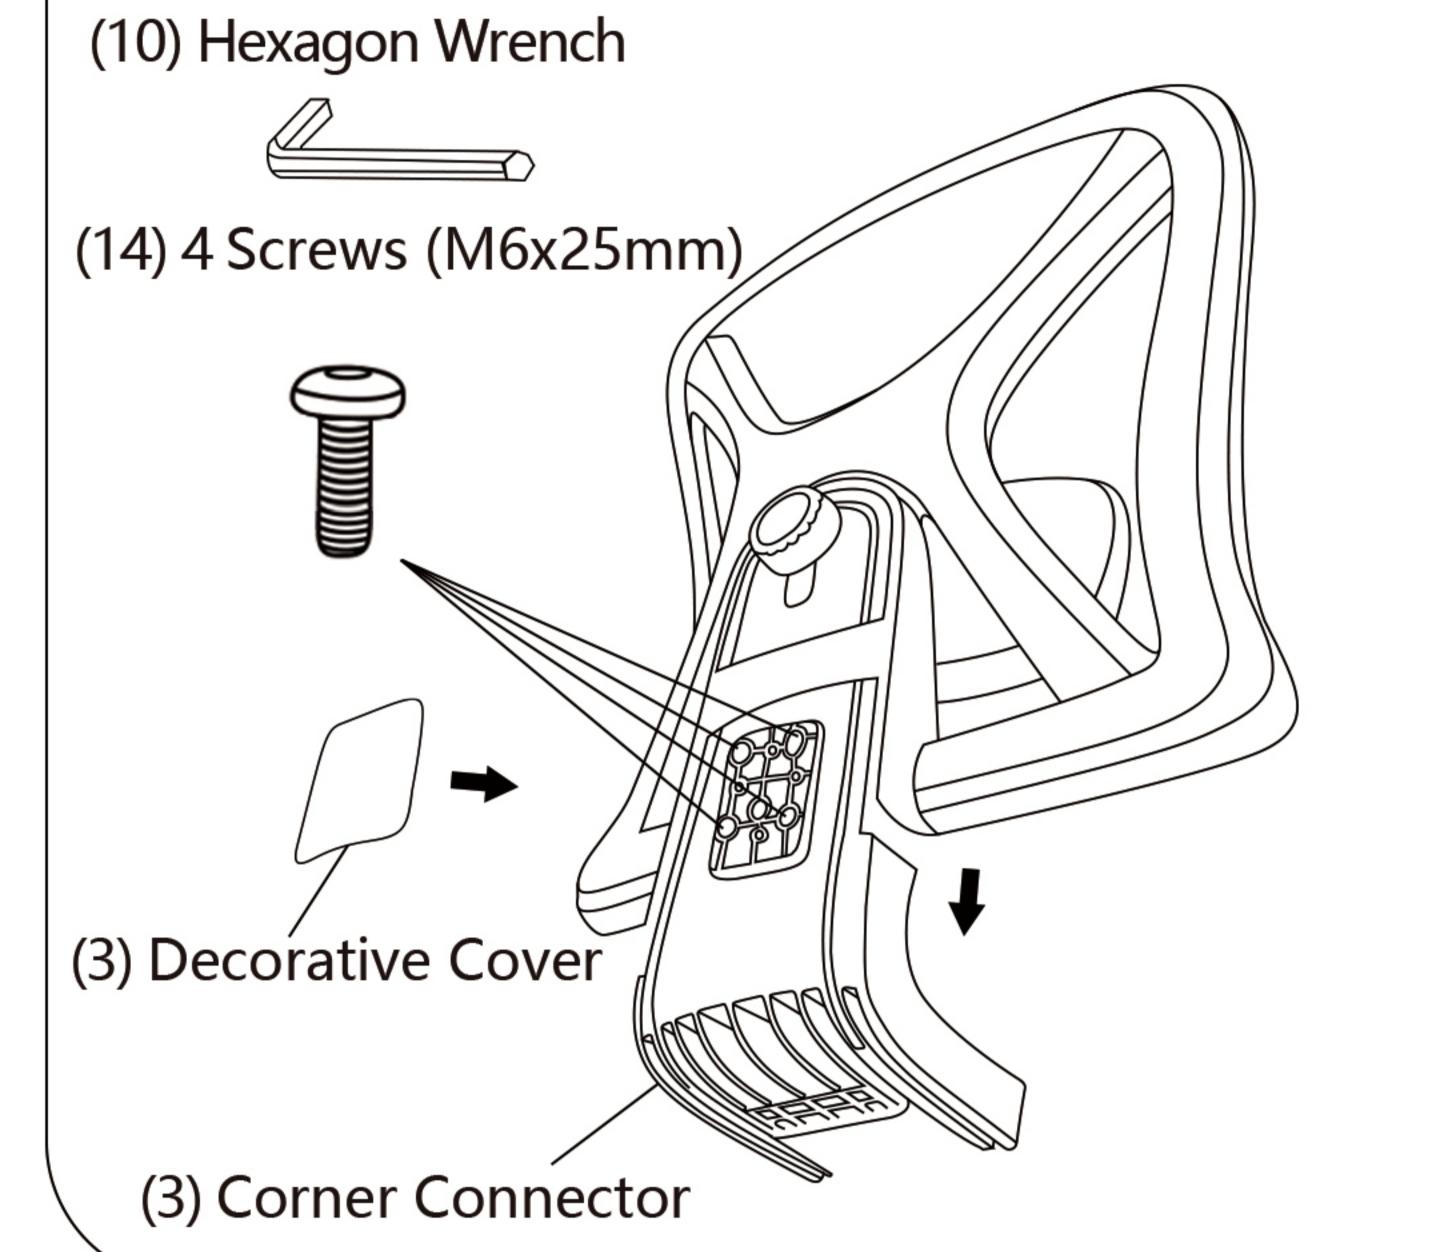


Step 2

Extend the Split Base Tube (7). Take out Castors (9). Insert Castors (9) into Split Base Tube (7). There are 5 Castors (9) need to be inserted.

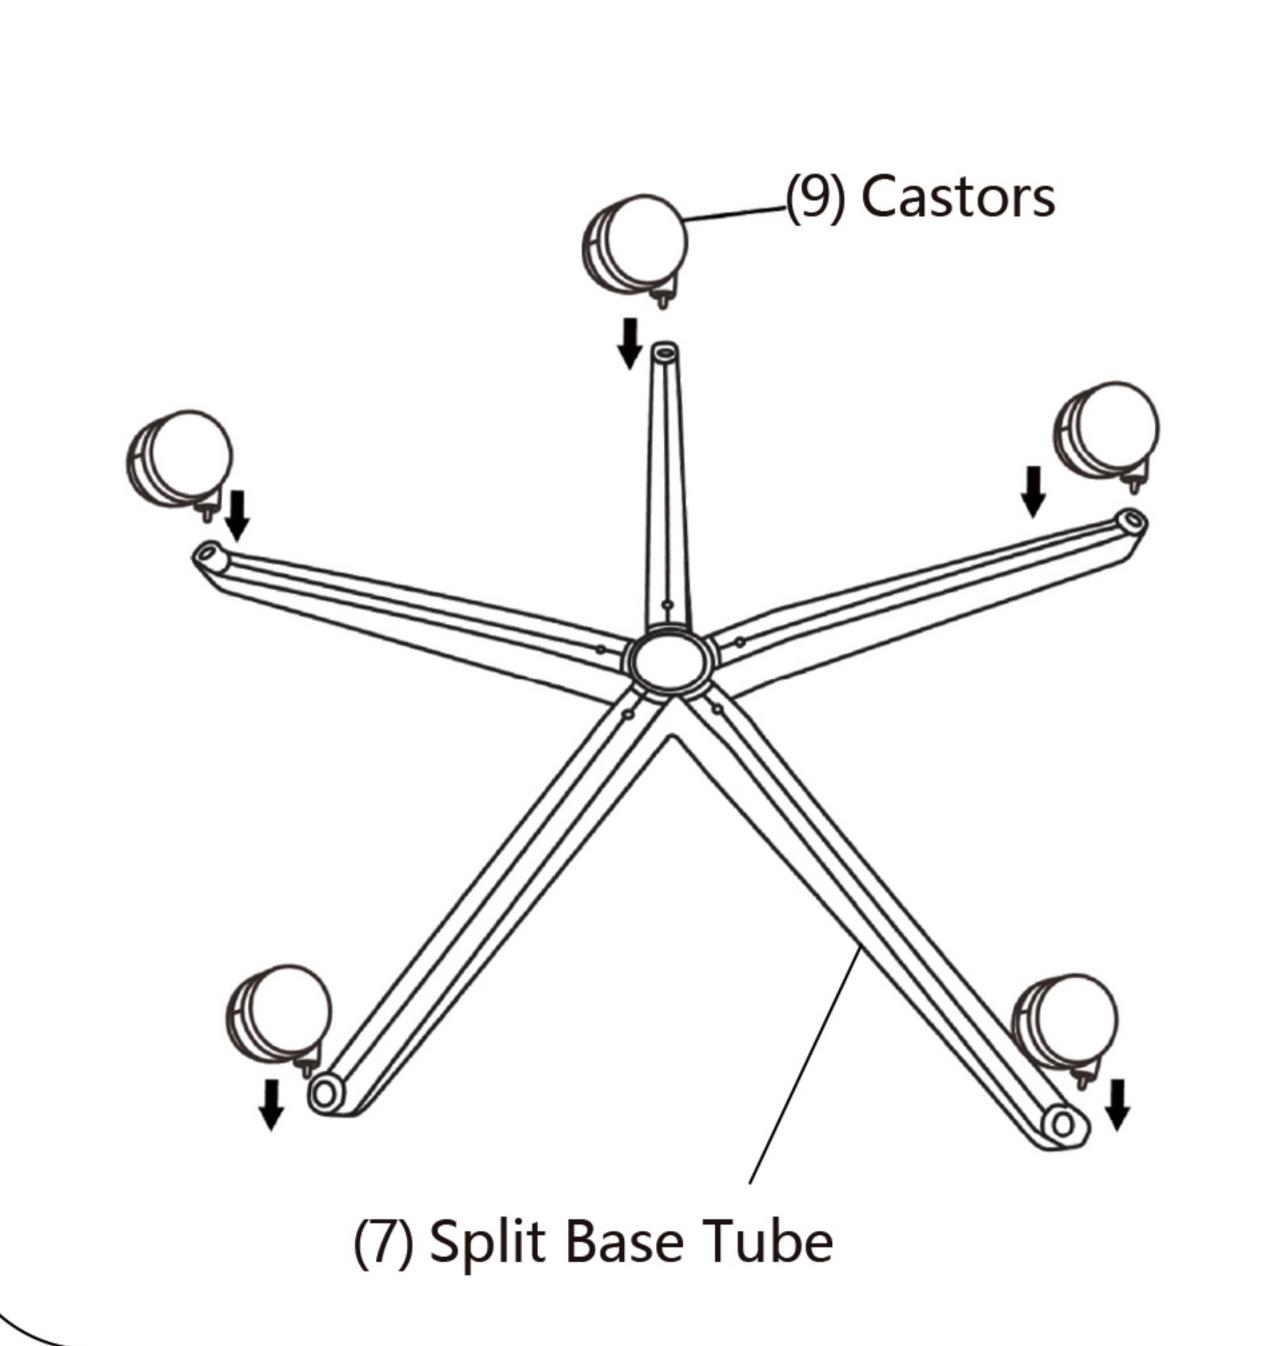


Step 4

Take out the Seat Cushion (4). Take the Armrest (5) under the Seat Cushion (4) as shown in the picture. Three screw holes can be seen. Align the holes, and tighten the Screws M6x30mm (13), with Hexagon Wrench (10).

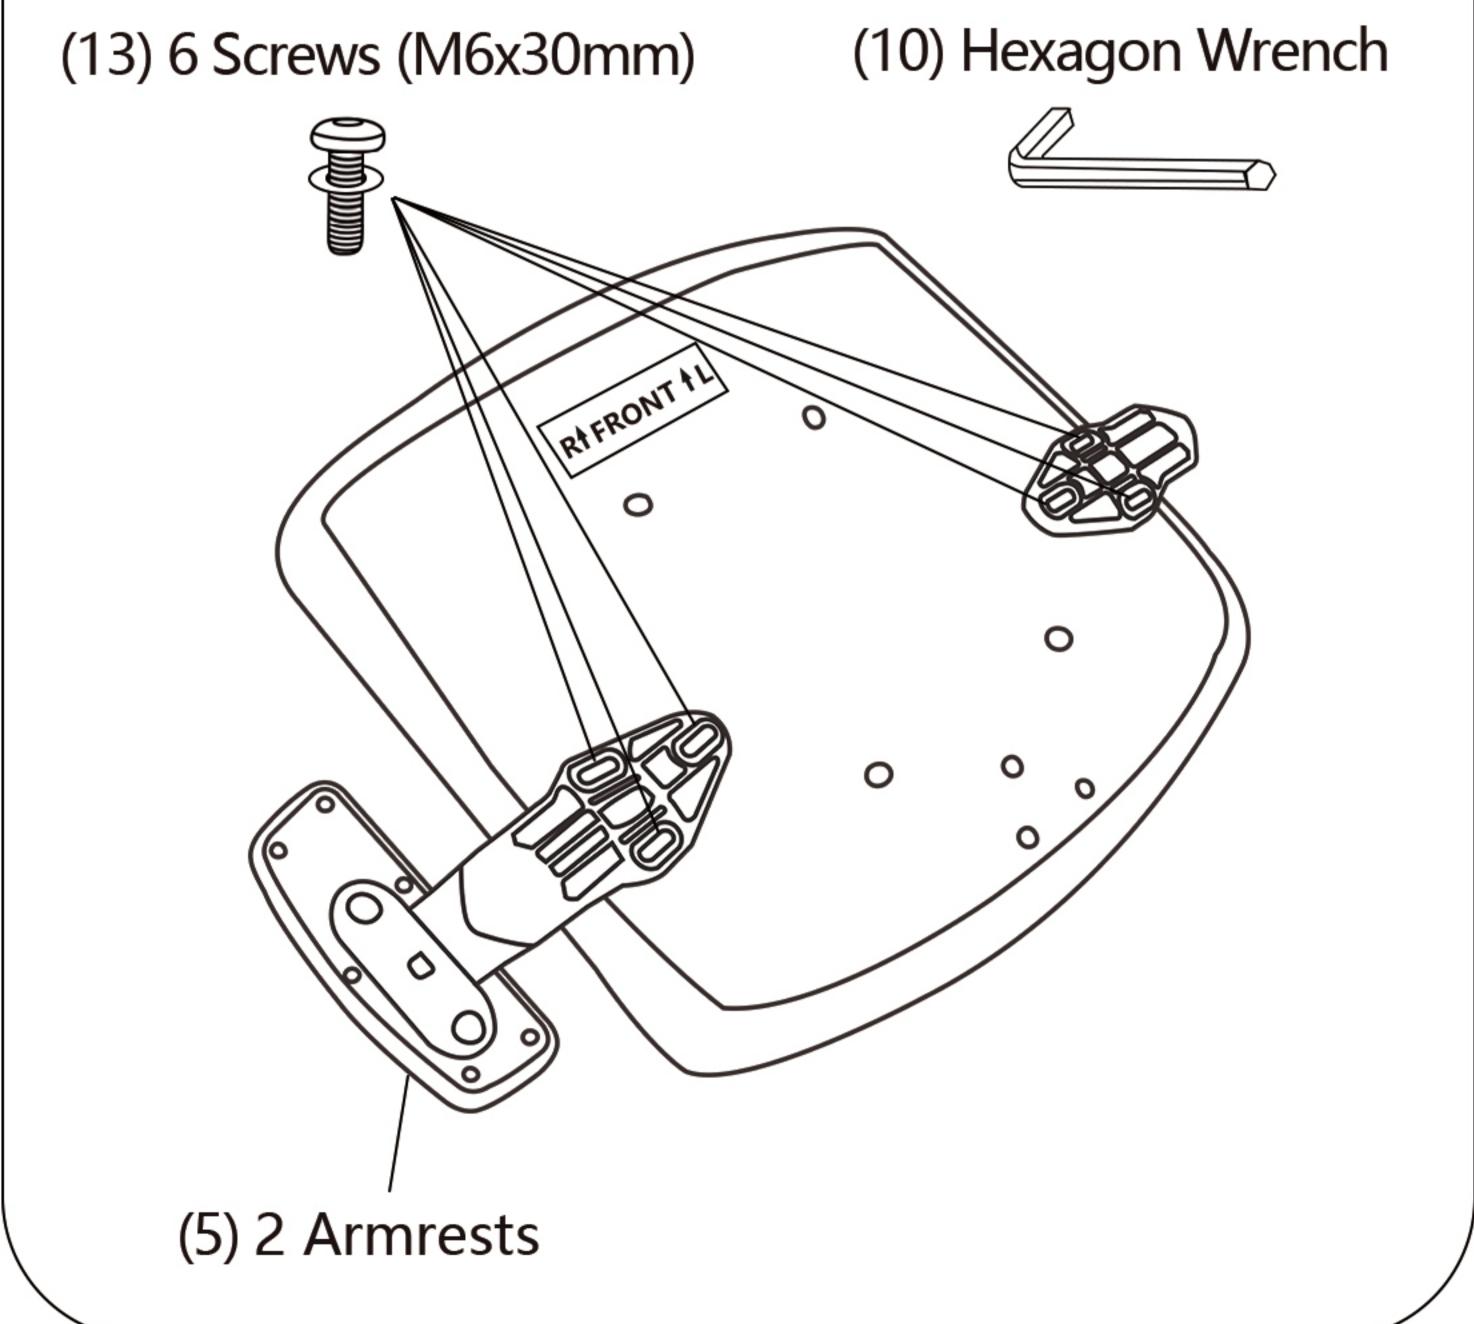

Step 6

Take Corner Connector (3). Put Corner Connector (3) on the bottom of Base Plate (6) as shown. You can see there are three screw holes. Align with the holes, tighten Screws M8x35mm (15), with Hexagon Wrench (10) to fix Corner Connector (3) to the Base Plate (6).

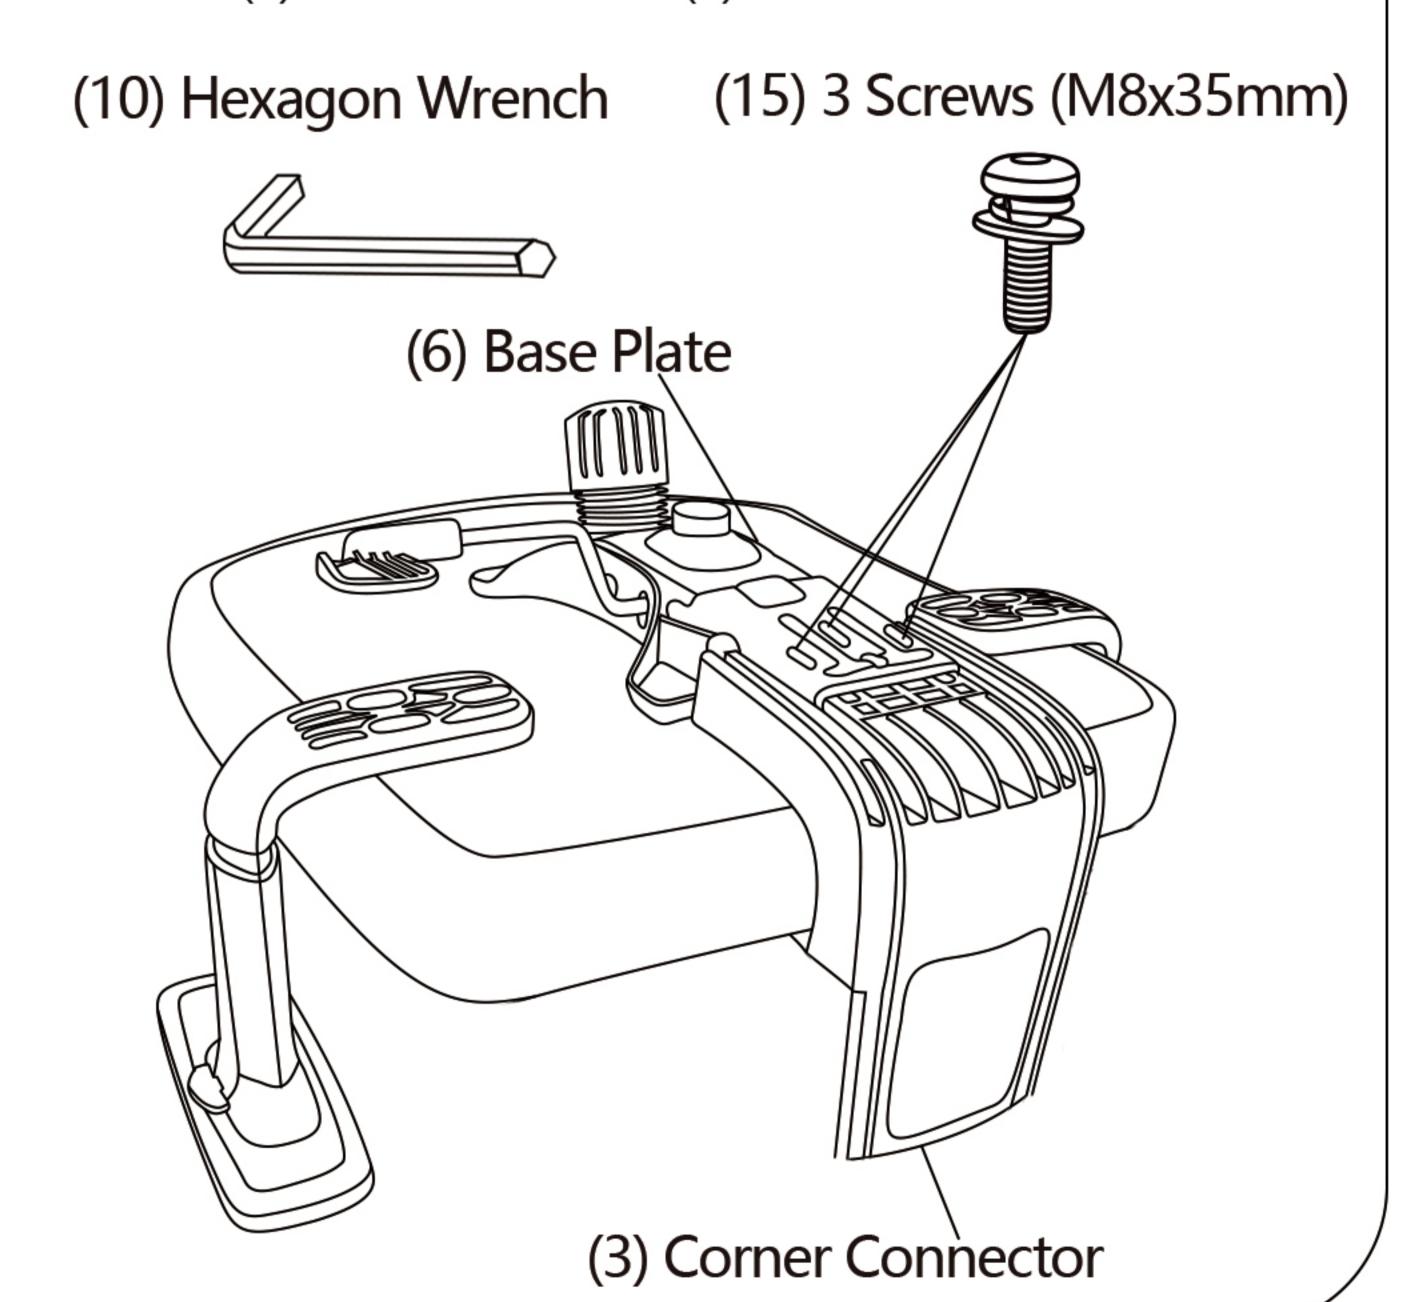

Step 8

Take out completed part of previous Step. You can see a hole in the middle of the Base Plate (6). Insert it into the section from step 3 as shown in the picture. At this point, you should press the seat cushion with all your strength to make sure they fit each other better. Then align the Headrest (1) installed in step 3 with the screw hole at the top of the Backrest (2) and tighten the Screws M6×20mm (11) and 2 Decoration Caps (17) with Hexagon Wrench (10).

* Caution: If the Gas Lift (8) doesn't insert to Base Plate (6) firmly, it's likely to fall off when the chair raises up.

