

ADULT ASSEMBLY REQUIRED

COLORS AND DECORATIONS MAY VARY.
2 VEHICLES INCLUDED. OTHER VEHICLES SOLD SEPARATELY.
REQUIRES 6 D SIZE (LR20) ALKALINE BATTERIES (NOT INCLUDED). DISPOSE OF BATTERIES SAFELY.
PLEASE KEEP THESE INSTRUCTIONS FOR FUTURE REFERENCE AS THEY CONTAIN IMPORTANT INFORMATION.

service.mattel.com
HOTWHEELS.COM



GFH87_0970_G4
1102147081_DOM

5-10



INSTRUCTIONS

COLOSSAL CRASH™

 


COLOSSAL CRASH™
INSTRUCTIONS




©2019 Mattel, Mattel, Inc., 636 Girard Avenue, East Aurora, NY 14052, U.S.A. Consumer Services
1-800-524-8697. Mattel U.K. Ltd., Vanwall Business Park, Maidenhead SL6 4UB. Helpline 01628 500303.
Mattel Australia Pty. Ltd., 458 Church St., Richmond, Victoria, 3121. Consumer Advisory Service - 1300 135
312. Mattel South Africa (PTY) LTD, Office 10213, 30 Metrose Boulevard, Johannesburg 2196. Mattel East
Asia Ltd., Room 503-09, North Tower, World Finance Centre, Harbour City, Tsimshatsui, HK, China. Tel.:
(852) 3189-6500. Dhlmpoort & Diederiksen Ople: Mattel Southeast Asia Pte. Ltd., No 19-1, Tower 3 Avenue 7,
Bangsar South City, No 8, Jalan Kerinci, 59200 Kuala Lumpur, Malaysia. Tel: 03-33417052.








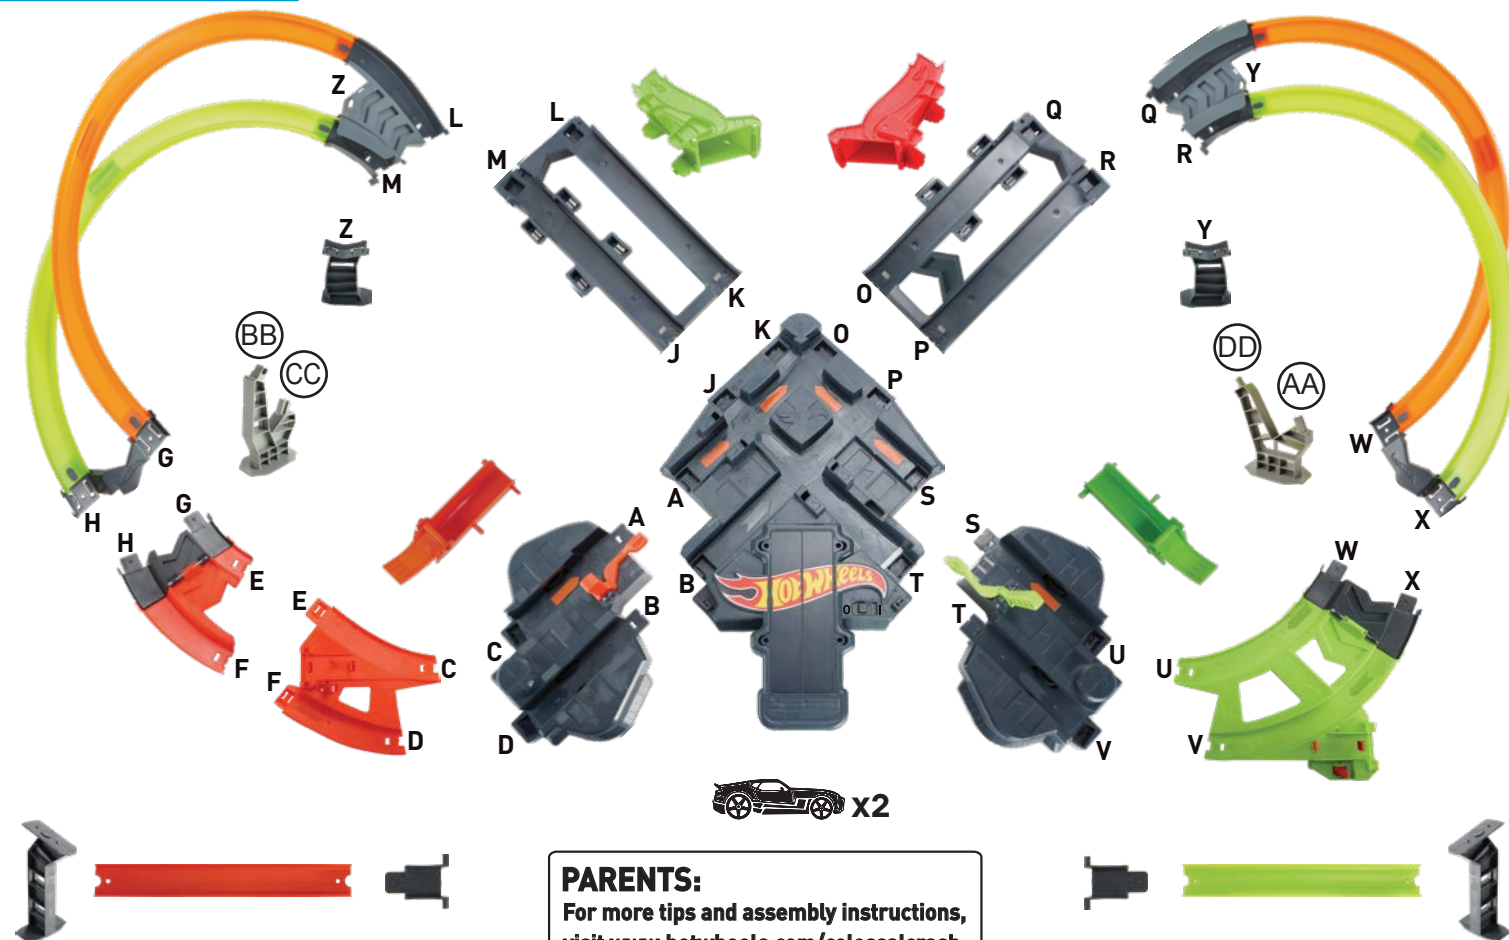

PARENTS:
For more tips and assembly instructions,
visit www.hotwheels.com/colossalcrash

      - Unscrew the battery cover with a Phillips head screwdriver (not included).
- Install 6 new D (LR20) alkaline batteries (not included) in the battery box.
- Replace the battery cover and tighten screws.
- Replace batteries if the booster can no longer propel vehicles through the track set.
- Dispose of batteries safely.
- For longer life, use alkaline batteries.
- When exposed to an electrostatic source, the product may malfunction. To resume normal operation, remove and reinstall the batteries.
- The toy is not to be connected to more than the recommended number of power supplies.

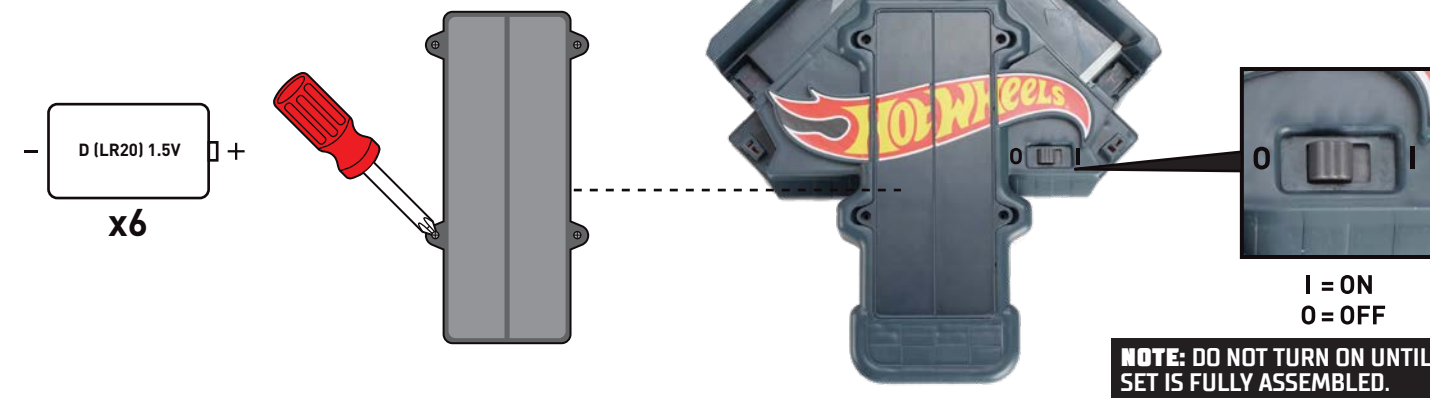

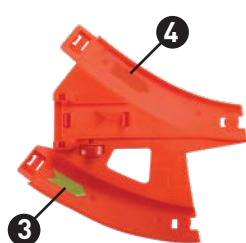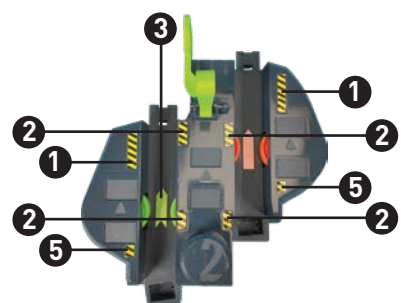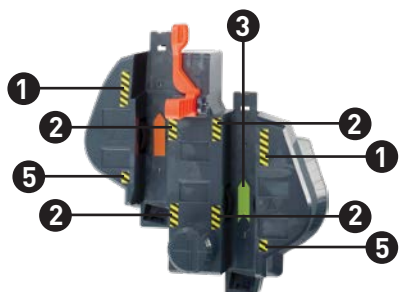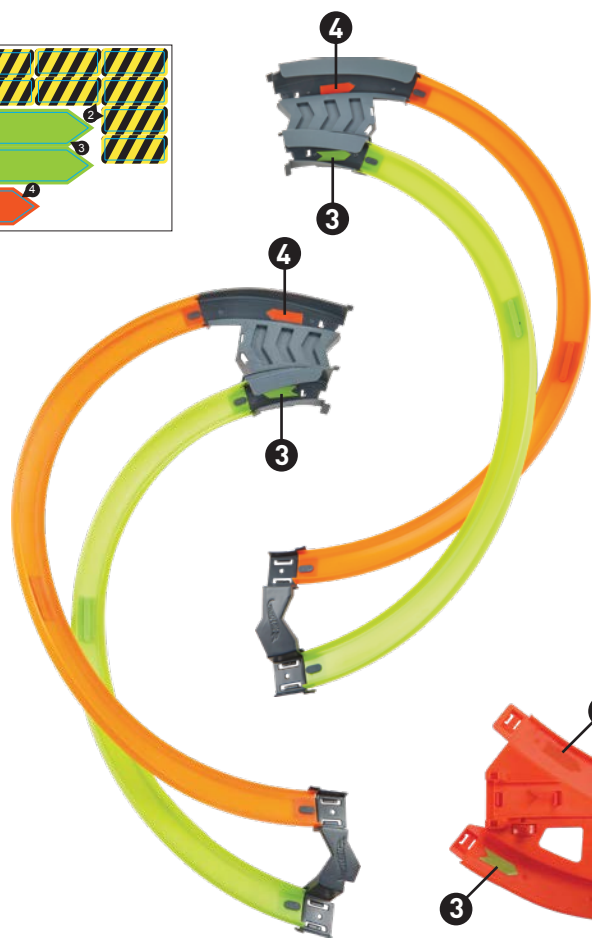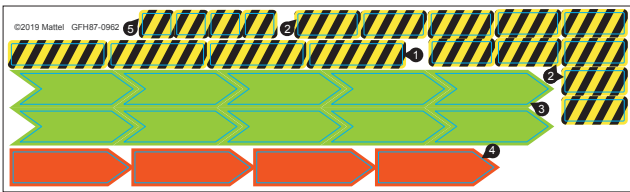

BUILD 3 DIFFERENT ZONES OF YOUR TRACK SET BEFORE THE FINAL ASSEMBLY.

ZONE 2

PAGES 8-9



ZONE 1

PAGES 6-7










ZONE 3

PAGES 10-11









REFER TO IMAGE ON THE RIGHT FOR EXACT LOCATION OF EACH PART.

  
 
 
 
 
 
PARTS YOU'LL NEED:

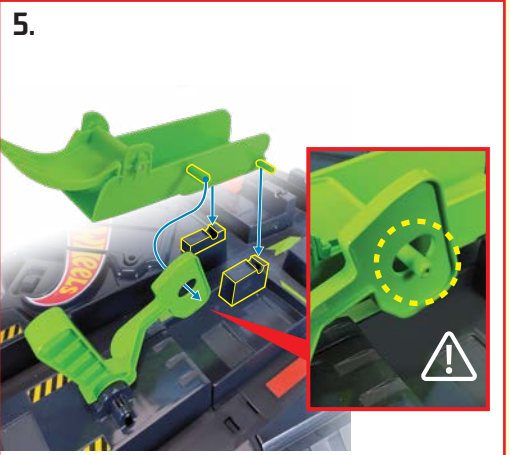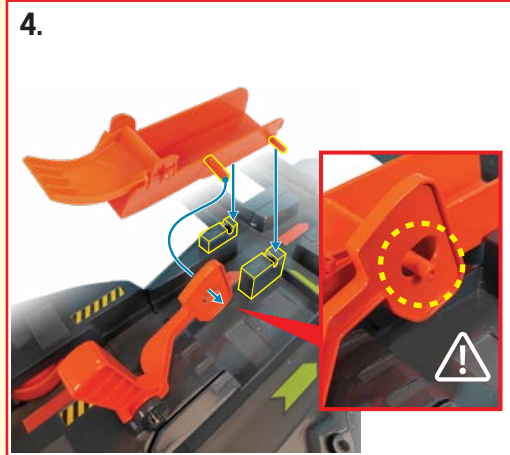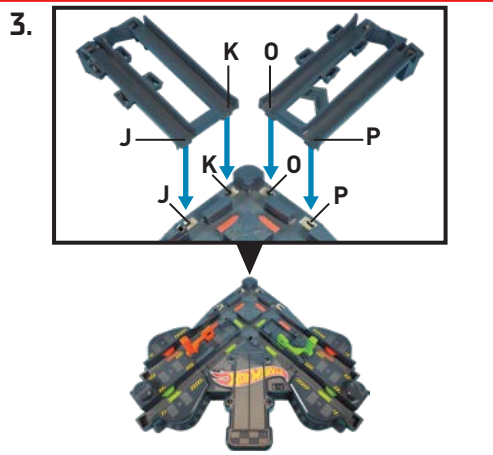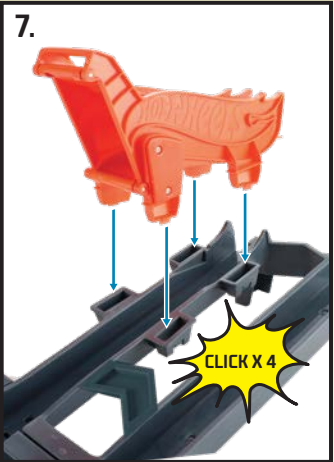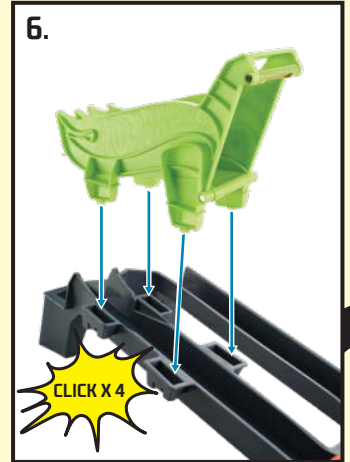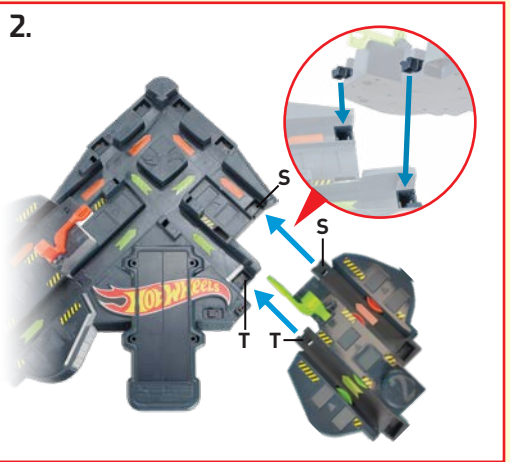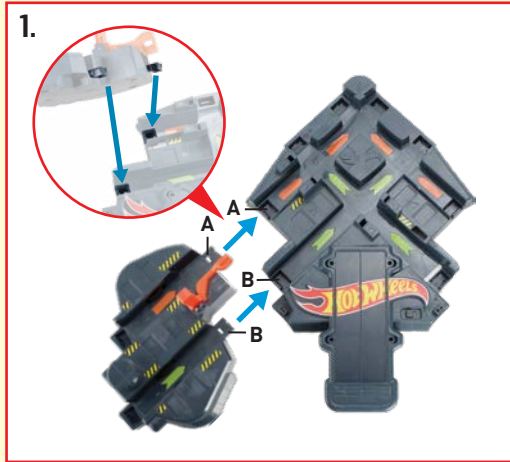


PARTS YOU'LL NEED:

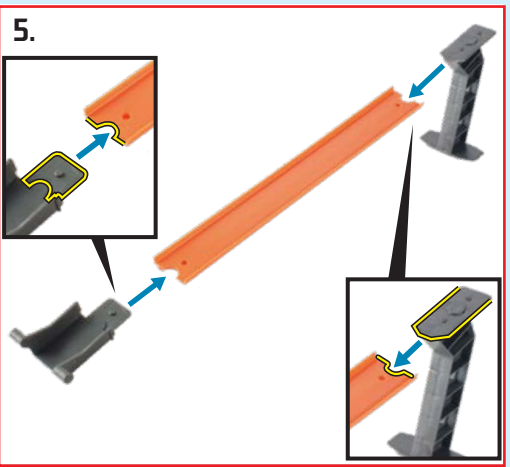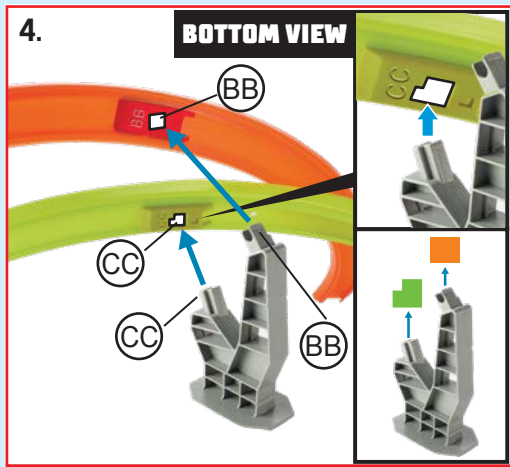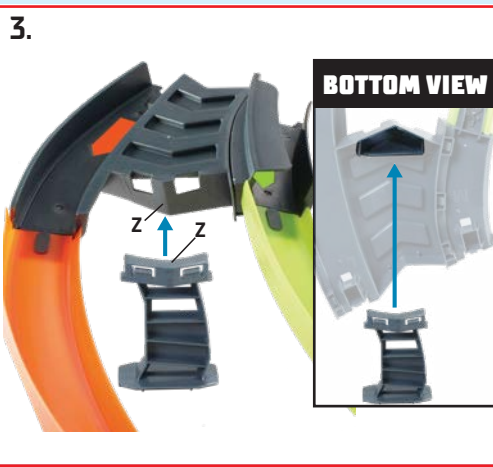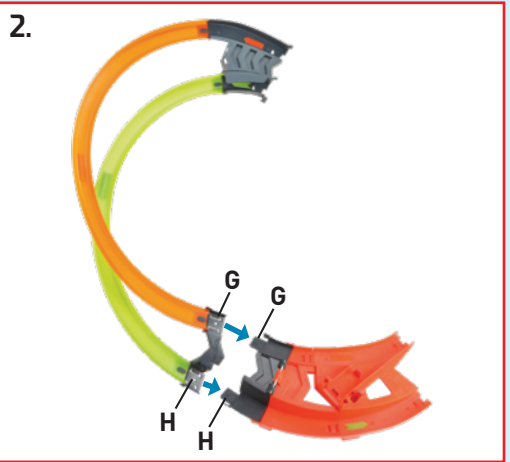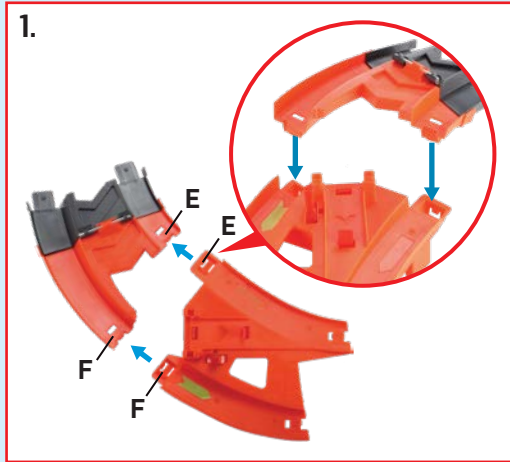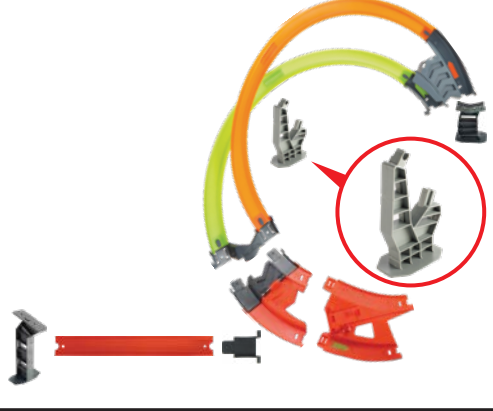      

PARTS YOU'LL NEED:

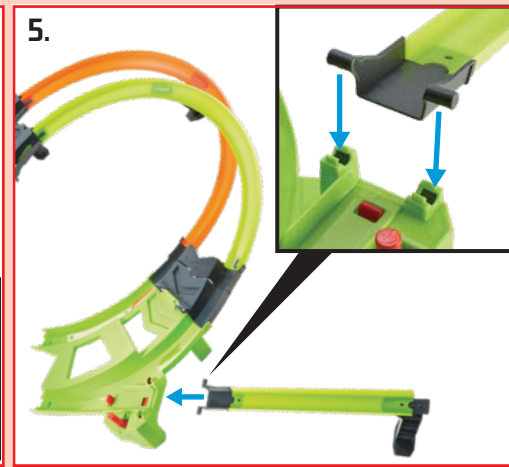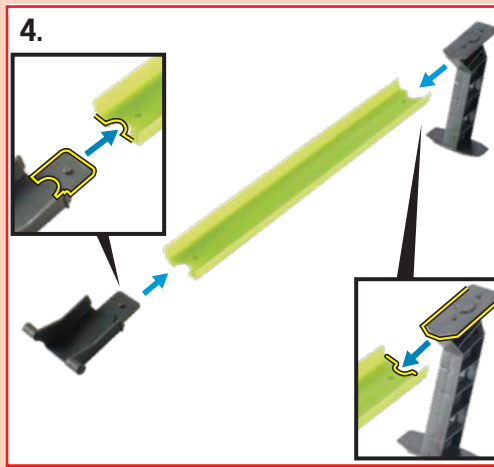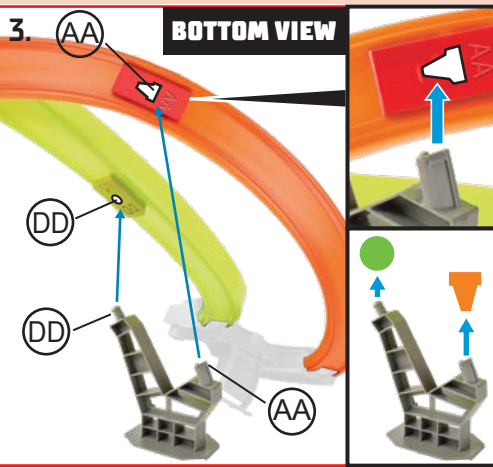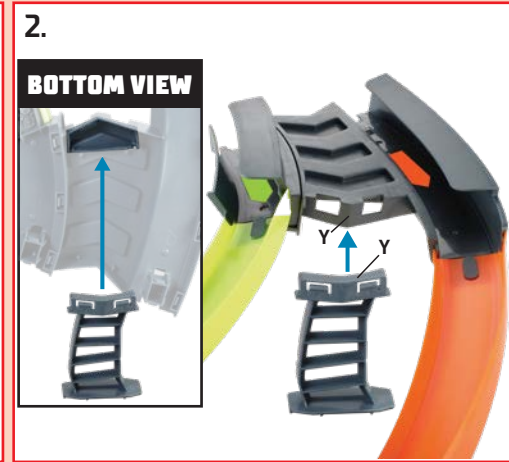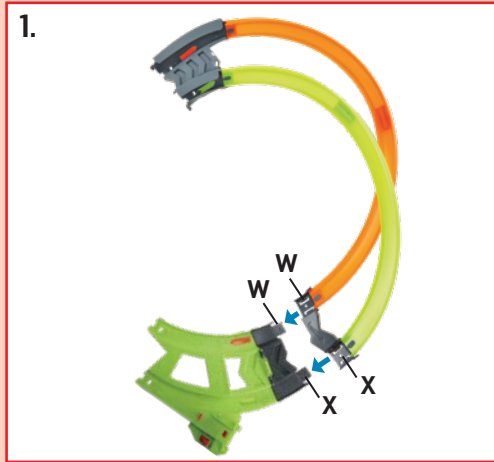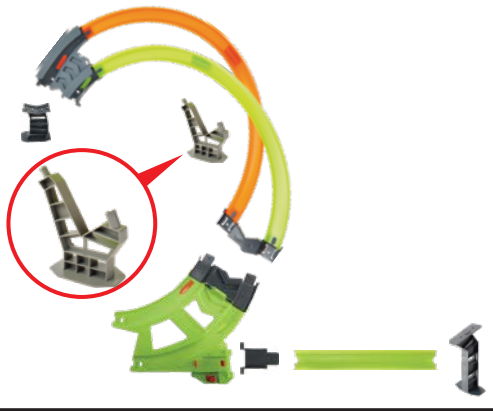      

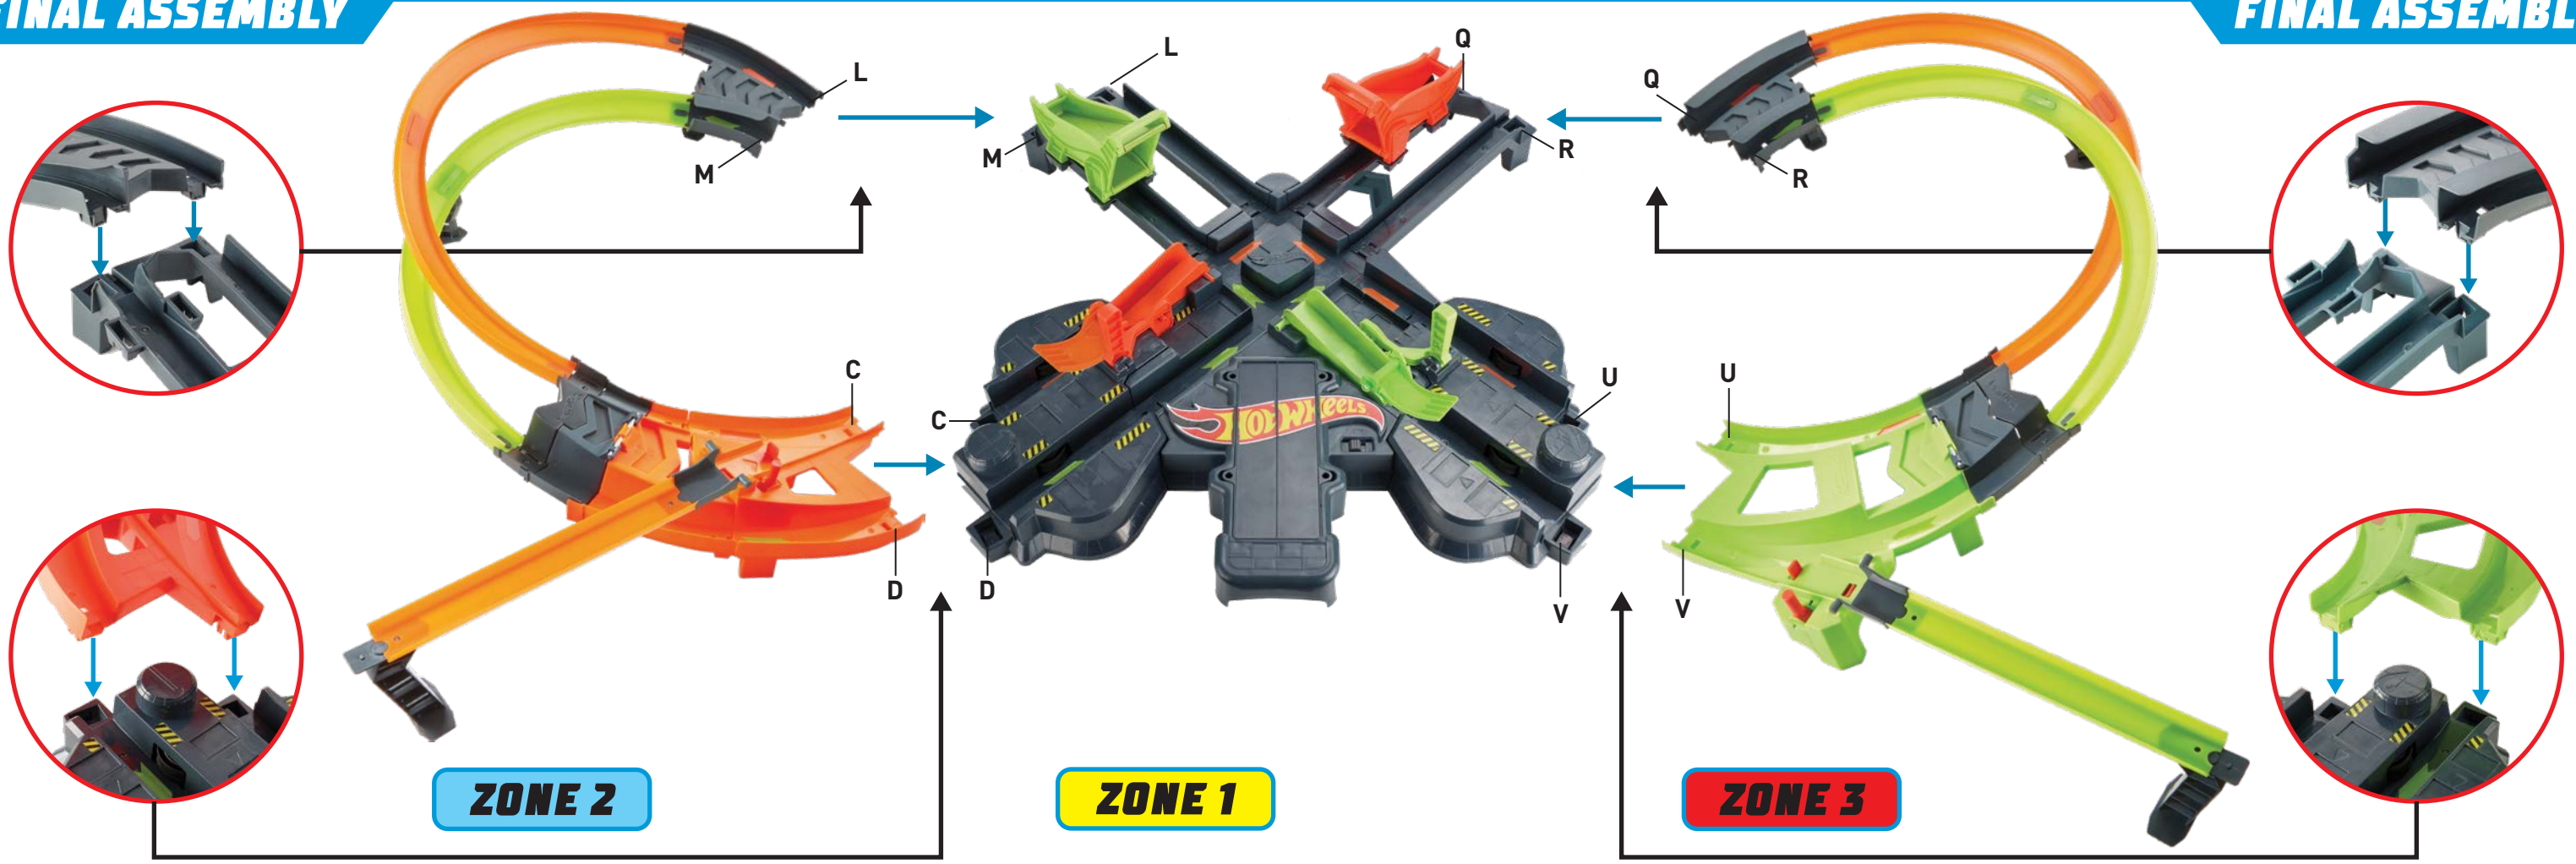 

ZONE 2

ZONE 1

ZONE 3

1. SWITCH ON THE BOOSTER. LOAD CARS ON THE STARTING RAMPS TO GET READY FOR THE NON-STOP HIGH-SPEED CRASHES!



0 = OFF 1 = ON

2.

 


ADJUST JUMP RAMP TO RACE STRAIGHT THROUGH OR MAKE STUNT JUMPS!



CRASH ZONE!

TIP: IF BOOSTER STOPS, RESET IT BY TURNING THE POWER OFF AND ON AGAIN.

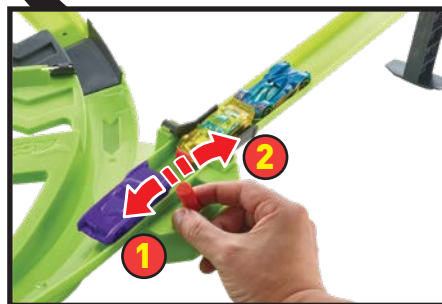

- ❶ PUSH FORWARD TO RELEASE ONE CAR.
- ❷ PULL BACK TO RELEASE MULTIPLE CARS.

NOT FOR USE WITH SOME HOT WHEELS® VEHICLES. TWO VEHICLES INCLUDED. ADDITIONAL VEHICLES SOLD SEPARATELY. OTHER HOT WHEELS® TRACKS AND SETS SOLD SEPARATELY.

CONNECT TO OTHER TRACK SETS ON BOTH SIDES.

