



QUICK SETUP GUIDE

Rugged Speaker System

NS-HMPS3018

PACKAGE CONTENTS

- Rugged speaker system
- AC power cord
- Quick Setup Guide

FEATURES

 
- Bluetooth playback
- Line input
- Built-in FM tuner
- Built-in rechargeable battery
- USB slot
- Microphone function




FIND YOUR USER GUIDE ONLINE!
Go to www.insigniaproducts.com, enter your model in the search box, then press **ENTER**.
Next to *Features*, click **Support & Downloads**, then next to *User Guide*, click the language you want.

Before using your new product, please read these instructions to prevent any damage.

Top

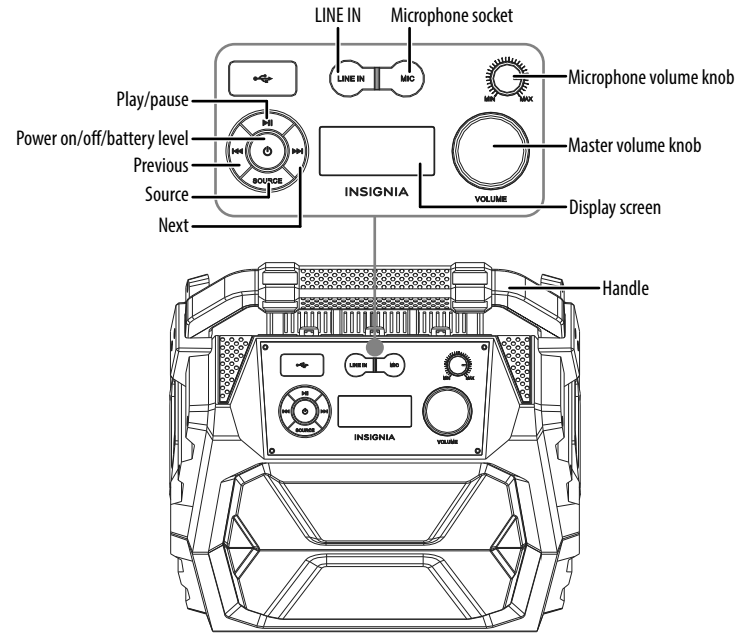


Side

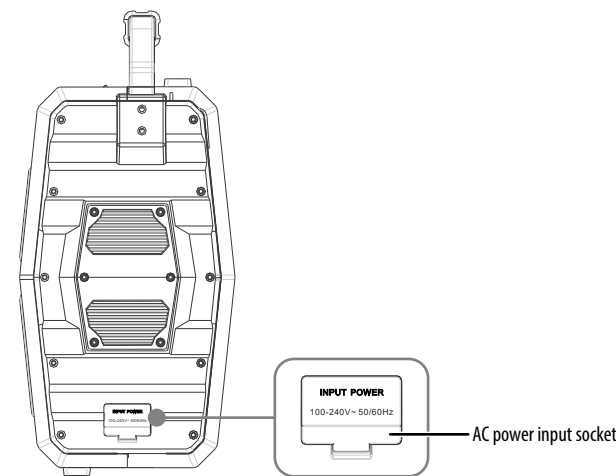 

USING A MICROPHONE WITH THIS SPEAKER SYSTEM

 This speaker system is designed for a 3.5 mm, 2-pin microphone (not provided). If you have a 6.5mm, 2-pin microphone, you will need to purchase a 3.5 mm to 6.5 mm converter in order to use it with this speaker system. 3-pin microphones do not fit this unit.

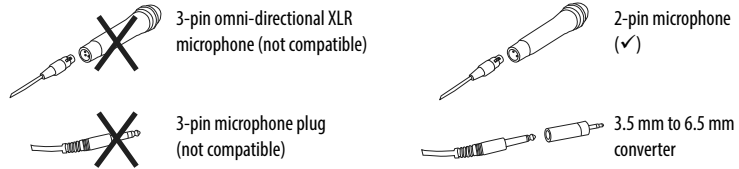

CHARGING YOUR SPEAKER SYSTEM

- Use the AC power cord (included) to connect your speaker system to an AC power outlet. Turn off your speaker system before charging. In order to check the status, press and hold the power button to power on the unit, then press the power button again to show the current battery charge level. The charging-indicator circles on the display screen will blink rapidly during charging. When four charging-indicator circles appear on the display screen, the battery has been fully charged.

Checking the battery life

- The speaker is designed with a smart battery check feature for your convenience.
- Press the battery level button to show the current battery charge level on the display screen of the unit when it's turned on and not charging.

STATUS	CHARGE LEVEL
4 circles light up	100%
3 circles light up	75%
2 circles light up	50%
1 circle lights up	25%

USING YOUR SPEAKER SYSTEM

Connecting an audio device

LINE IN

- Your speaker system has an audio input jack that you can connect to an external audio source, such as a VCD, CD, VCR, or MP3 player.
Use an audio cable (not provided) to connect the external device to the Line In jack on the top of your speaker system, then press the **SOURCE SELECT** button to select "LINE" mode.








Pairing your speaker system with a Bluetooth device

Your speaker system can store pairing information for up to eight Bluetooth devices, such as phones and tablets.

- 1 Make sure that your Bluetooth device supports the Bluetooth Ver.4.0+EDR protocol and is not paired with another device. To determine what Bluetooth protocol your device supports, see the documentation that came with your device.

- 2 Turn on your speaker system.
- 3 Press the **SOURCE** button to select “BT” to enter pairing mode.
- 4 Make sure that your Bluetooth device is within 30 feet of your speaker system.
- 5 Turn on your Bluetooth device, turn on Bluetooth, then set your device to pairing mode. For more information, see the documentation that came with your Bluetooth device.
- 6 On your Bluetooth device, select “NS-HMPS3018”. Your speaker system pairs with the Bluetooth device.
- 7 Press **PLAY/PAUSE** to begin playback. The volume controls are also active.
- Note: The Bluetooth device should reconnect to your speaker system automatically when it is turned on.

Basic playback

BUTTON	DESCRIPTION
<div>POWER ON/OFF BATTERY LEVEL</div> <div></div>	Press and hold to turn the unit on or off. Press to check the current battery capacity when the speaker system is turned on.
<div>SOURCE</div> <div></div>	Press repeatedly to select a signal source. Options include Bluetooth, LINE, USB, or TUNER mode.
<div></div>	Press to temporarily pause a playback. Press it again to resume the playback. Hold down to disconnect Bluetooth.
<div></div>	Press to skip to the next track. Press and hold to fast forward.
<div></div>	Press to return to the previous track. Press and hold to fast-rewind
<div>MICROPHONE VOLUME KNOB</div> <div></div>	Use to adjust the volume of the microphone input.
<div>MASTER VOLUME KNOB</div> <div></div>	Use to adjust the volume of the speaker.

USB drive




- Insert a USB thumbdrive into the USB slot, then press the SOURCE button repeatedly to select USB.

Microphone playback

- Connect an external microphone to the Microphone jack on the top panel of your speaker system. Use the Microphone Volume knob to adjust the sound level.

Tuner operation

- Press the **SOURCE** button repeatedly to select TUNER mode.
The following buttons are used in tuner mode:

BUTTON	DESCRIPTION
<div>PLAY/PAUSE</div> <div></div>	<ul style="list-style-type: none">Press and hold to auto scan for radio channels. Press this button again to stop auto scanning.
<div></div>	<ul style="list-style-type: none">Press to skip to the next preset station.Press to fine tune (increase) the frequency manually.
<div></div>	<ul style="list-style-type: none">Press to skip to the previous preset station.Press to fine tune (decrease) the frequency manually.

SPECIFICATIONS

Power supply:	AC ~100-240V/50/60Hz
Power consumption:	30W
Temperature:	14 ~ 95° F (-10 ~ 35° C)
Relative humidity:	5 % ~90%
Amplifier output (Max):	30W
FM tuner band range:	87.5MHz-107.9MHz
Frequency response:	±3dB (20Hz~20kHz)

TROUBLESHOOTING

No power.

- Make sure that the AC power cable is connected securely.

No sound or sound is distorted.

- Turn up the volume on both your speaker and connected device.

The buttons on the speaker do not work.

- Turn off and unplug your speaker system, then reconnect the power cord and turn it on again.

SAFETY INFORMATION

- Read through this guide before making connections and operating this speaker system. Retain this guide for future reference.
- Don’t open the case of this unit. There are no user-serviceable parts inside. Refer servicing to qualified personnel only.
- Turn off the speaker system when not in use. Turn off and disconnect the speaker system from the AC power supply when it is not being used for a long time.
- Don’t install the speaker system in a place exposed to heating sources or direct sunshine.
- Don’t install the speaker system in a place exposed to moisture or rain.
- Install the speaker system on a horizontal, flat, and firm surface with good ventilation. Never block the vents, which could cause malfunction from overheating.
- Use a soft, clean rag to clean the outside of the speaker system. Never clean it with chemicals or detergent.
- Only use attachments/accessories specified by the manufacturer.

LEGAL NOTICES

FCC Statement

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference and (2) this device must accept any interference received, including interference that may cause undesired operation.

FCC Caution

Changes or modifications not expressly approved by the party responsible for compliance could void the user’s authority to operate this equipment.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, maybe cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

ONE-YEAR LIMITED WARRANTY

Visit www.insigniaproducts.com for details.

CONTACT INSIGNIA:

For customer service, call 1-877-467-4289 (U.S. and Canada) or 01-800-926-3000 (Mexico) www.insigniaproducts.com

INSIGNIA is a trademark of Best Buy and its affiliated companies
Distributed by Best Buy Purchasing, LLC
7601 Penn Ave South, Richfield, MN 55423 U.S.A.
©2017 Best Buy. All rights reserved.
Made in China