

User Manual

 
 
X18(EN)

Please read carefully before using, most problems can be avoided

Email: info@Volorful.ntesmail.com

Product Maintenance

Friends, especially after immersion in seawater, please wash with water and then use a hairdryer to dry the 3.5 mm round hole, the spring in the back clip, and any other parts with metal.

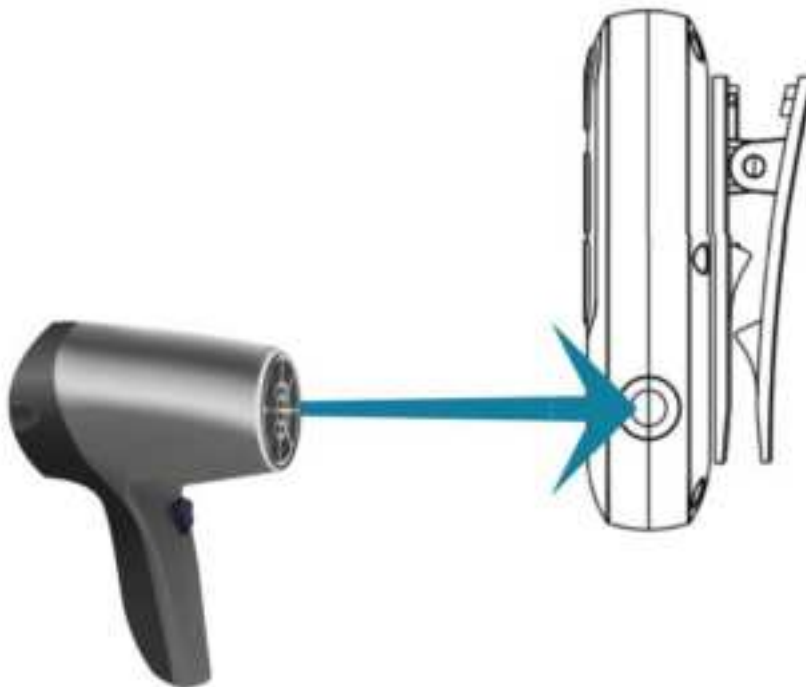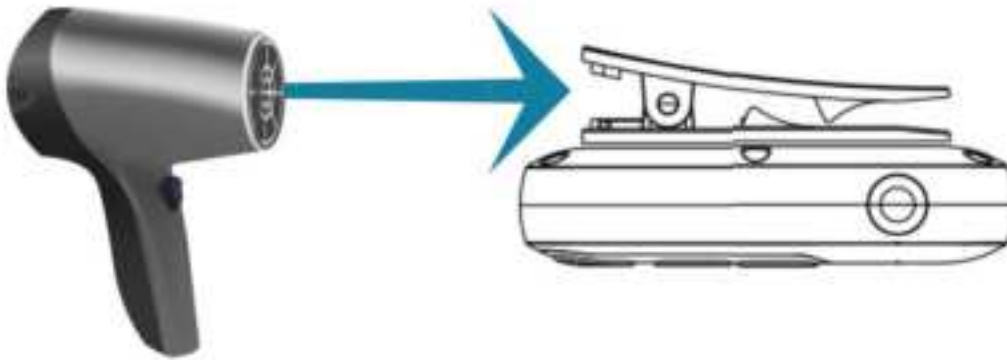

Dear Friends,

Thanks for your support.

This is a professional MP3 with a maximum waterproof rating of IPX8, perfect for swimming enthusiasts.

Please charge the device before use (charging time 2 hours)

Transfer your MP3/WMA/WAV/FLAC/APE/OGG format music from your computer to your MP3. Finally, connect your earphones and enjoy music!

We hope the manual can help you. and finally, if you encounter any problems or dissatisfaction, please do not hesitate to contact us on shopping sites at: **Order History - Seller - Ask a Question**


or by email at: info@Volorful.ntesmail.com

*Thank you for your patience, we will reply within 24 hours on working days.

Catalogue

1. Product appearance	1
2. Quick help	2
2.1 Charge	2
2.2 Power on/off.....	3
2.3 Play/pause	4
2.4 Fast forward/rewind	5
2.5 Switch play modes	6
3. Data Transfer	7
4. Technical specifications	10
5. QA&Warm Tips (Must view!)	11
6. Warranty and Service	14
7. Instructions in QR-Code PDF	15

 1. Product appearance

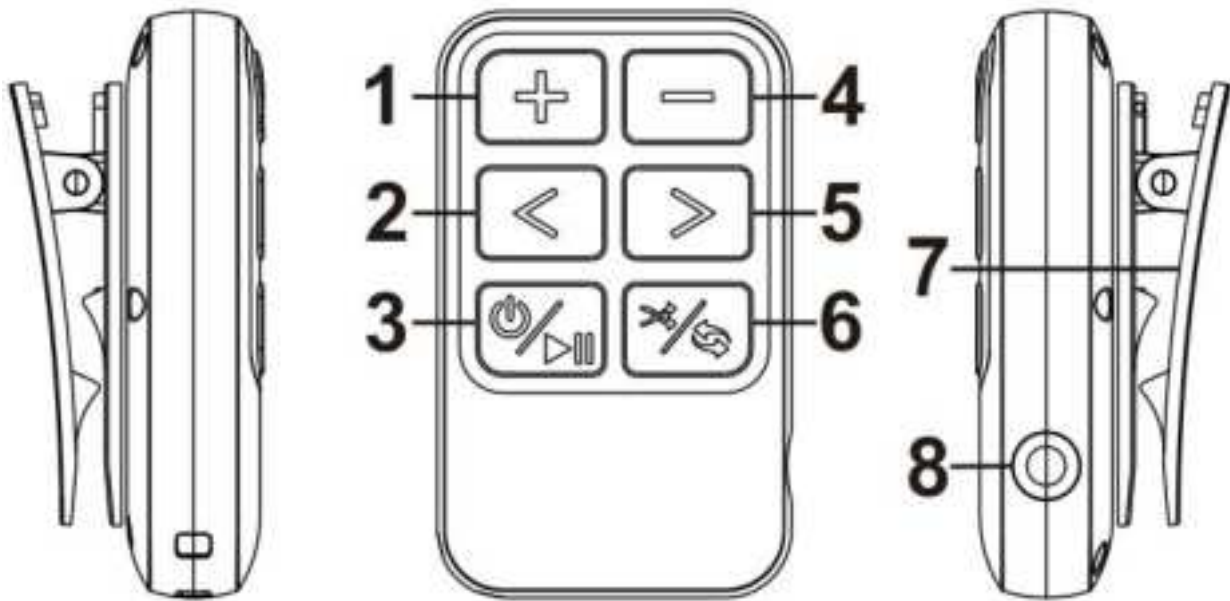

① **Volume +**

② **<** Short press: **previous song**;

< long press: **fast backward while playing**

③ **Power/play button**: long press to power on/off, short press to play/pause

④ **Volume -**

⑤ **>** short press: **next song**;

> long press: **fast forward while playing**

⑥ **Menu key**: short press to switch between repeat all/shuffle

⑦ **Back clip**

⑧ **3.5mm headphone jack**

2. Quick help

2.1 Charge


Charging interface	3.5mm
Battery capacity	250 mAh
Charging time	2 Hours
When charging: The indicator light flashes red.	
Fully charged: The blue light stays on for a long time.	

Note: When the power is low, please use a professional usb wall charger to charge in time.

If you charge directly on the computer, the charging speed will be very slow, and the full charge time will become very long.

If not used for a long time, please charge and discharge the product once every 3 months.

2.2 Power on/off

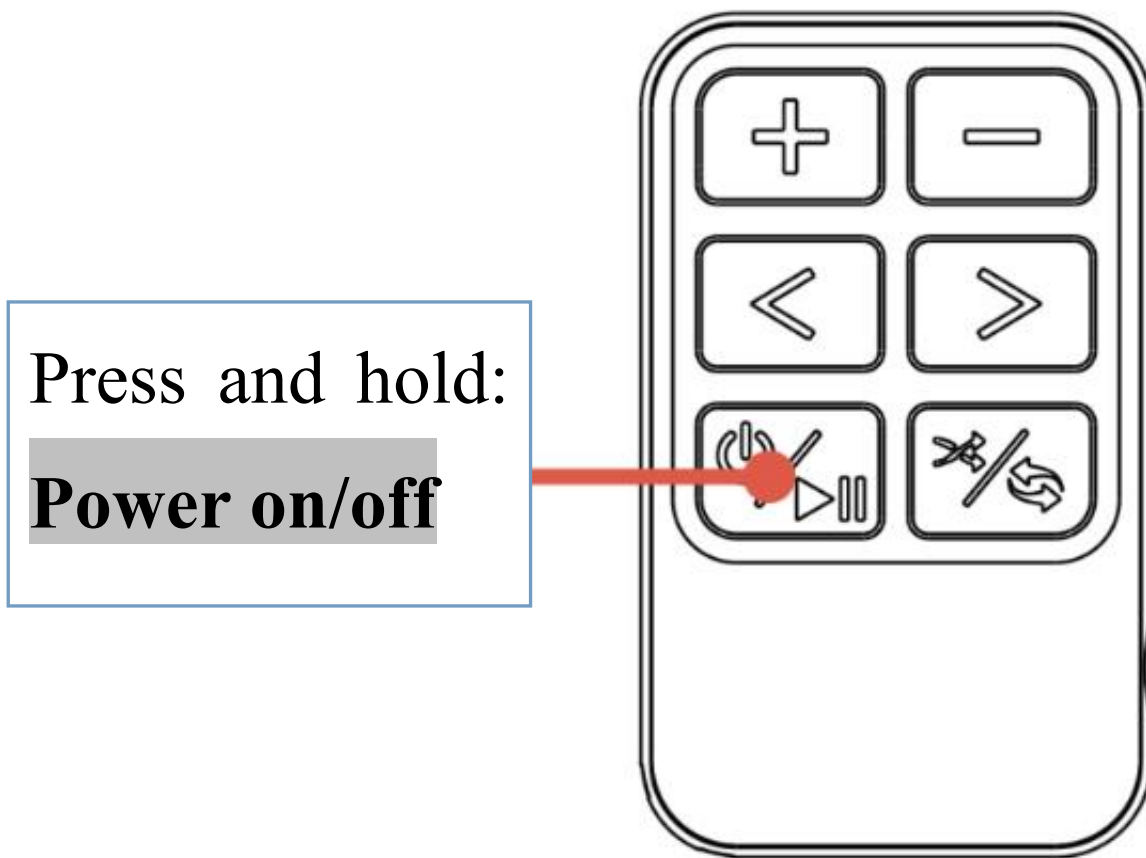


When the machine is shut down, press and hold the "**Power/Play**" button to switch it on and play music automatically.

After 5 minutes without any operation, the machine will automatically power off.

Power on: blue light flashes
Power off: red light flashes

2.3 Play/pause

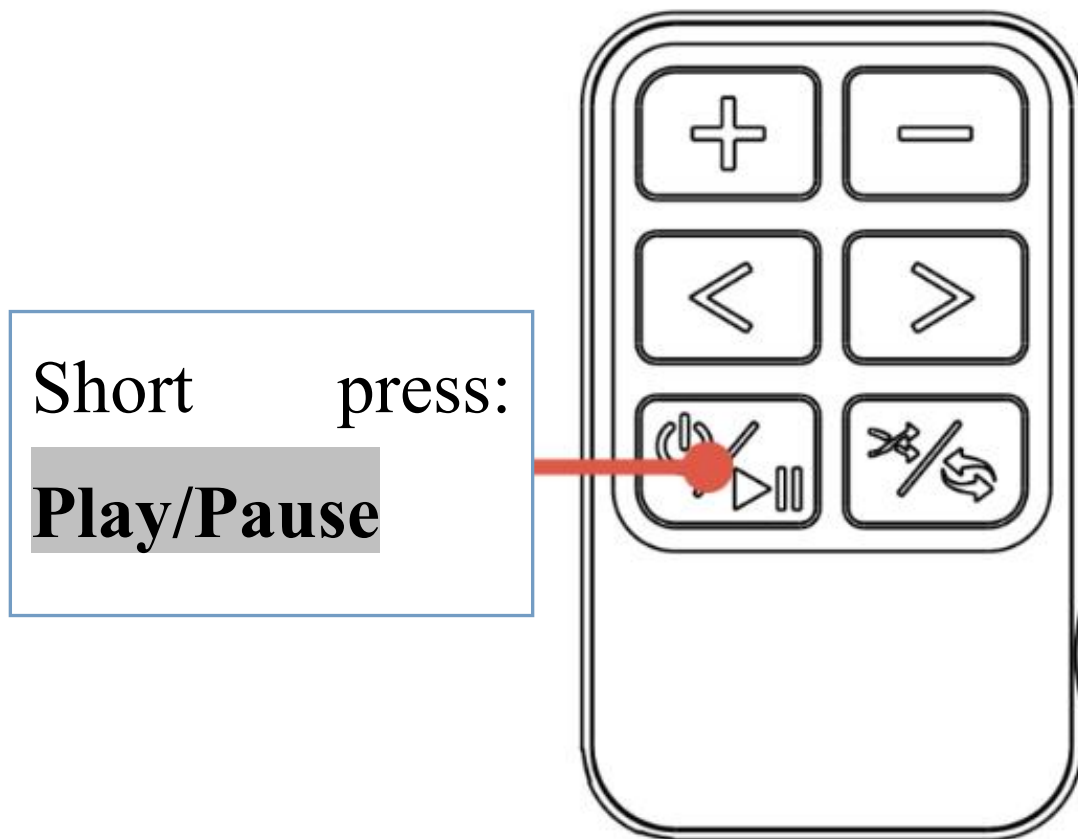


Short press the "**Power/Play**" button to play/pause.

In the off state, insert the headphones first, press and hold the "Power/Play" button, the machine will turn on and automatically play music files. (Blue light flashes).

During listening: blue light flashes

2.4 Fast forward/rewind

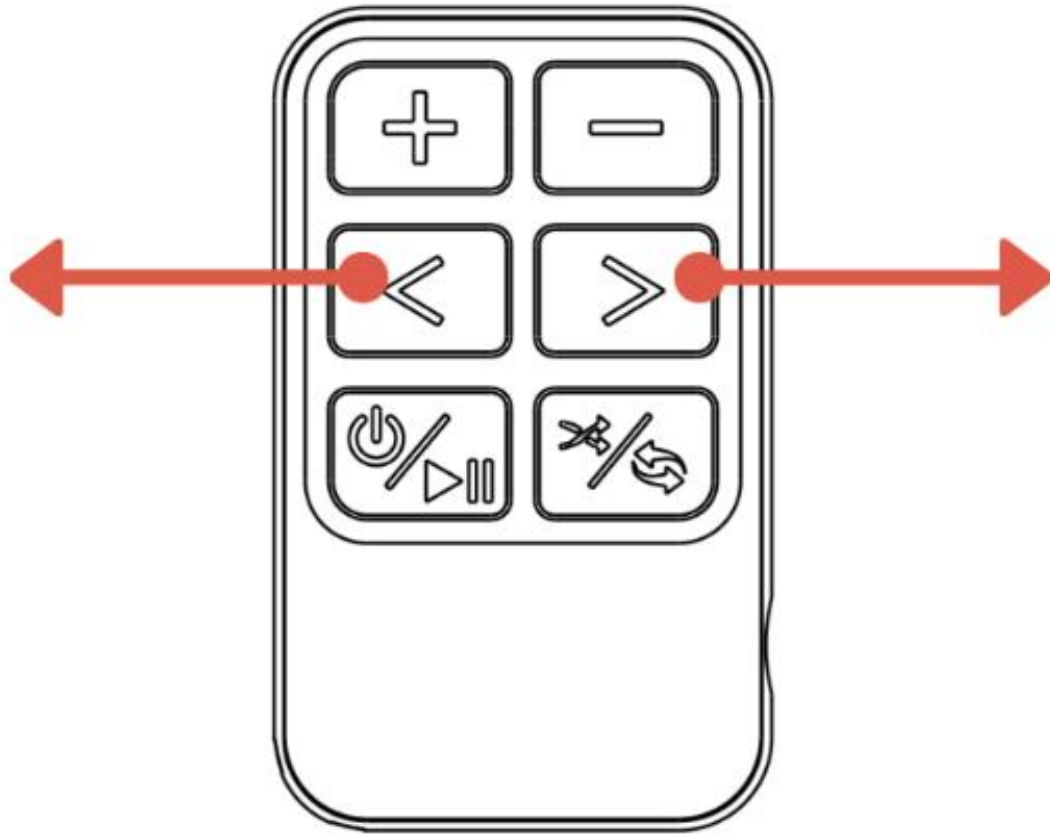

< Short press: previous song
Long press : fast backward while playing

> Short press: next song;
Long press: fast forward while playing

2.5 Switch play modes



Press it briefly to switch
Repeat all/Shuffle play
(The red light remains on
for 2 seconds)


Repeat all: play in the order of the files in the MP3 (you can see the file sorting when connect to computer)

If you download an audiobook, please sort on your computer first and then switch to sequential playback mode to play it

Shuffle play: Out of order, random play

3. Data Transfer

- ① With the machine switched off, connect the machine to the computer using the USB cable included in the package, the computer will recognise it after a few seconds and the "USB DISK" logo will pop up.
- ② When connected to the computer, the red light flashes and data transfer is possible.

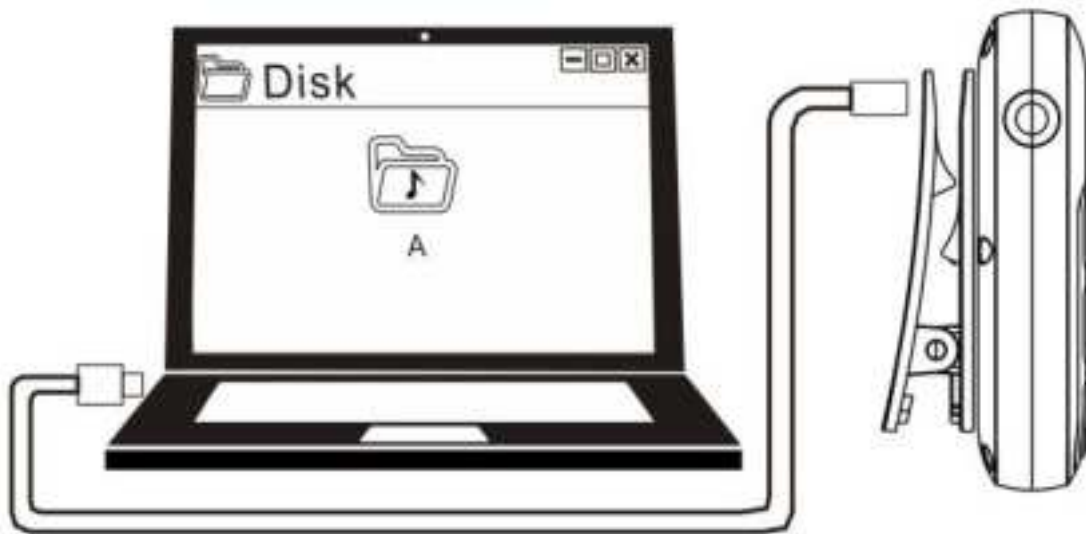

Tips: Do not disconnect during data transfer. If the computer does not recognise it, or if the "USB DISK" logo does not pop up after a few seconds, please plug it in again.

Transfer files to MP3 player

Please note:

► Due to replication protection, it is not possible to import genuine music files from music playing software such as **DAB+**, **iTunes**, **Spotify**, **YouTube Music**, etc. Please support genuine music and respect copyright.

► Most of the MP3 players in the market (except ipod series) do not support this audio format. If you need to import audio files or other audio files to MP3 player, please select the audio file formats supported by MP3/WMA/WAV/FLAC/APE/OGG.

► Maybe some MP3 players are shipped with a few songs by default. This is normal.

How to import audio files to MP3 player?

①Copy and paste the existing MP3/WMA/WAV/FLAC/APE/OGG audio files from your computer disk to the USB DISK folder.

②If it is a local audio file saved in iTunes library or other music software (e.g. recording, not music downloaded from music software), just copy and paste the same.

► Users can scan the code to watch the demo video for playback (for study only/iTunes as an example, please search Google for the method of importing MP3 player locally by other software)



4. Technical specifications

Model	X18
Ingress Protection	IP68 6: Highest level of dustproof 8: Highest level of waterproof
Size	5.1*3*2.3cm/2*1.2*0.9in (Subject to the specific object)
Weight	22g/0.78oz
Audio Interface	3.5mm Jack
Headphone output	External stereo
Internal memory	8GB – 64GB
Premium battery	250 mAh
Battery specifications	3.7V/502030
Operating Temperature	-5 - 40°C
Compatible Systems	Windows/Mac
Music Format	MP3/WMA/WAV/FLAC/APE/OGG
Packing list	1*MP3 player ; 1*USB Cable 1*Earphones; 1*Manual

5. QA&Warm Tips (Must view!)

Q1: Why does the storage capacity displayed on the operating system not match the actual capacity?

A:The memory is different because the difference in the conversion units of memory between computers and other devices: this machine is converted in 1000, i.e. 1GB = 1000MB; while computers are converted in 1024, i.e. 1GB = 1024MB. This is normal, for more information, please Google.

Q2:Why some songs cannot be played locally?

A:It supports format: MP3/WMA/WAV/FLAC/APE/OGG. If encounter unplayable songs, please change the format of the song.

Q3: Disk Error?

A: Cut off its power when format device didn't completed, so it lost system firmware. Please

connect computer to format

Q4:Product response times slowing down?

A: Recommended formatting Reason:

- ①The MP3 file is corrupted.
- ②After prolonged use or doing frequent file deletions, its internal flash memory can Fragmentation (similar to hard drive fragmentation) can occur and cause.

Q5:How to play higher quality sound?

A: Download higher quality mp3 music

Q6:Can't transfer files to MP3 player?

A: Please refer to page 9 of the manual.


Q7:Failed to connect to computer?

A: ① Before connecting the MP3 to a computer, turn off the MP3. When connecting to a computer, please place the MP3 smoothly, do not press any buttons.

② Please go directly to the file manager of this computer and see if there is a USB DISK

for the MP3 in the Devices and drives

- ③ Reboot the computer and MP3
- ④ If you are a MAC user, please replace the type-c adapter
- ⑤ Replace the jack, or change the computer and cable
- ⑥ Please use the original USB cable or a data cable that can be used to transfer data (some data cables can only be used for charging)
- ⑦ Restart the computer or MP3.
- ⑧ Check if the USB DISK identifier appears on my computer. Click "**USB Disk Identifier**" in the lower right corner of the desktop - [Open Devices and Printers] - [Devices] - right click [HS USB FlashDisk] - [Remove Device] and then connect to the computer.

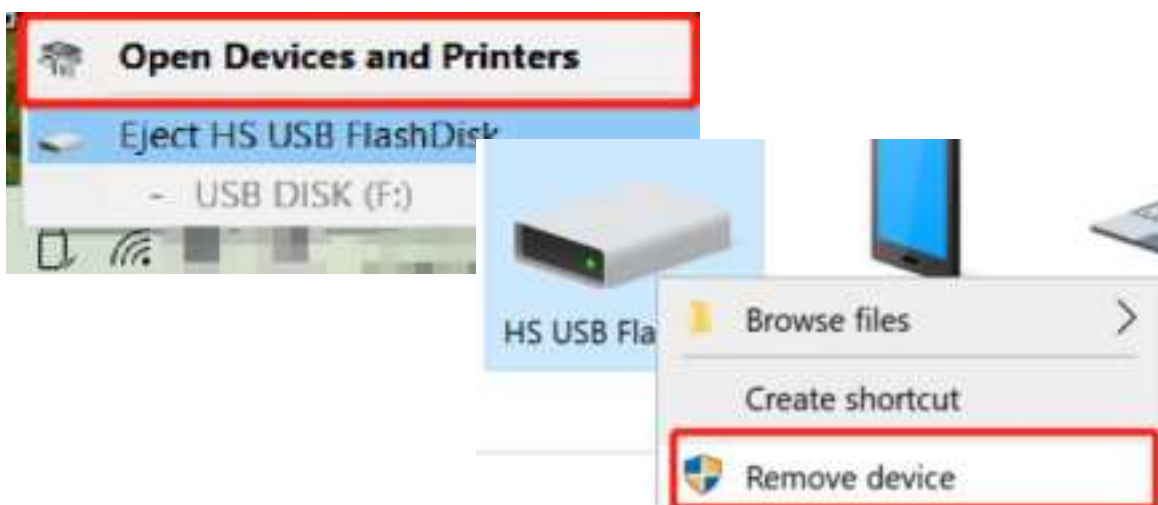

6. Warranty and Service

If a product is damaged or broken within one year, we will replace it with a new product free of charge. The warranty does not cover loss of products due to customer's negligence.

Order number	
Contact Email	info@Volorful.ntesmail.com
Date of purchase	
Warranty Period	1 year from the date of purchase

We are sorry, but we do not provide support by calling us. We apologize for the inconvenience, but you can contact us by e-mail and we will respond quickly and as detailed as possible. (When contacting us, please provide your shopping platform and order number).

7. Instructions in QR-Code PDF



Deutsch



English



Español



Français



Italiano



日本語