

Quick Start Guide*

PowerXL™
products that excel

AIR FRYER PRO XR

Air Frying

*See owner's manual for complete assembly, instructions and important safety information before using this product.

STEP 1



Make sure the Drip Tray is in place. Press the Power/Start-Stop Button to turn on the appliance.

STEP 2



Arrange food on Crisper Trays and place the Crisper Trays inside the appliance.

STEP 3



Select one of the one-touch cooking presets to begin the cooking cycle. If using manual settings, select the time and temperature and then press the Power/Start-Stop Button.

STEP 4



After the set cooking time has expired, the fan will run for 20 seconds to cool off the appliance and the appliance will automatically shut off. Remove the Crisper Trays while wearing oven mitts and enjoy!

Unpack all parts from the box and wash with warm, soapy water before first use (only accessories are dishwasher safe).

Quick Start Guide*

PowerXL™
products that excel

AIR FRYER PRO XR

Rotisserie

*See owner's manual for complete assembly, instructions and important safety information before using this product.

STEP 1



Make sure the Drip Tray is in place. Press the Power/Start-Stop Button to turn on the appliance.

STEP 2



Carefully poke the Rotisserie Shaft through food, secure the food with the Rotisserie Forks, and place the Rotisserie Shaft inside the appliance. For detailed instructions, please see the owner's manual.

STEP 3



Select one of the one-touch cooking presets to begin the cooking cycle. If using manual settings, select the time and temperature and then press the Power/Start-Stop Button.

STEP 4



After the set cooking time has expired, the fan will run for 20 seconds to cool off the appliance and the appliance will automatically shut off. Remove the Rotisserie Spit using the Fetch Tool or oven mitts and enjoy!

Unpack all parts from the box and wash with warm, soapy water before first use (only accessories are dishwasher safe).