 


VS
SASSOON

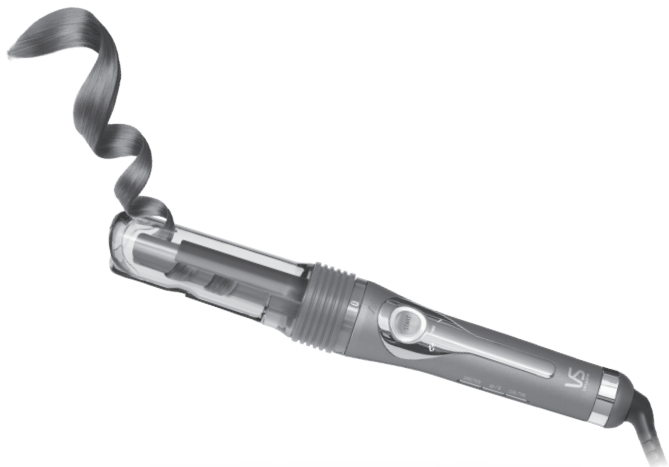

Curl Secret®

ceramic auto curler

INSTRUCTION BOOKLET

Please ensure you read & follow the styling instructions
before using for the first time.

VSC1041A

NEVER UNDERESTIMATE THE POWER OF A WOMAN WITH GOOD HAIR

SEE AMAZING, BE AMAZING

Before using your Curl Secret®
for the first time, scan the QR code
to watch the how to use product video:





IMPORTANT SAFETY INSTRUCTIONS

The following safety precautions should always be followed when using electrical appliances, especially when children are present in your household. Please read these instructions carefully & keep for future reference.

DANGER:

- Do not use this appliance in or near bathtubs, showers, basins or other vessels containing water - keep the appliance dry.
- When this appliance is used in a bathroom, unplug it after use given the proximity of water hazards are present even when the appliance is switched off.
- Do not immerse the appliance into water or other liquids.
- If this appliance falls into water, unplug it immediately -



DO NOT REACH INTO THE WATER

- This appliance is a burn hazard. Keep appliance out of reach from young children particularly during use & cool down.
- Always place the appliance with the stand, if any, on a heat-resistant, stable flat surface.

WARNING: Before & During Use

- Before using, always ensure that the voltage marked on the appliance is the same as your local power voltage.
- When the appliance is connected to the power supply, never leave it unattended.
- Do not operate this appliance or disconnect from the power supply with wet hands.
- Never use this appliance at the same time as styling products such as aerosols (spray).
- Be very careful when handling this appliance as parts of it may get extremely hot.
- Do not place the appliance on any heat sensitive surfaces or near flammable materials or objects.
- Keep the cord away from heated surfaces.

- Never block the air openings of the appliance or place on a soft surface such as a bed or couch where the air openings may be blocked - keep the air openings free of lint & other debris.
- Do not cover this appliance with anything when it is switched on or hot.
- To avoid electric shock, do not drop or insert any object into an opening in this appliance.
- This is a high heat appliance. Care must be taken to avoid the hot surfaces of the appliance coming into direct contact with the skin, in particular the eyes, ears, face & neck. **THE CURL CHAMBER MAY BE HOT TO THE TOUCH.**
- Do not use extension cord with this appliance.

NOTE:

- When using the appliance for the first time, a little smoke may appear with a distinct odour. This is common & will disappear by the next use.
- Each time you use the appliance, you may see some steam. Do not be concerned, this could be because of evaporation of the natural oils of the hair, residual hair products (leave-in hair products, etc.) or excess moisture evaporating from your hair.
- A heat-protection spray can be used to provide optimal protection of the hair.

WARNING: Storage & Maintenance

Always unplug the appliance immediately after use & before cleaning or maintenance.

WARNING: Do not wrap the power cord tightly around the appliance when storing. This causes undue strain on the power cord & protective guard. Over time, this will damage the power cord & at the high flex point of entry into the appliance, causing it to rupture & short circuit, resulting in an unsafe condition to the user. Inspect the power cord frequently for damage. Stop use immediately if damage is visible or if appliance stops or operates intermittently.

- If the power cord is damaged it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.
- Do not leave the appliance unattended when plugged in or switched on.
- Always allow the appliance to cool down before storing away in a location where children cannot reach it.

- Do not store or place this appliance in a location where it can fall or be pulled into a bath or sink.
- Never operate this appliance if it has been dropped or damaged, or if it is not working correctly.
- If this appliance is serviced by an unqualified person this could result in an extremely hazardous situation for the user. Contact Conair Customer Service if you have any issues operating your appliance.

CAUTION:

- This appliance is not intended for use by infirm persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience & knowledge unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- Children should be supervised to ensure they do not play with the appliance.
- Use this appliance only for its intended use & as described in this instruction booklet. This appliance is not intended for commercial use.
- Do not use any attachments other than those supplied by Conair Australia Pty Ltd.
- For additional protection, the installation of a residual current device (RCD) with a rated operating current not exceeding 30mA is advisable in the electrical current circuit supplying the bathroom - ask your installer for advice.

 
CURL SECRET® CERAMIC AUTO CURLER


AMAZING CHOICE!

Hair goes in. Curl comes out. Just like magic!

From the experts who revolutionized hair curling with the ORIGINAL auto curler in 2013, we proudly introduce the completely reimagined Curl Secret® - the dream tool for those seeking flawless, effortless curls & waves, every time.

This game-changing technology takes the guesswork out of styling, allowing you to customize your curls & waves any way you like, for total foolproof styling.

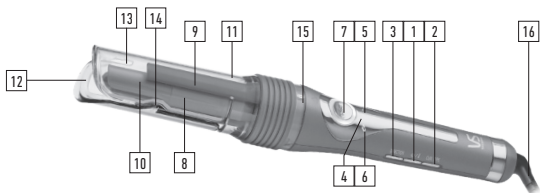

- | | |
|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <ol style="list-style-type: none"> 1. Power  button 2. CURL TYPE button 3. Curl DIRECTION button 4. LED control with 5 heat settings (150°C to 210°C) 5. LED control with 3 preset curl types (defined, loose, wavy) 6. LED control with 3 curl directions (left, right, or alternating) 7. START button 8. Ceramic-coated barrel | <ol style="list-style-type: none"> 9. Hair guide 10. Cool tip 11. Curl chamber 12. Detachable barrel cover 13. Short slot 14. Long slot 15. 2 cover locking positions so you can choose the most comfortable styling position with either your left or right hand 16. Swivel power cord |
|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|






CERAMIC TECHNOLOGY

Ceramic Technology helps keep your hair looking healthy & shiny by maintaining even heat during the straightening process. Static is reduced by quickly sealing the hair cuticle layer ensuring minimal frizz making your hair easier to manage.

DUAL VOLTAGE

The Curl Secret® has a dual voltage feature that allows the styler to be used while travelling worldwide. The voltage automatically converts for ease from 120V- to 240V- without the need for a switch.

NOTE: A suitable plug adaptor will be required - refer to chart below.

Plug adaptor required	Voltage and plug adaptors	Country
	British plug: 230V	Ireland, Great Britain, Singapore, South America, Hong Kong (parts only), Africa (parts only)
	European plug: 220V - 240V	Asia, Europe, Middle East Noumea, Scandinavia, South America, Hong Kong (parts only)
	Australian and New Zealand plug: 230-240V	Australia, New Zealand
 	American plugs: 100-120V	North America, Japan, (parts of) NB - The voltage in Japan is 100V. Whilst this styler voltage is rated at 120V, it will still work at 100V, however the heat-up time may take longer.

HOW TO USE THE CURL SECRET® CERAMIC AUTO CURLER

The Curl Secret® is a different type of styling tool & works differently to any other curling stylers you may have used in the past. **It is essential you read these instructions before use.**

HOW-TO VIDEO

Before using your Curl Secret® for the first time, scan the QR code to watch the how to use product video:



IMPORTANT:

Hair that has been heavily bleached or chemically treated should only use the low heat setting on this product. Please consult your hairdresser on using heated appliances if you have any concerns about the condition of your hair.

CAUTION:

This is a high heat appliance. Care must be taken to avoid the hot surfaces of the appliance coming into direct contact with the skin, in particular the eyes, ears, face & neck. **THE CURL CHAMBER MAY BE HOT TO THE TOUCH.**

Keep appliance out of reach from young children particularly during use & cool down. Never leave this appliance in a place where young children could access it.

BEFORE USING

- Remove all packaging & point of sale labels before use.

DO NOT USE THIS STYLER ON HAIR EXTENSIONS.

TANGLE-FREE TECHNOLOGY

Curl Secret® is safe & easy to use when used properly. However, should improper use occur, the tangle-free feature has been designed to immediately stop the appliance from drawing hair into the curl chamber & reverse to a neutral position.

IMPORTANT: If hair does get tangled, press the **START** button to stop the current curling operation or unplug the unit directly. Then work the hair out of the styler carefully. Using your fingers, slowly remove a few strands of hair from the chamber at a time. Make sure fingers do not come in contact with the heated curl chamber.


MEMORY FUNCTION

The Curl Secret® features a memory function, which will automatically remember & resume your previous heat, curl type & curl direction settings from when it was powered off last time, saving time & hassle.

 
LOW ENERGY-EFFICIENT MODE

If the Curl Secret® is on & idle for more than 20 minutes, it will switch to low-energy mode & the heat setting will automatically reduce to around 150°C. If you wish to continue using the styler after this time, simply press the **START** button.

AUTOMATIC SHUT-OFF

The Curl Secret® has an automatic shut off feature for added safety. If the styler is switched on for more than 60 minutes continuously, it will automatically switch off. If you wish to continue using the styler after this time, simply press & hold the  button for approximately 1 second to turn the power on again. The styler will default to the last settings used.

HEAT SETTINGS GUIDE




Press the power  button repeatedly to select the desired temperature setting. There are 5 heat settings to choose from, depending on your hair type. Use the following settings as a guide:

SETTINGS/ TEMPERATURE	HAIR TYPE
150°C	Delicate, fine, bleached hair
165°C	Average to thick treated hair
180°C	Normal, thick or wavy hair
195°C	Hard to style, thick hair
210°C	Hard to style, very thick hair

IMPORTANT: This is a high heat appliance at 210°C. If your hair has been heavily bleached or is chemically treated or you are concerned with the condition of your hair, please consult your hairdresser before using this appliance.




CURL TYPES GUIDE

Press the **CURL TYPE** button repeatedly to select the desired curl type. There are 3 preset curl types with rapid audio beeps to indicate when the curl is ready. Use the following as a guide:

CURL TYPE		RAPID AUDIO BEEPS
Defined		Beeps after 12 seconds
Loose		Beeps after 9 seconds
Wavy		Beeps after 6 seconds

CURL DIRECTIONS GUIDE

Press the curl **DIRECTION** button repeatedly to select the desired curl direction. Use the curl direction setting to choose either a uniform or a natural finish. Use the following settings as a guide:

Symbol	Curl Direction
	LEFT = each curl will fall in an anti-clockwise direction
	RIGHT = each curl will fall in a clockwise direction
	ALTERNATING = alternates the direction of each curl for a more natural look

DETERMING THE CORRECT HAIR SECTION SIZE











The Curl Secret® is a different type of styling tool & works differently to any other curling stylers you may have used in the past. So before you start using it, familiarize yourself with the right size hair section depending on your length.

IMPORTANT: Do not start the curl any closer than 2cm to 4cm from the scalp, depending on how long your hair length is.

Comb through to remove any tangles & divide hair into sections no wider than 2.5cm (the smaller the section, the tighter the curls).

The short & long hair slots should help you to determine the optimum hair section. DO NOT try to jam larger sections into the hair slots, as this is improper use.

MIX & MATCH

style	temp	direction	curl type	finishing
ultra-defined curls	195 / 210°C			let hair cool before gently shaking curls
classic curls	180 / 195 / 210°C			let hair cool before combing through with a wide-tooth comb
glam curls	180 / 195 / 210°C			let hair cool before using a paddle brush
soft, natural curls/waves	150 / 165 / 180°C			let hair cool before combing with a wide-tooth comb
beachy waves	180 / 195 / 210°C			Let hair cool before using fingers to tousle and loosen curls for a unstructured look

OPERATING INSTRUCTIONS

Ensure your hair is clean, completely dry & free from hairspray. Hairspray may cause the hair to heat up to astronomical temperatures & stick like glue, in-turn creating difficulty to remove hair from the styler.

- IMPORTANT - You must section your hair & comb through until its completely tangle-free before use.**

The secret to nailing your look is to create 3 sections.

This will ensure your style always looks consistent.

- Use a comb or fingers & create the top section, from temple to temple and clip away on top of the head with a sectioning clip.
- Create the middle section from ear to ear & clip away with a sectioning clip.
- The hair left down is your bottom section.
- Always start with the bottom section first & once completely styled as desired, unclip the middle section, style & then unclip the top section. When using the Curl Secret® you will need to divide the hair into smaller sections. Refer to **DETERMINING THE CORRECT HAIR SECTION SIZE** for more detail.

For more information on sectioning hair go to **vssassoon.com.au**.

 
- Plug your Curl Secret® into a suitable plug adapter (refer to chart), connect to a household outlet (120-240V) & place on a heat protective, flat level surface.
- Switch on the styler by pressing & holding the power  button for approximately 1 second. The styler & LED display will turn on, while the default heat setting will start flashing.
- Select your desired temperature, curl type, & curl direction settings. (Fig. 1 and 2)



Fig. 1



Fig. 2

5. Hold the styler vertically/upright with the short slot opening facing towards your head.
6. Place a section of hair in the short slot opening at the top of the unit making sure that all the hair is placed inside the top of the split barrel. (Fig. 3)
7. Guide the remaining section of hair down the long slot until it's below the * symbol & gently hold in place to ensure proper position for curling. Make sure 100% of the hair section is aligned along the slot and that there are no fray hair strands.

IMPORTANT - Your hair may become tangled if these instructions are not followed or if any hair is held loosely & falls away without 100% of it entering the curl chamber at the same time.

8. Press the **START** button & watch the magic happen as your hair gently wraps around the barrel. (Fig. 4)
9. Hold the curler in place until you hear the rapid beeps. (Fig. 5)
10. Pull the curler down & away to reveal the curl. (Fig. 6)
11. Allow your hair to cool before handling or combing.
12. Repeat all desired sections until you have the number of curls you would like. Use light hair spray to set the curls and maximize curl longevity.
13. After use, turn the styler off by pressing & holding the power  button for approximately 1 second. Allow to cool before storing away..



Fig. 3

 


Fig. 4



Fig. 5



Fig. 6

CLEANING & MAINTENANCE

In order to prevent build-up of residue from hair products which could prevent the styler from working properly, it is important to clean the curl chamber regularly.

- Ensure the styler is switched off, unplugged from the power supply & completely cooled down.
- Twist off the detachable cover. Wipe curl chamber & cover with a soft, damp cloth.
- Allow cover & chamber to dry.
- Replace cover back on styler. Twist cover until it locks in place on styler.

LIMITED 2 YEAR WARRANTY

Retain this section of the warranty card with your receipt/proof of purchase. You must present it to obtain replacement or service under the warranty.

The warranty may only be claimed where proof of original purchase is presented, i.e. original purchase receipt or invoice.

Attach a copy of your purchase receipt and store in a safe place.

To make a warranty claim, call Customer Service on the phone number or email below. Or you can return the defective product back to the place it was purchased where it will be replaced (see point 12 of paragraph C. Conditions).

Please provide the following details:

1. Date of purchase
2. Retailer name & location:
3. Product name/model number:
4. Confirm you have your purchase receipt:
5. Detail the problem with your product:

Conair Australia Pty Ltd

PO Box 146
Terrey Hills
NSW 2084

Customer Service

Australia
1800 650 263
email: aus_info@conair.com

Conair New Zealand Ltd

PO Box 251159
Pakuranga, Auckland
New Zealand 2140

Customer Service

New Zealand
0800 266 247
email: aus_info@conair.com

WARRANTY AGAINST DEFECTS

A. AUSTRALIAN CONSUMER LAW

1. Our goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure.
2. The guarantees under the Australian Consumer Law ("ACL") are provided in sections 51 to 59 inclusive of the ACL ("Statutory Guarantees") and the remedies are provided in sections 259 to 266 inclusive of the ACL (Statutory Remedies).

B. VS SASSOON EXTENDED WARRANTY

1. In addition and subject to the Statutory Guarantees and Statutory Remedies, the following express warranty ("Warranty") commences from the date of purchase and continues for a period of 24 months ("Warranty Period") after which it expires. Subject to the conditions in Section C below, Conair warrants to the original purchaser ("Purchaser") of the VS Sassoon product that is the subject of this warranty ("Product") that if during the Warranty Period, the Product suffers from any defect caused by faults in materials or workmanship, Conair will a) replace the Product, or b) exchange defective parts in the Product or c) repair the Product, as Conair may choose in its discretion ("Warranty"). In this Warranty "Conair" means Conair Australia Pty Limited (ABN 64 068 492 044) of The Equinox Centre, Suite 101, 18 Rodborough Rd, Frenchs Forest, NSW, 2086. in relation to Products purchased in Australia and Conair New Zealand Ltd in relation to Products purchased in New Zealand.
2. To honour the Warranty, Conair must replace, or exchange parts in, or repair, the Product, as Conair determines, in accordance with paragraph B1 above, subject always to the conditions in Section C below.
3. If any of the conditions in Section C below are inconsistent with any provisions of the ACL or regulations made thereunder, those provisions of the ACL or regulations shall prevail to the extent of the inconsistency.

C. CONDITIONS

1. The Product must be used in accordance with manufacturer's instructions. This Warranty does not apply should the defect in or failure of the Product be attributable to misuse, abuse, accident, act of God such as lightning, or nonobservance of manufacturer's instructions on the part of the user. This Warranty does not cover ordinary wear and tear in the Product or its parts.
2. Conair does not accept liability for a) any loss or damage however suffered, caused by or arising out of any failure to use the Product in accordance with the manufacturer's instructions, and b) any indirect, consequential or economic loss or damage however caused.
3. This Warranty is immediately void if – a) any serial number or appliance plate is removed or defaced, b) the Product has been serviced or otherwise repaired by a person not authorized to do so by Conair or where non approved replacement parts are used.
4. The Product is designed for domestic use only. The Product must be connected to the electrical voltage supply as specified in the ratings label located on the Product. This Warranty does not cover defects arising from non-domestic use or incorrect voltage supply.
5. This Warranty may only be claimed against where proof of original purchase is presented, for example, original receipt or invoice.
6. Any parts of the Product that need to be replaced, or if the whole Product needs to be replaced, the replaced Product, becomes the property of Conair. The Warranty on any replacement Product or parts will expire on the same date that the Warranty Period on the original Product expires.
7. The benefits provided by this Warranty are in addition to all other rights and remedies in respect of the Product which the Purchaser has under the ACL, and applicable laws in New Zealand, which rights and remedies by law may not be excluded. All other warranties and representations express and implied are hereby excluded.
8. The defect must have occurred during the Warranty Period and Purchaser bears the onus of proving that fact, and that the defect was not caused by any of the causes excluded from this Warranty.

9. This Warranty does not cover Products purchased from any person who is not a retailer serviced by Conair's authorised distributors or purchased second hand.
10. The Purchaser is responsible for all postage and freight charges and any other expenses incidental to claiming against this Warranty.
11. The Warranty excludes consumable items (such as blades or brushes) and normal wear and tear.
12. If you're certain your product is defective, and the product is covered by the terms of this warranty, you need to take the product back to the place you purchased it from, where the retailer will replace the product for you on our behalf. In this event, per the terms of this warranty you will need to present this portion of the warranty card and the purchase receipt as proof of purchase so please make sure you keep both this card and your receipt on hand for the duration of the warranty period.

SPARE PARTS

Replacement parts may be available for your product. Contact us on the phone or email address provided for more details. Please provide your product name/model number details, date of purchase and part you require.



Certain trademarks used under
license from The Procter & Gamble
Company or its affiliates.

©2023 Conair Australia Pty Ltd
Suite 101, 18 Rodborough Rd
Frenchs Forest NSW, 2086
Australia

Conair New Zealand Limited
PO BOX 251159
Pakuranga, Auckland 1706
New Zealand

CONTACT US:

For advice, tips on your new VS
product
E-mail us on: aus_info@conair.com

CUSTOMER SERVICE:

Australia: 1800 650 263
New Zealand: 0800 266 247

vssassoon.com.au

VSC1041A

SEE
AMAZING
BE
AMAZING