



Sonos Play 5 Tweeter Speaker Replacement

This guide will show how to properly remove the tweeter speaker from the Sonos Play 5 speaker.

Written By: Alana Miranda



INTRODUCTION

If your tweeter speaker sounds muffled or disstorted, then you can properly remove it by using the correct technique without further damaging it.

TOOLS:

- [Screwdriver](#) (1)
 - [Magnetic Project Mat](#) (1)
 - [Tweezers](#) (1)
 - [Magnetic Pickup Tool](#) (1)
 - [Metal Spudger Set](#) (1)
-

Step 1 — Sonos Play 5 Disassembly



- Use the metal spudger to pry open the front grill. Little force will be needed to wedge the metal spudger into the crevice.
- After the grill has been loosened on all edges. Use your fingers as a wedge and gently pull the grill off the speaker. This will reveal the front speaker panel.

Step 2



- Use a pointed metal spudger to remove the rubber plugs covering the screws in the bottom left and right corners of the speaker panel.
- Insert the spudger against the side of the rubber plug and the speaker panel while leveraging upward.
- Remove the eight 12 mm Phillips #1 screws bordering the front speaker panel.

Step 3




- Orient the speaker so that the volume and speaker control buttons are facing down onto your work space. The Sonos name and product number should be facing upward toward the ceiling
- Use a metal spudger to pry the outer corner of the grey rubber pad revealing eight 12mm screws.

Step 4



- With a #1 Phillips-head screwdriver, remove the eight 12mm screws on the bottom panel.
- We have marked the original placement of the warranty stickers in orange. To remove use a pair of tweezers to grip onto the sticker and pull with a gentle upward motion
- ❗ We have already removed the warranty stickers in this picture.

Step 5

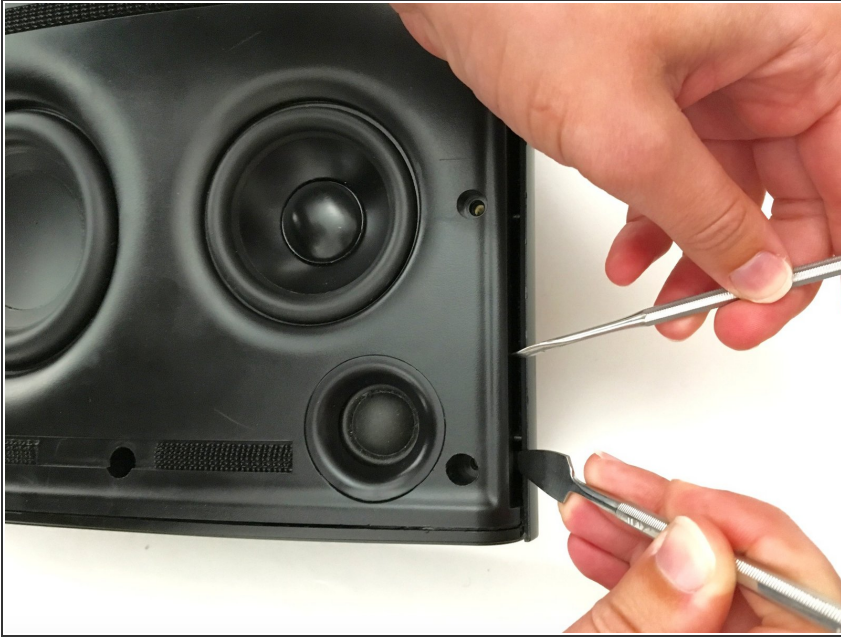


- Orient the speaker so that the speaker panel is facing upward.
 - With a metal spudger, apply medium force and wedge the spudger into the crevice with a prying motion
- i** This action will need to be repeated on all sides to allow for the panel to be opened up

Step 6



- Use both hands to lift the front speaker panel away from the skeleton of the speaker housing.
- i** While removing the front speaker panel, pay close attention to the bottom right-hand corner. There will be an antenna connector you will need to remove in the next step.

Step 7

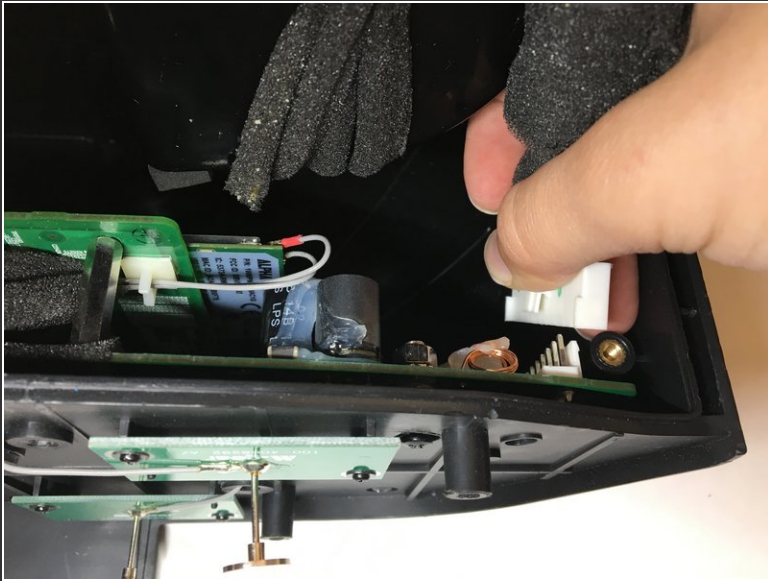

- Using your thumb and forefinger to grip the antenna clasp while moving outward and away from the motherboard.
- ⚠ Do not use excessive force while disconnecting. This will damage the connector and motherboard.
- ℹ We have removed the bottom panel in this picture for another guide.

Step 8 — Tweeter Speaker



- After you unclip the connectors, locate the tweeter speaker.
- Place your hand around the tweeter speaker and locate the area you're going to start removing.
- ☑ Remove any additional insulating foam around the tweeter speaker.

Step 9



- Use the metal spudger that has a pointed curved tip to separate the soldered tweeter speaker.
- ⓘ The tweeter speaker is soldered to the front speaker panel, therefore use a prying motion to remove it.
- ★ This step will require the most amount of time- approximately 30 minutes to safely fully and properly separate the soldered part.

Step 10



- The tweeter speaker is successfully removed

To reassemble your device, follow these instructions in reverse order.