

INNOSILICON

D9-DCR USER MANUAL



Table of Contents

1. OVERVIEW	1
2. ASSEMBLE THE MINER	2
2.1 Check the miner before power on	2
2.2 Connect the PSU	3
2.3 Connect the Ethernet Cable	3
3. OPERATE THE MINER	4
3.1 Enter the miner console	4
3.2 Set up the pool	4
3.3 Check the hashrate of the miner	5
3.4 Network configuration	5
3.5 Other pages	6
3.5.1 Overview	6
3.5.2 Upgrade	6
3.5.3 Modify the password	7
3.5.4 Reboot	7
3.5.5 Factory reset	7

1. OVERVIEW



Part Number	D9
Algorithm	Blake256
Hash Rate	2.4Th/s (+-8%)
Power	1000W +/-8%
Size (L×W×H)	(L)310mm*(W)130mm*(H)155mm
Net Weight	3.6KG (without PSU)
Operating Temperature	0-40 ℃
Required rated PSU	1400W or above, 7 * PCI-E 6Pin
Network Connection	Ethernet

2. ASSEMBLE THE MINER

2.1 CHECK THE MINER BEFORE POWER ON

- Check the warranty sticker is well or not, especially the hashboards PSU port side. If the warranty sticker is damaged when you received the miner, please contact our After-sales.
- Before you power on the miner, shake the miner softly, if you can hear the sound of metal banging on metal, please contact our After-sales.
- Check if the fan work well, if you find the fans broken please contact our After-sales.
- Check the cable connection, if it is different from below picture, please connect the cables as below.



2.2 CONNECT THE PSU

Every hash board needs to be inserted with 2 PSU cables, controller only needs 1 PSU cable according to the following image



2.3 CONNECT THE ETHERNET CABLE

Insert one end of the Ethernet cable into the router and the other end into the slot shown in the following image, you should plug in the miner one by one, only when you have accomplished IP Setting of the previous one you can plug in another miner .



IP SET button: Press it more than 5 seconds to recover the IP to 192.168.1.25


Press it more than 20 seconds to switch the Dynamic (Static) IP to Static (Dynamic) 4.

RESET button: Your miner will restart if you press it. It won't recover your settings to the default.


3. OPERATE THE MINER

3.1 ENTER THE MINER CONSOLE

DHCP(the Normal led on the control board should be blinking) is the default IP mode of the miner, find the IP via the router or the IP scanner. Enter the IP of the miner on the browser and press the Enter button. The chrome is the suggested browser.

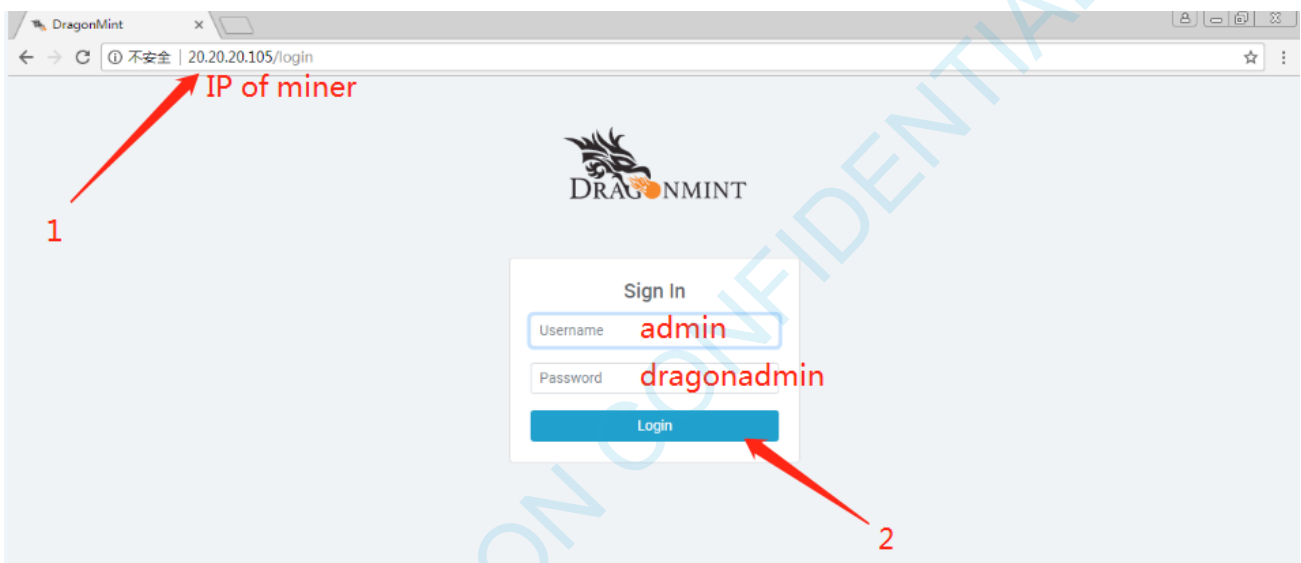


3.2 SET UP THE POOL

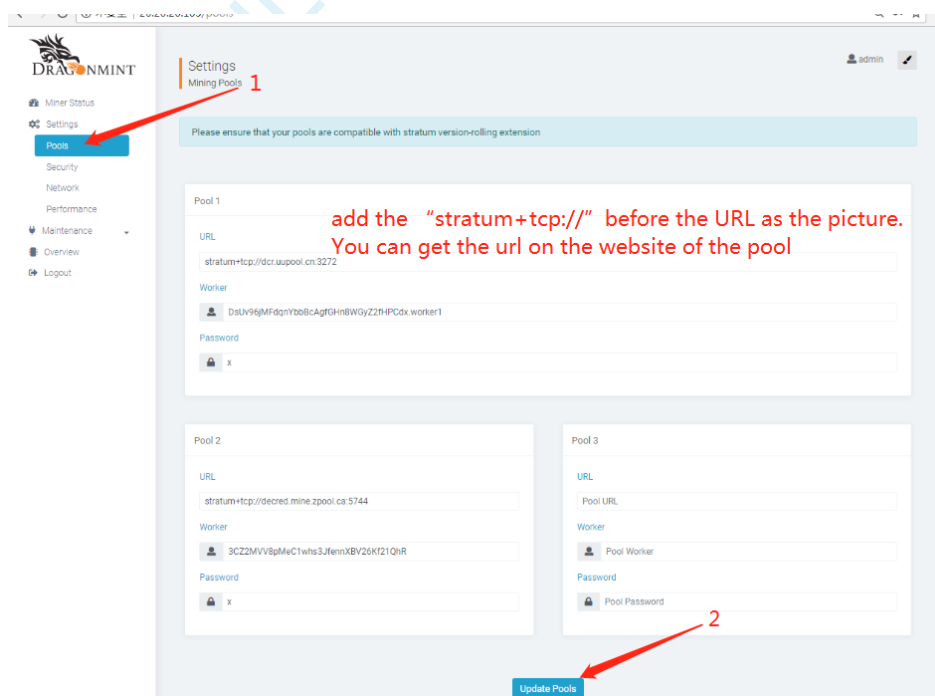

3.3 CHECK THE HASHRATE OF THE MINER

After set up the pool, the miner will mine for you.

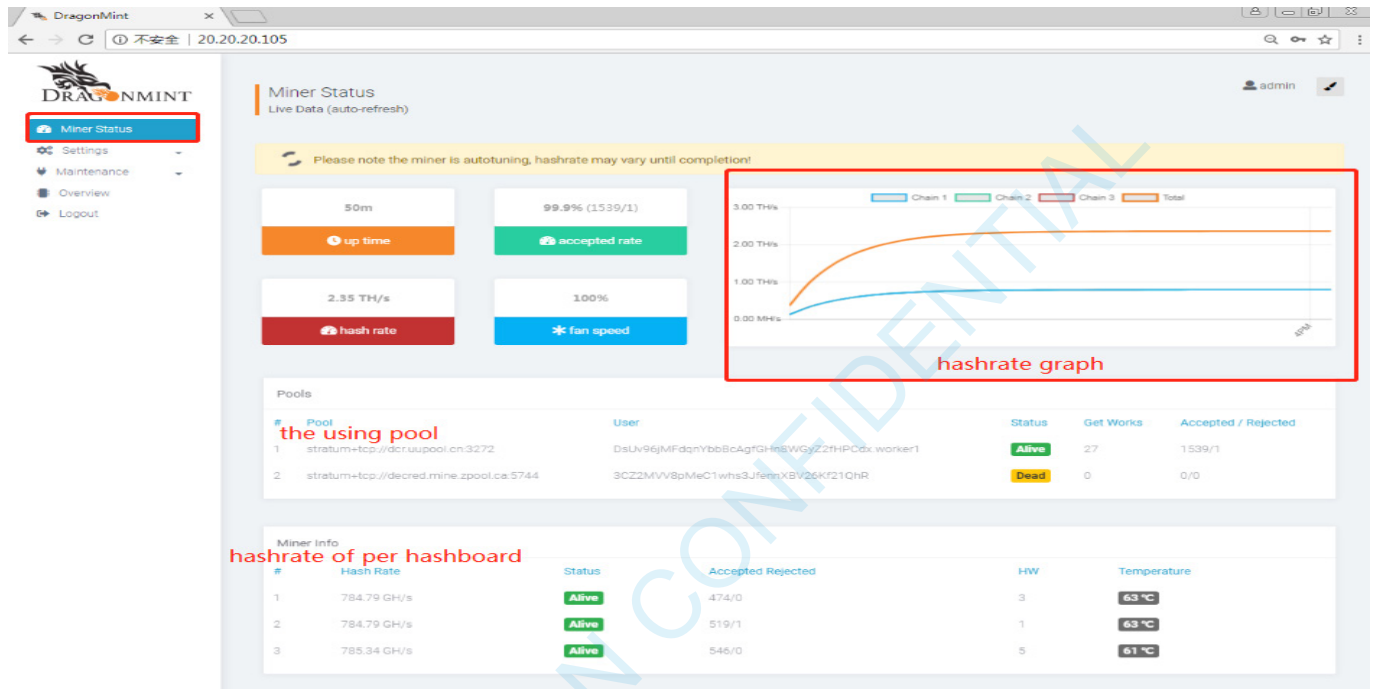

3.4 NETWORK CONFIGURATION

The screenshot shows the DragonMint Network Settings page. The left sidebar has a menu with 'Network' highlighted. The main content area displays 'Settings Network' with a warning: 'if you want to use the static IP, please click here unselect the DHCP'. Below this, there is a form for Network Settings with fields for IP, Netmask, Gateway, DNS 1, and DNS 2. A red arrow points to the 'Update' button. Another red arrow points to the 'Network' menu item in the sidebar.

1

2

3.5 OTHER PAGES

3.5.1 OVERVIEW

DragonMint Overview

Version

Type	B29
Controller Version	g19
MAC Address	a0:b0:45:00:2f:94
Build Date	17th of April 2018 12:42 PM
Platform Version	b29_20180417_124258

Network Status

Type	dhcp
IP	20.20.20.105
Netmask	255.255.255.0
Gateway	20.20.20.1
Name Server 1	208.67.222.222
Name Server 2	

System

Uptime	08:08:10 up 57 min, load average: 0.73, 0.73, 0.67
Memory Used	55336 kb / 250544 kb 22%
Memory Free	195208 kb / 250544 kb 78%
Cached Used	33676 kb / 244628 kb 14%
Cached Free	210952 kb / 244628 kb 86%

3.5.2 UPGRADE

DragonMint Maintenance Firmware

Upgrade

- The update .swu file should be obtained from our support center
- Do not power off or refresh this page during the upgrade process
- All your settings will be preserved

选择文件 未选择任何文件

Upgrade Now

Latest Firmware


Check for firmware updates.

Check Now


select the firmware file

start update

3.5.3 MODIFY THE PASSWORD

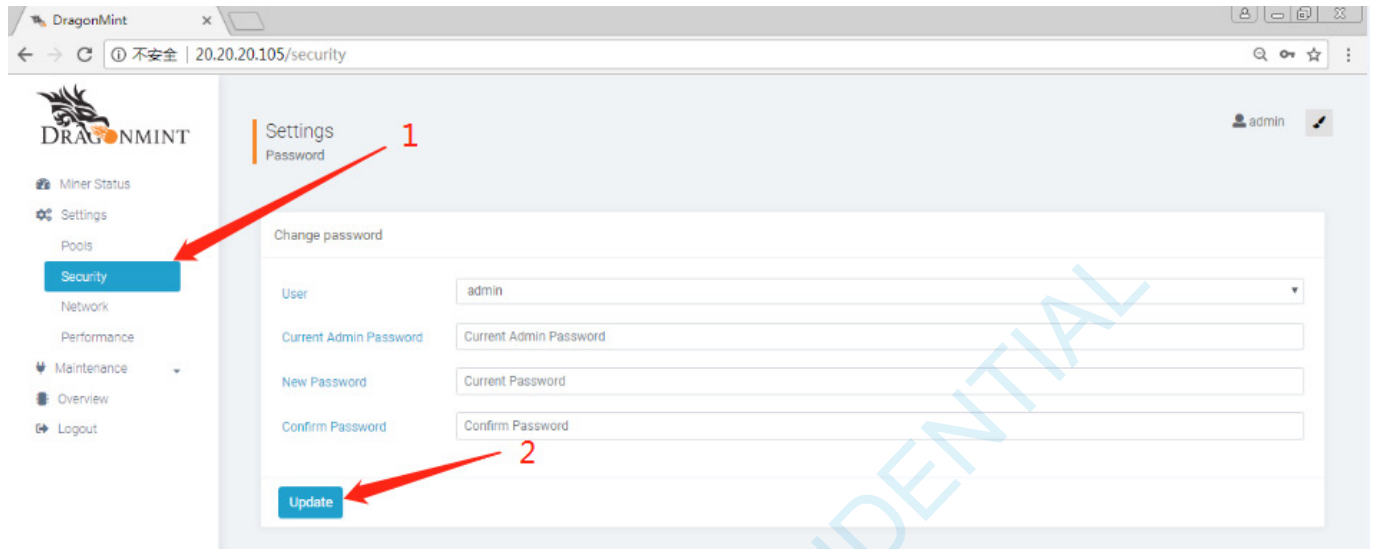

3.5.4 REBOOT

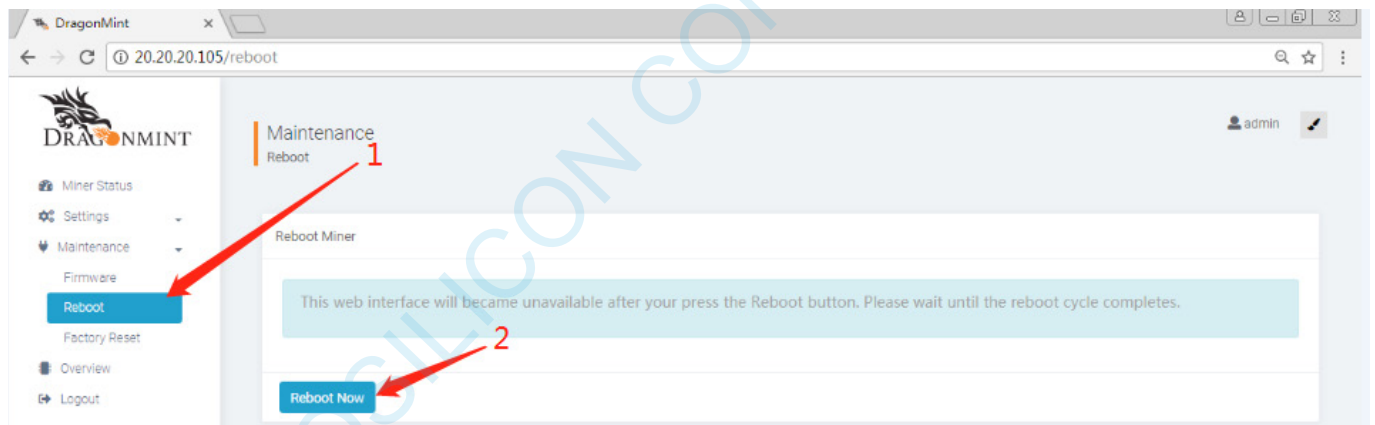

3.5.5 FACTORY RESET

