

HALO[®] BOLT[™] ULTIMATE



OPERATING INSTRUCTIONS
PLEASE READ BEFORE OPERATING THIS EQUIPMENT

HALO BOLT ULTIMATE

Thank you for choosing HALO!

Powerful and loaded with features including an easy to use digital display, the HALO BOLT ULTIMATE can be used to safely jump start your vehicle, inflate your tires and power your electronic devices anywhere. The HALO BOLT ULTIMATE provides portable power so you can charge your phone, tablet and other electronic devices anywhere! The HALO BOLT ULTIMATE also includes a convenient floodlight and emergency light. Compact, versatile and simple to use, the HALO BOLT ULTIMATE and all accessories fit neatly in its carrying pouch and is perfect to store in your home or vehicle for every day use or an emergency need. Never be without a charge, a jump start, or with a flat tire again!

SAFETY PRECAUTIONS

DANGER-CAUTION Read and understand all safety information before using this product. Failure to follow these instructions may result in electrical shock, explosion, fire which may result in serious injuries, death or property damage.

- When used correctly, lithium- ion rechargeable batteries provide a safe and dependable source of portable power. However, if they are misused or abused, this may result in leakage, burns, fire or explosion, causing personal injury or damage to other devices.
- Misusing or incorrectly connecting your HALO BOLT ULTIMATE may cause electric shock to users and damage equipment.
- Do not operate in explosive atmospheres such as in the presence of flammable liquids, gases or dust.
- Remove jump start clamps from vehicle battery after jump starting vehicle.
- Keep your HALO BOLT ULTIMATE dry and away from moisture and corrosive materials. The HALO BOLT ULTIMATE should not be used near water or wet areas such as bathtubs, showers, bathrooms, sinks, swimming pools or basements.
- Do not expose your HALO BOLT ULTIMATE to moisture, water, rain, or snow.
- Keep your HALO BOLT ULTIMATE away from heat sources, including open flames, radiators, stoves, ovens, and any other devices that produce heat.
- The lithium-ion rechargeable battery used in this charging device may present a risk of fire or chemical burn if mistreated. Do not expose to fire or excessive temperature. Do not expose to heat above 212°F (100°C) or incinerate.
- In the unlikely event of leakage or explosion use sand or a chemical fire extinguisher. If contact accidentally occurs, flush with water. If liquid contacts eyes, additionally seek medical help. Liquid ejected from the battery may cause irritation or burns.
- Your HALO BOLT ULTIMATE may become warm under extended highpower operation. Do not cover, wrap, or otherwise restrict the HALO BOLT ULTIMATE during operation.
- Do not disassemble your HALO BOLT ULTIMATE. There are no user-serviceable parts inside. Incorrect reassembly may result

in shock or fire hazard.

- Do not drop or subject to strong impacts. Do not operate your HALO BOLT ULTIMATE if it has received a sharp blow, or has otherwise been damaged in any way.
- Do not puncture, crush or subject to mechanical shock.
- Only charge your HALO BOLT ULTIMATE by the specified method with the specified charging adapter provided with the unit. Use of an attachment not recommended or sold by power pack manufacturer may result in a risk of fire, electric shock, or injury to persons.
- Do not use any non-HALO-branded accessories with the HALO BOLT ULTIMATE. Doing so may cause electric shock to users and damage equipment.
- Do not operate the power pack with a damaged cord or plug, or a damaged output cable.
- The HALO BOLT ULTIMATE , along with its accessories, are not toys and should be kept away from children.
- To reduce risk of damage to the electric plug and cord, pull the plug rather than the cord when disconnecting the power pack.
- Make sure the jumper cables are fully plugged into the jump start output before trying to jumpstart your vehicle.
- Do not touch red (positive) and black (negative) jumper clamps together at any point.
- Do not insert any foreign object into the ports or openings of your HALO BOLT ULTIMATE .
- Do not clean your HALO BOLT ULTIMATE with harsh chemicals, soaps or detergents. Just wipe the case with a soft cloth.
- When charging the internal battery, work in a well ventilated area and do not restrict ventilation in any way.
- Make sure the HALO BOLT ULTIMATE's charging ports do not become contaminated with lint or other debris. Use a canned-air type of product periodically to ensure that the port openings are clear.
- Batteries should be recycled or disposed of as per state and local guidelines.
- Storage: -4°F – 158°F (-20°C – 70°C), Discharge: 14°F – 122°F (-10°C – 50°C), Charge: 32°F – 113°F (0°C – 45°C)



PRÉCAUTIONS DE SÉCURITÉ / INSTRUCTIONS DE DEPLACEMENT ET DE STOCKAGE

ATTENTION - L'appareil a été conçu et fabriqué pour une utilisation sécuritaire et ne présente aucun danger s'il est utilisé tel qu'indiqué. Une utilisation inadéquate ou inattentive présente un risque d'électrocution ou d'incendie. Veuillez lire toutes les consignes d'utilisation et de sécurité avant d'utiliser l'appareil. Veuillez conserver les consignes d'utilisation et de sécurité pour référence ultérieure.

- Lisez toutes les instructions avant d'utiliser le produit.
- Lorsqu'elles sont utilisées correctement, les batteries rechargeables au lithium-ion offrent une source fiable et sécuritaire d'alimentation portable. Cependant, une utilisation inadéquate ou inattentive peut entraîner des fuites, des brûlures, un incendie ou une explosion, provoquant des blessures corporelles ou dommages à d'autres appareils.
- Une mauvaise utilisation ou connexion de votre HALO BOLT ULTIMATE présente un risque d'électrocution aux utilisateurs et peut endommager l'équipement.
- Ne pas utiliser en présence de poussières, liquides ou gaz inflammables et combustibles.
- Retirez les pinces des câbles démarrage de la batterie du véhicule après le démarrage du véhicule.
- Conservez au sec et à l'écart de l'humidité et des matériaux corrosifs. Ce produit ne doit pas être utilisé à proximité d'eau ou de zones humides telles que baignoires, douches, salles de bains, lavabos, piscines ou sous-sols.
- Ne pas exposer à l'humidité, à l'eau, à la pluie ou à la neige.
- Tenir à l'écart des sources de chaleur, y compris les flammes, les radiateurs, les cuisinières, fours et tout autre appareil dégageant de la chaleur.
- En cas d'utilisation inadéquate, la batterie rechargeable au lithium-ion présente dans cet appareil peut présenter un risque d'incendie ou de brûlure chimique. Ne pas exposer au feu ou à une température excessive. Ne pas exposer à une chaleur supérieure à 212°F (100°C) ou incinérer.
- Dans le cas improbable d'une fuite ou d'une explosion, utilisez du sable ou un extincteur de feu chimique. En cas de contact

accidentel, rincez à l'eau. En cas de contact avec les yeux, veuillez consulter un médecin. Une fuite peut provoquer des irritations ou des brûlures.

- Votre HALO BOLT ULTIMATE peut devenir chaud durant une utilisation prolongée. Ne pas couvrir, envelopper ou autrement restreindre pendant le fonctionnement.
- Ne démontez pas le HALO BOLT ULTIMATE, il n'y a pas de pièces réparables à l'intérieur. Un remontage inadéquat peut présenter un risque d'électrocution ou d'incendie.
- Ne pas laisser tomber ni subir de chocs violents. Ne pas faire fonctionner si l'appareil a reçu un coup violent ou a été endommagé de manière quelconque.
- Ne pas percer, écraser ou soumettre à des chocs mécaniques.
- Ne pas utiliser avec des rallonges électriques.
- Ne dépassez pas la puissance nominale de l'appareil.
- Ne placez aucun objet étranger entre votre appareil mobile et la surface du chargeur sans-fil de votre HALO BOLT ULTIMATE, y compris les tampons métalliques d'un support pour voiture, cartes magnétiques, clés, pièces de monnaie, cartes NFC ou autres objets métalliques, car ils pourraient démagnétiser le chargeur sans-fil, affecter la vitesse de charge, ou provoquer une surchauffe.
- Les chargeurs sans-fil rendent la charge plus pratique que les chargeurs filaires, mais restraints par la technologie sans-fil actuelle, leur vitesse de charge est plus lente que celui des chargeurs filaires.
- N'utilisez pas un bloc d'alimentation avec un câble ou une prise endommagés, ou un câble de sortie endommagé.
- Ce produit et ses accessoires ne sont pas des jouets et doivent être tenus à l'écart des enfants.
- Pour réduire les risques d'endommager la fiche ou le câble électriques, débranchez la fiche plutôt que le câble lors de la déconnexion du bloc d'alimentation.
- Assurez-vous que les câbles de démarrage sont complètement branchés dans port de sortie avant d'essayer de démarrer votre véhicule.
- Ne touchez pas les pinces des câbles de démarrage rouges [positives] et noires [négatives] ensemble à tout moment.

- N'insérez aucun objet étranger dans les ports ou les ouvertures.
- Ne nettoyez pas avec des produits chimiques agressifs, des savons ou des détergents. Essuyez simplement l'appareil avec un chiffon doux.
- Lorsque vous rechargez votre appareil, faites-le dans un endroit bien aéré et ne pas restreindre la ventilation de quelque façon que ce soit.
- Assurez-vous que les ports de charge ne sont pas contaminés par de la poussière ou autres débris. Utilisez périodiquement un dépoussiéreur à air comprimé pour vous assurer que les ouvertures des ports sont dégagées.
- Lorsque vous utilisez le compresseur d'air, vérifiez et suivez toujours la pression recommandée par le fabricant. Soyez prudent car le tuyau d'air et les connecteurs peuvent devenir chauds après une utilisation prolongée.
- Ne pas jeter cet appareil avec vos déchets ménagers. Veuillez vous informer auprès des autorités locales pour de l'information sur les points de collecte. Ces restrictions s'appliquent pour que les substances dangereuses contenues dans vos appareils ne soient pas dispersées dans la nature. Entreposage : -4°F à 158°F (-20°C à 70°C) Décharge : 14°F – 122°F (-10°C – 50°C), Charge : 32°F – 113°F (0°C – 45°C)


TABLE OF CONTENTS

Safety Precautions	3-7
Included Items	9-10
Operating Instructions	11-19
Troubleshooting Guides	15 & 18
Specifications	20
Warranty and Contact Information	22

INCLUDED ITEMS





- HALO BOLT ULTIMATE
- Jumper Cables
- AC Wall Charging Adapter
- Car Charging Adapter
- Interchangeable Nozzle Kit
- 24 Inch Air Hose Extension
- Carry Pouch

 HALO BOLT ULTIMATE

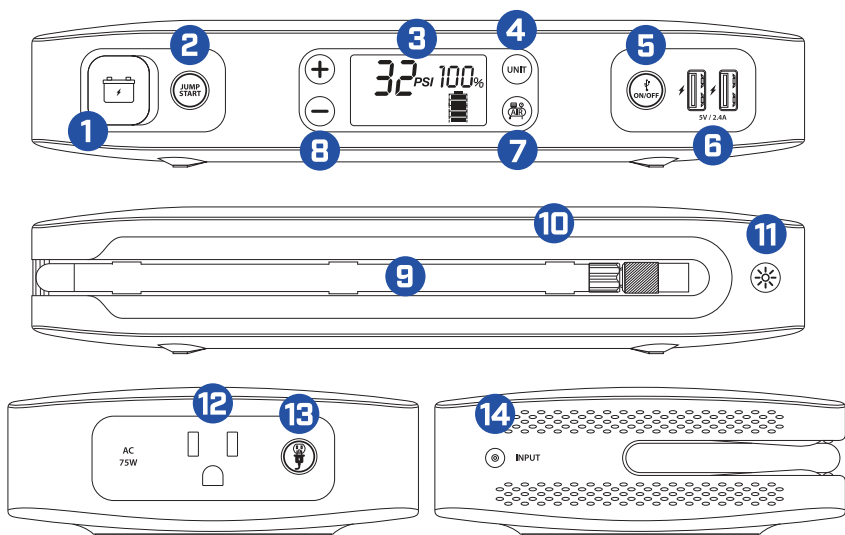

- 1 | Jump Start Output
- 2 | Jump Start Button
- 3 | Digital Screen
- 4 | Pressure Unit Button
- 5 | USB ON/OFF Button
- 6 | USB Outputs
- 7 | Air Compressor ON/OFF Button
- 8 | Pressure Settings (+) and (-)
- 9 | Air Hose
- 10 | Floodlight/Emergency Light
- 11 | Floodlight ON/OFF Button
- 12 | AC Output
- 13 | AC Power Button
- 14 | Charging Input
- 15 | 24 Inch Air Hose Extension
- 16 | Jumper Cable Clamps
- 17 | Wall Charging Adapter
- 18 | Tapered Air Nozzles
- 19 | Inflation Needle
- 20 | Presta Valve Adapter
- 21 | Car Charging Adapter

    
HALO BOLT ULTIMATE

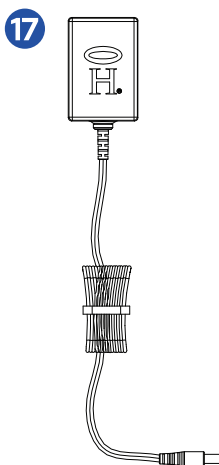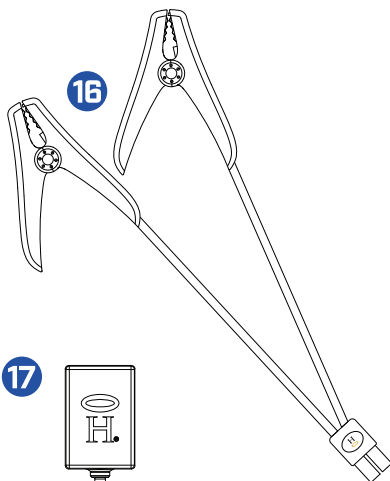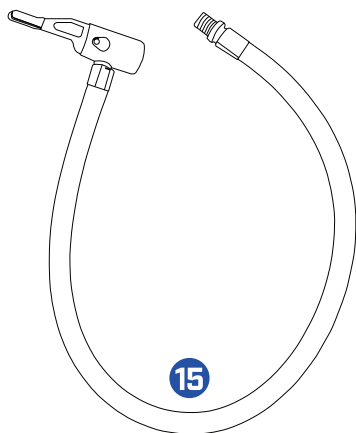

19



 
20

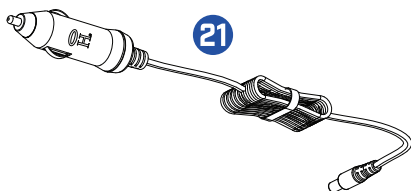

OPERATING INSTRUCTIONS

CHARGING YOUR HALO BOLT ULTIMATE

 To charge your HALO BOLT ULTIMATE, use the provided Wall Charging Adapter, and plug the AC adapter plug into the charge input. Next, connect the AC adapter into a wall outlet. The HALO BOLT ULTIMATE will automatically begin charging. When the HALO BOLT ULTIMATE is fully charged, all five battery indicator lights will be solid green and the digital screen will indicate 100% charge. [This could take up to 9 hours].

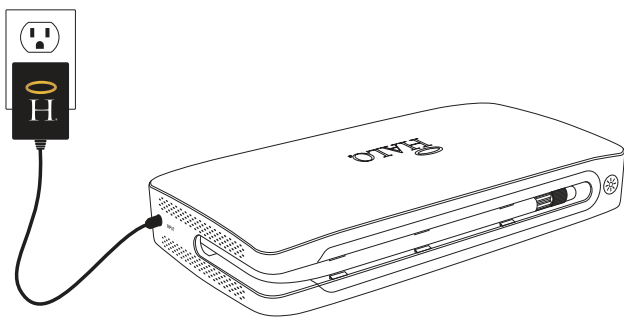


While charging, the digital screen will illustrate the charge percentage of the HALO BOLT ULTIMATE. When fully charged, disconnect the cable.




NOTE:

 The HALO BOLT ULTIMATE is designed to charge between 32°F-113°F (0-45° C). A "TEMP" indicator will be illustrated on the digital display if the HALO BOLT ULTIMATE is attempted to be charged outside of this temperature range.

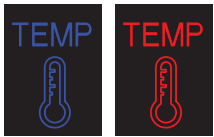

JUMP STARTING YOUR VEHICLE WITH THE HALO BOLT ULTIMATE

 
1. Plug the jumper cables into the jump start output on the HALO BOLT ULTIMATE.

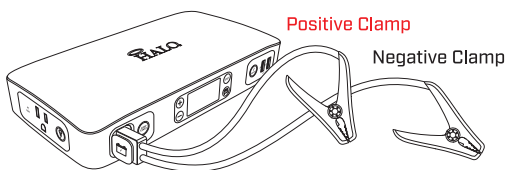

NOTE:

Make sure the jumper cables are fully plugged into the jump start output before trying to jump your vehicle.

 
2. Attach the jumper cable clamps to the vehicle battery.
 - Red clamp on positive terminal (+)
 - Black clamp on negative terminal (-)

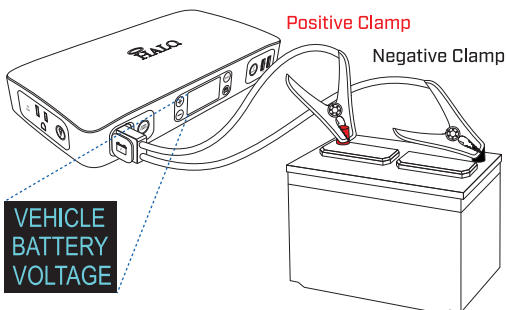

NOTE:

- Once the jumper cable clamps are attached to the vehicle battery, the digital screen will display the vehicle battery voltage.
- Do not touch red (positive) and black (negative) clamps together at any point. If the jump start button flashes red, the jumper cables have been connected incorrectly. If this flashing red condition occurs, disconnect the jumper cables from vehicle battery and restart the process from Step 1.

 3. Press the “Jump Start” button and wait for solid green light.

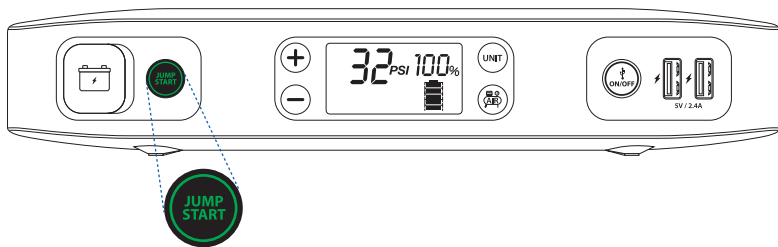

NOTE:

A flashing green light indicates safety checks are in progress.

4. Start your vehicle.

NOTE:

If your vehicle fails to start after the first attempt, wait 30 seconds and repeat step 3 and step 4.

If your vehicle does not start after three attempts, we recommend you consult a certified mechanic.

5. Disconnect the jumper cable clamps from the car battery.

NOTE:

The jump start function cannot be used in conjunction with the USB and AC output or the air compressor. Please ensure that you have not activated the USB/AC or Air Compressor output modes when attempting to jump start your vehicle.

NOTE:

The HALO BOLT ULTIMATE is designed to allow a jump start when used within a safe temperature range. A "TEMP" indicator will be illustrated on the digital display if used outside of the temperature operating range.

JUMP START TROUBLESHOOTING TIPS

CONDITION	POTENTIAL CAUSE	SOLUTION
HALO BOLT ULTIMATE Jump Start button has been pressed but nothing happens	The USB ON/OFF Button or the Air Compressor ON/OFF Button has been pressed.	The jump start output can not be used in conjunction with the USB output or air compressor modes. Ensure that both USB and AIR Compressor modes are off.
 HALO BOLT ULTIMATE displays a red "BATT TOO LOW" message	The HALO BOLT ULTIMATE is not sufficiently charged to jump start the vehicle.	Recharge the HALO BOLT ULTIMATE and verify at least 50% charged. Then try the jump start process again.
 HALO BOLT ULTIMATE Jump Start button flashes red and a SAFETY CHECK FAIL message is displayed	The jumper cables have not been properly connected to the vehicle battery.	Check the jumper cables and ensure that the red clamp is connected to the positive terminal (+) and the black clamp is connected to the negative terminal (-).
 HALO BOLT ULTIMATE Jump Start button flashes green continuously	The HALO BOLT ULTIMATE is waiting to be connected to a battery or a SAFETY CHECK FAIL has been triggered.	Check the jumper cables and ensure they are properly connected to the battery. Check and ensure the vehicle battery voltage is greater than 2.0V. If the SAFETY CHECK FAIL indicator is triggered during the jump start process, it is recommended that you consult with a certified mechanic.
 HALO BOLT ULTIMATE displays a blue or red "TEMP" indicator	The HALO BOLT ULTIMATE has detected a low or high temperature condition.	Disconnect the HALO BOLT ULTIMATE and allow unit to acclimate to temperature operating range (14°F-122°F).
You cannot successfully jump start your vehicle. The HALO BOLT ULTIMATE displays a vehicle battery voltage greater than 12.0V	The HALO BOLT ULTIMATE detects that it is connected to a vehicle battery with a normal starting voltage. This could indicate that another vehicle component is faulty.	It is recommended that you consult with a certified mechanic.
HALO BOLT ULTIMATE Jump Start and On/Off button flashes red and blue	This could occur when attempting to jump start a vehicle while other electrical components (i.e. headlights, heater, radio, etc.) are on.	Turn off your headlights and any other components that may drain your car battery and try the jump start process again.
	The vehicle battery may be faulty.	It is recommended that you consult with a certified mechanic.

 
NOTE:

If none of these troubleshooting tips work, please consult a certified mechanic for assistance.

HALO BOLT ULTIMATE COMPRESSOR

The HALO BOLT ULTIMATE comes equipped with a 24 Inch Air Hose Extension and Interchangeable Air Nozzles. Simply twist on the corresponding nozzle to inflate balls, pool floaties, bike tires, and more!

1. Connect the air hose to the tire or use the appropriate nozzle to connect to your inflatable device
2. Press the [+] or [-] button to set the desired pressure. The pressure measuring units can be changed by pressing the UNIT button.
3. Once the desired pressure has been set, begin inflating by pressing the Air Compressor ON/OFF button. The air compressor will shut off automatically once the pressure has been reached.

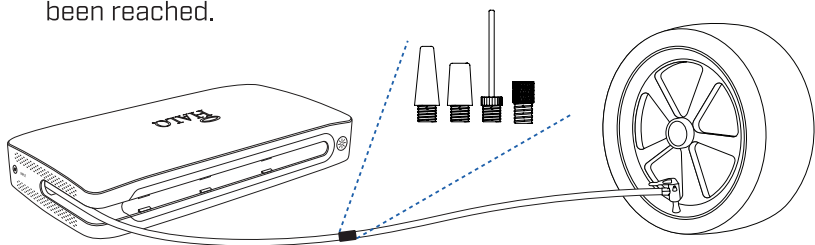

NOTE:

The air compressor can be started or stopped at any point by pressing the air compressor ON/OFF button. The [+] and [-] may be long pressed to set the desired pressure quickly.

 


Note: Always check and follow the manufacturer's recommended pressure. Use caution as the air hose and connectors may get hot after extended use. The HALO BOLT ULTIMATE compressor is designed to automatically stop after an extended run-time or if an over-temperature protection set point is reached.

CHARGING A LAPTOP (VIA THE AC OUTPUT PORT)

1. Connect the AC power plug from your laptop (or other electronic device which is rated at 75 watts or less) into the AC output port of the HALO BOLT ULTIMATE charger.

NOTE: Any electronic device can be powered by the AC output port as long as it is rated at 75 watts or less. BE SURE TO CHECK THAT YOUR LAPTOP OR OTHER ELECTRONIC DEVICE IS RATED AT 75 WATTS OR LESS.

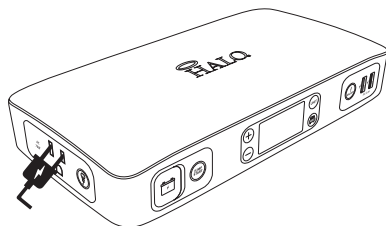

2. Press the AC Power ON/OFF Button and wait for a solid green light

NOTE: Make sure the AC power plug is fully plugged into the AC output port before pressing the AC Power ON/OFF Button.

NOTE: A flashing green light indicates safety checks are in progress.

If you see a flashing red light, the device you connected is rated for greater than 75 watts and cannot be powered using the HALO BOLT ULTIMATE charger.


The HALO BOLT ULTIMATE charger will automatically power off after 30 minutes of inactivity. While jump starting your vehicle, you cannot charge your electronic devices using the USB or AC output ports and you cannot charge the HALO BOLT ULTIMATE battery via the AC wall adapter.

LAPTOP CHARGING TROUBLESHOOTING TIPS

CONDITION	POTENTIAL CAUSE	SOLUTION
HALO BOLT ULTIMATE AC button flashes red	Electronic device is rated at greater than 75 watts	Only electronic devices rated at 75 watts or less can be used with the HALO BOLT ULTIMATE charger
	The HALO BOLT ULTIMATE battery is not sufficiently charged to power the connected electronic device	Recharge the HALO BOLT BOLT ULTIMATE battery
HALO BOLT ULTIMATE shuts off unexpectedly	The HALO BOLT ULTIMATE battery is not sufficiently charged to power the connected electronic device	Recharge the HALO BOLT BOLT ULTIMATE battery
TEMP  TEMP  HALO BOLT ULTIMATE displays a blue or red "TEMP" indicator	The HALO BOLT ULTIMATE has detected a low or high temperature condition.	Disconnect the HALO BOLT ULTIMATE and allow unit to acclimate to temperature operating range (14°F-122°F) (-10°C-50°C).


CHARGING AN ELECTRONIC DEVICE USING 5V/2.4A USB OUTPUT PORT

 1. Use the charging cable provided with your electronic device and connect the Standard USB end into either one of the HALO BOLT ULTIMATE USB 5V/2.4A Output ports.
2. Turn on the USB charging by pressing the USB Power ON/OFF Button on the HALO BOLT ULTIMATE.

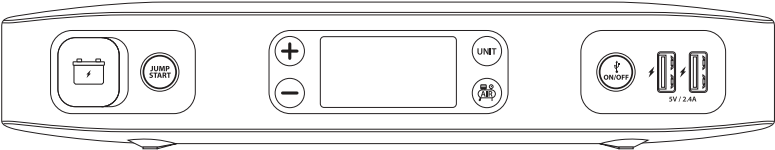

NOTE:

 The HALO BOLT ULTIMATE USB charging feature will automatically power off after 30 minutes of inactivity.

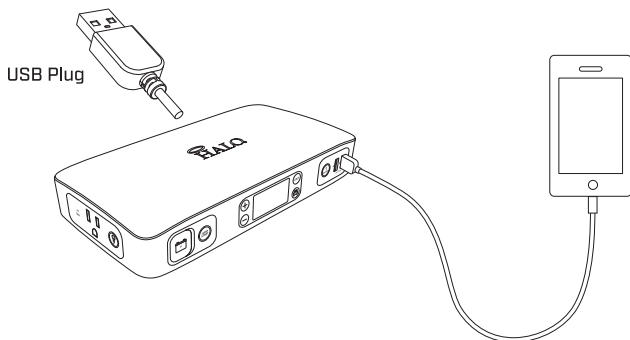

HALO SMART CHARGE TECHNOLOGY

Your HALO BOLT ULTIMATE contains the HALO SMART CHARGE TECHNOLOGY to achieve higher compatibility for charging standard 5V USB electronic devices. The HALO SMART CHARGE TECHNOLOGY will allow the HALO BOLT ULTIMATE to communicate with your electronic device and provide the fastest and safest charge for that device.

COMPATIBILITY

Standard 5V USB electronic devices including: Mobile Phones, Tablets, PSP, NDS, MP3, MP4, MP5, Bluetooth, GPS, Cameras, and more.



Mobile Phones



Tablets



Digital Cameras



 
Mobile Gaming



USING YOUR HALO BOLT ULTIMATE FLOODLIGHT

The floodlight can be turned on and off by simply pressing and releasing the floodlight ON/OFF button. The first press will turn on the floodlight. Second press will turn on the red emergency light.

Third press will turn on SOS flashing red light. The floodlight will automatically turn off after 2 hours of inactivity.

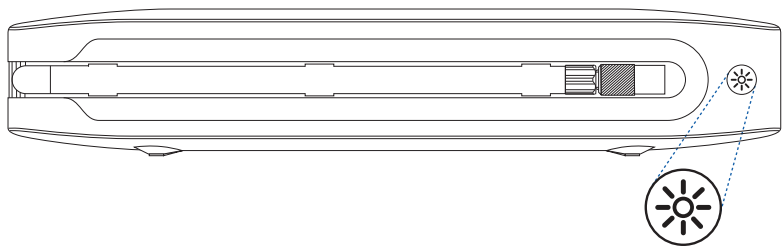

Floodlight ON/OFF Button

NOTE:

Do not look directly into the LED floodlight.

SPECIFICATIONS
HALO BOLT ULTIMATE

Battery Cells:	3x Li-Polymer 5000mAh
Battery Pack Energy:	55500 mWh
Input:	14V/0.85A
Jump Start:	12V/600Amps
Air Compressor:	120PSI max
USB Output:	2x USB 5V/2.4A
AC Output [nominal]:	115VAC/60Hz
Rated Power:	75W
Dimensions:	10 x 4.06 x 1.93 inches
Weight:	2.8 lbs
Operating Temperature:	32°F - 113°F [0°C - 45°C]

COMPLIANCE WITH FCC REGULATION

This device complies with part 15 of the FCC Rules and RSS-Gen of IC Rules. Operation is subject to the following two conditions: [1] This device may not cause harmful interference, and [2] this device must accept any interference received, including interference that may cause undesired operation.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation.

If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

CAUTION: To comply with the limits of the Class B digital device, pursuant to Part 15 of the FCC Rules, this device must be used with certified peripherals and shielded cables. All peripherals must be shielded and grounded. Operation with non-certified peripherals or non-shielded cables may result in interference to radio or reception.

LIMITED WARRANTY

At HALO, we are dedicated to making the best quality products. To back this up, this product is warranted. HALO warrants its products to be free from defects in material and workmanship under normal use. During the first 90 days from date of purchase, HALO will repair or replace the defective product. This warranty does not affect any statutory rights that you may be entitled to. Keep a copy of your purchase receipt as proof of purchase.

For all questions about the warranty or exchange requests, please call 888-907-6274.

All copyrighted and copyrightable materials, including, without limitation, the logo, design, text, graphics, pictures, copy writing and the selection and arrangement ["Materials"] thereof are ALL RIGHTS RESERVED
Copyright © 2022 Alliance Sports Group, L.P.

Alliance Consumer Group
700 Henrietta Creek Road
Roanoke, Texas 76262

Made in China





www.HALOPOWER.com