



10C EVO

MOTORCYCLE BLUETOOTH® CAMERA
AND COMMUNICATION SYSTEM

HD SPEAKERS

QUICK START GUIDE

1.2.0

ENGLISH

RIDE CONNECTED

Blast your favorite tunes, talk over the intercom with your buddies, hear directions from your GPS and more, all through your headset. With built-in Bluetooth® capabilities, UHD camera, HD speakers and a microphone using Advanced Noise Control™, technology has never felt so minimal or freeing.

- Bluetooth® Integrated
- 1.6 Km (1.0 Mile) Intercom
- UHD Camera Integrated
- Four-Way Intercom
- Smart Audio Mix™
- Advanced Noise Control™
- WiFi Enabled
- Audio Multitasking™
- Audio Source Priority

GETTING STARTED

- This product comes with a Quick Start Guide, which is a basic version of the User's Guide. **A FULL VERSION OF THE USER'S GUIDE CAN BE DOWNLOADED AT SENA.COM.**
- Update this product for free with the latest firmware to fully enjoy the new advanced features built into this product. Visit sena.com to see how to update your product.
- Users can follow Sena on Facebook, YouTube, Twitter and Instagram to receive the most up to date information on products, helpful tips and all other announcements regarding Sena products.

SENA

SENA Technologies, Inc.

Customer Support: sena.com

10C EVO

GETTING STARTED

 
GETTING STARTED

How to Use This Guide

The legend and callouts are here to help you read the illustrations. New technology can be confusing, but we've created a simple way to perform actions using illustrations.



Buttons

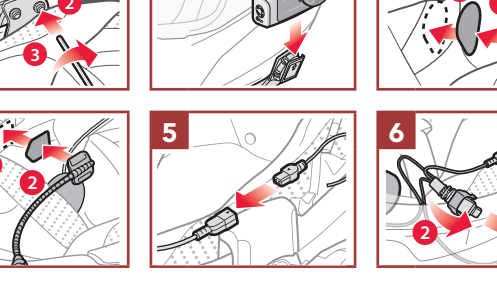

GETTING STARTED

Icon Legend



- TAP 1x**: Tap button/Jog Dial the specified number of times
- HOLD 10s**: Press and Hold button/Jog Dial for the specified amount of time
- ROTATE L**: Rotate Jog Dial clockwise (right) or counterclockwise (left)
- ROTATE R**: Rotate Jog Dial clockwise (right) or counterclockwise (left)
- ROTATE L**: Rotate while Pressing Jog Dial clockwise (right) or counterclockwise (left)
- ROTATE R**: Rotate while Pressing Jog Dial clockwise (right) or counterclockwise (left)
- "Hello"**: Audible prompt

10C EVO

QUICK START GUIDE

QUICK START GUIDE

Product Details

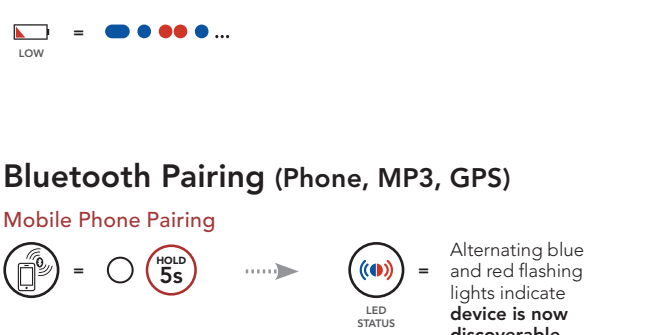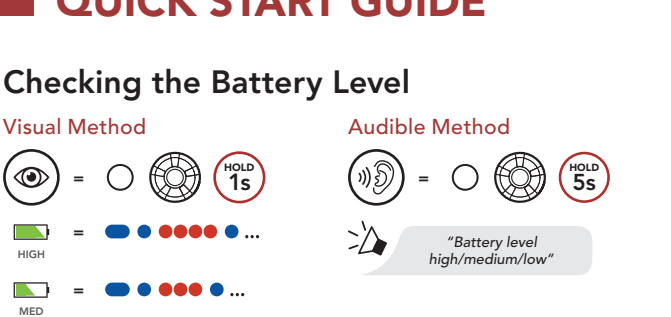


10C EVO

QUICK START GUIDE

QUICK START GUIDE

 Installation

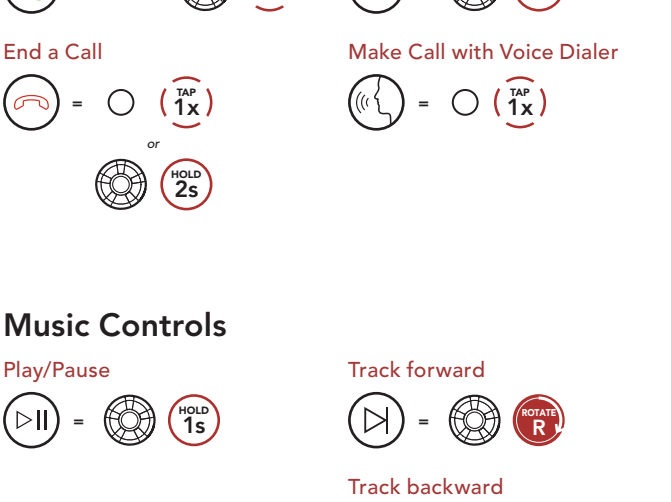

Sena Utility App

- Download
 - Android: Google Play Store > **Sena Utility**
 - iOS: App Store > **Sena Utility**

10C EVO

QUICK START GUIDE

QUICK START GUIDE

Sena Camera App

The **Sena Camera App** allows you to see a live preview from the camera, manage recorded videos as well as configure the video settings using the built-in WiFi feature on camera system. When the camera and the **Sena Camera App** are connected, the camera is synchronized with the smartphone's date and time. Download the **Sena Camera App** for Android and Apple operating systems from sena.com.

Sena Device Manager

The **Sena Device Manager** allows you to upgrade the firmware and configure its settings directly from your PC or Apple computer. Download the **Sena Device Manager** from sena.com.

Basic Operations

- Powering On**: [Power On Icon] = [Off] or [Jog Dial] (HOLD 1s)
- Powering Off**: [Power Off Icon] = [Off] or [Jog Dial] (HOLD 1s) or [Tap 1x]
- Volume Up**: [Volume Up Icon] = [Jog Dial] (ROTATE R)
- Volume Down**: [Volume Down Icon] = [Jog Dial] (ROTATE L)

10C EVO

QUICK START GUIDE

QUICK START GUIDE

Checking the Battery Level

- Visual Method**: [Battery Level Icon] = [Off] or [Jog Dial] (HOLD 1s). Legend: HIGH (4 blue dots), MED (3 blue dots), LOW (2 blue dots).
- Audible Method**: [Speaker Icon] = [Off] or [Jog Dial] (HOLD 5s). Audible prompt: "Battery level high/medium/low"

Bluetooth Pairing (Phone, MP3, GPS)

- Mobile Phone Pairing**: [Phone Icon] = [Off] or [Jog Dial] (HOLD 5s) → [LED STATUS] (Alternating blue and red flashing lights indicate device is now discoverable). PIN NUMBER: 0000

10C EVO

QUICK START GUIDE

QUICK START GUIDE

Mobile Phone

- Answer a Call**: [Answer Call Icon] = [Off] or [Jog Dial] (HOLD 1s) or [Tap 1x]
- Reject a call**: [Reject Call Icon] = [Jog Dial] (HOLD 2s)
- End a Call**: [End Call Icon] = [Off] or [Jog Dial] (HOLD 2s) or [Tap 1x]
- Make Call with Voice Dialer**: [Voice Dial Icon] = [Off] or [Jog Dial] (HOLD 1s)

Music Controls

- Play/Pause**: [Play/Pause Icon] = [Jog Dial] (HOLD 1s)
- Track forward**: [Track Forward Icon] = [Jog Dial] (ROTATE R)
- Track backward**: [Track Backward Icon] = [Jog Dial] (ROTATE L)

10C EVO

QUICK START GUIDE

QUICK START GUIDE

Camera Controls

- Camera On**: [Camera On Icon] = [Off] or [Jog Dial] (HOLD 1s)
- Start Recording**: [Record Icon] = [Off] or [Jog Dial] (HOLD 1s)
- Camera Off**: [Camera Off Icon] = [Off] or [Jog Dial] (HOLD 1s)
- Stop Recording**: [Stop Recording Icon] = [Off] or [Jog Dial] (HOLD 1s)
- Taking Photos**: [Photo Icon] = [Off] or [Jog Dial] (HOLD 1s)

- Note:**
- You cannot record videos without a microSD card.
 - Your microSD card needs to be formatted before using the camera.
 - MicroSD cards up to 128 GB and U3 or higher cards are compatible.

- Format SD Card**: [Format SD Card Icon] = [Off] or [Jog Dial] (HOLD 5s)
- [Checkmark Icon] = [Off] or [Jog Dial] (HOLD 1s)

10C EVO

QUICK START GUIDE

QUICK START GUIDE

Change WiFi Channel (Default: 5 GHz)

- [WiFi Icon] = [Off] or [Jog Dial] (HOLD 10s)
- Select 5 GHz**: [Checkmark Icon] = [Jog Dial] (HOLD 1s) or [Tap 1x]
- Select 2.4 GHz**: [Checkmark Icon] = [Off] or [Jog Dial] (HOLD 1s) or [Tap 1x]

Note: IF YOUR SMARTPHONE OR REGION DOES NOT SUPPORT 5 GHz, YOU MUST CHANGE THE WIFI CHANNEL TO 2.4 GHz.

10C EVO

QUICK START GUIDE

QUICK START GUIDE

Intercom

Up to three other people can be paired with the headset for Bluetooth intercom conversations.

- Pairing Headset A with Headset B**: [Headset A Icon] and [Headset B Icon] = [Jog Dial] (HOLD 5s)
- Start/End Intercom with Headset B**: [Headset B Icon] = [Jog Dial] (HOLD 1s) or [Tap 1x]

- [Headset A Icon] or [Headset B Icon] = [Jog Dial] (HOLD 1s) or [Tap 1x]
- [LED STATUS Icon] = Flashing blue LED confirms intercoms are paired.

10C EVO

QUICK START GUIDE

QUICK START GUIDE

Headset Configuration Menu

- Accessing the Headset Configuration Menu**: [Settings Icon] = [Jog Dial] (HOLD 10s)
- Navigating Between Menu Options**: [Right Arrow Icon] = [Jog Dial] (ROTATE R)
- Execute Menu Options**: [Checkmark Icon] = [Off] or [Jog Dial] (HOLD 1s)
- [Left Arrow Icon] = [Jog Dial] (ROTATE L)

Troubleshooting

- Factory Reset**: [Settings Icon] = [Off] or [Jog Dial] (HOLD 10s)
- [Red Dot Icon] = Solid red
- [Checkmark Icon] = [Jog Dial] (HOLD 1s)
- Fault Reset**: [Fault Reset Icon] = [Jog Dial] (HOLD 1s)

Note: Fault Reset will not restore the headset to factory default settings.

10C EVO

QUICK REFERENCE

QUICK REFERENCE

TYPE	OPERATION	BUTTON COMMANDS
Basic Operations	Power on / Power off	[Off] or [Jog Dial] (HOLD 1s)
	Volume up / Volume down	[Jog Dial] (ROTATE R) or [Jog Dial] (ROTATE L)
Mobile Phone	Answer phone call	[Off] or [Jog Dial] (HOLD 1s) or [Tap 1x]
	End phone call	[Off] or [Jog Dial] (HOLD 2s) or [Tap 1x]
	Reject phone call	[Jog Dial] (HOLD 2s)
	Voice dial	[Off] or [Jog Dial] (HOLD 1s)
Camera	Speed dial	[Off] or [Jog Dial] (HOLD 2x)
Music	Play/Pause music	[Jog Dial] (HOLD 1s)
	Track forward	[Jog Dial] (ROTATE R)
	Track backward	[Jog Dial] (ROTATE L)
Intercom	Camera On	[Off] or [Jog Dial] (HOLD 1s)
	Camera Off	[Off] or [Jog Dial] (HOLD 1s)
	Start/Stop recording	[Off] or [Jog Dial] (HOLD 1s)
Intercom	Taking Photos	[Off] or [Jog Dial] (HOLD 1s)
	Intercom pairing	[Jog Dial] (HOLD 5s)
	Start/End intercom	[Jog Dial] (HOLD 1s) or [Tap 1x]