



Original	Substituto
 Power	 Power
 TV/ AV	 AV
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0
 - / - -	 Gui de
 Ej ect	 Ej ect
 Pl ay/ Pause	 Pl ay
 St op	 St op
 Mut e	 Mut e

Original	Substituto
 Ret ur n	 Back
 Up	 Up
 Down	 Down
 Ri ght	 Ri ght
 Lef t	 Lef t
 OK	 Ok
 CH+	 Ch +
 CH-	 Ch -
 Vol +	 Vol +
 Vol -	 Vol -
 TV- Menu	 Menu
 Exi t	 Exi t
 I nf o	 I nf o
 Subt i t l e	 Subt
 Lan/ Pi ct	 Opt i ons
 Zoom/ Sound	 For mat
 Sub/ Ni cam/ A2	 D. Menu



