

XPRINTER XP-58IIH USER MANUAL

 


Quick Links

- [Connection](#)
- [Specifications](#)
- [Driver Installation](#)
- [Printer Drive](#)
- [Set Print Mode](#)

Thermal Receipt Printer

58MM THERMAL RECEIPT PRINTER USER MANUAL

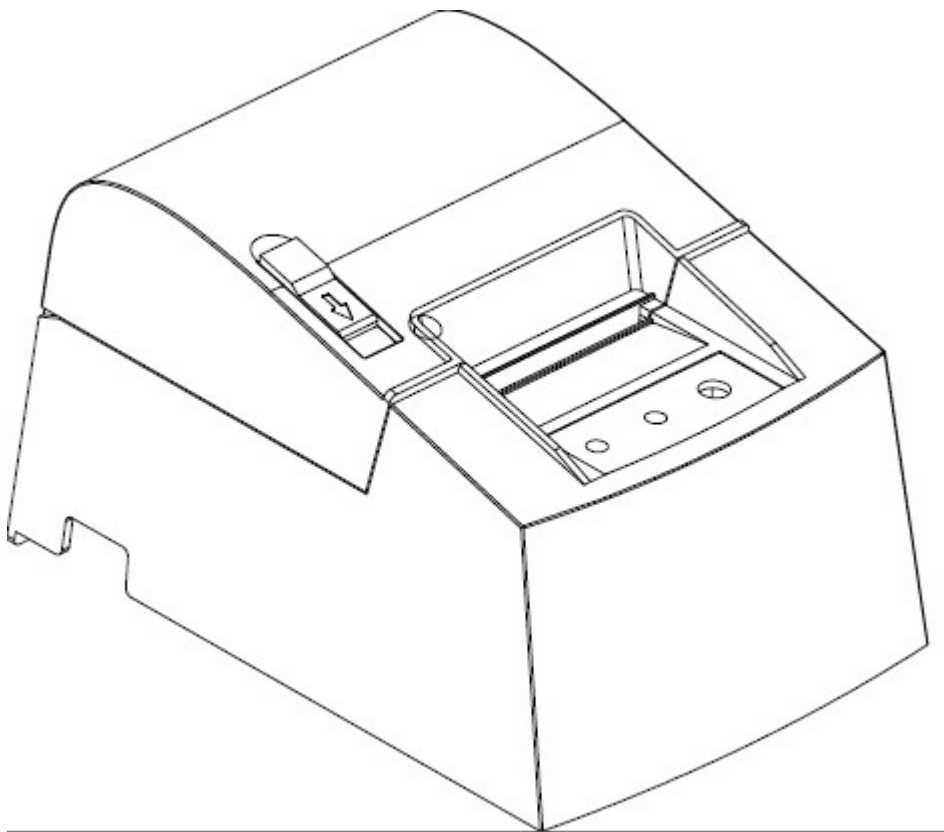

Thermal Receipt Printer

Thermal Receipt Printer

POS58 printer is a new style of direct thermal line printer which is beautiful shape, fast speed of print, low noise, reliability, and high quality of print, without the ribbon cartridge. POS58 printer small size, easy to operate and maintain simple, widely used in supermarkets, hospitals, restaurants, banks, gas stations, toll road & bridge, and so on. The use of this printer will be a year of non-human damage to the supplier's warranty and lifetime technical support service , thank you for your buying .

Safety notes:

Before operate to print, please read the operation manual carefully, and follow the rules strictly.

Security Warning:

Warning: Don't touch the printer head

Warning: Thermal printer head is heated parts, don't touch thermal printer head or around parts during starting or finished so as to avoid hurting yourself.

Warning: Don't touch print head surface and connected plug-in so that avoiding damaging print-head because of static electricity.

Safety Notice:

- * Don't touch the Head of printer with anything.
- * Don't touch the cutter blade.
- * Don't bend the power cord excessively or place any heavy objects onto it.
- * Don't use the printer when it is out of order. This can cause a fire or and electrocution.
- * Only use the power cord excessively or place any heavy objects onto it.
- * When connecting or disconnecting the plug, always hold the plug-not the cord.
- * Keep the desiccant out of children's reach.
- * Use only approved accessories and do not try to disassemble, repair or remodel it for yourself.
- * Install the printer on the stable surface. Choose firm, level surface where avoid vibration.
- * Don't let water or other foreign objects in the printer.
- * Don't connect a telephone line into the peripheral drive connector.
- * We recommend that you unplug the printer from the power outlet if no use it for long periods.

Available fields:

- * Print POS system Receipts
- * Print EFT POS system Receipts
- * Print Gym, Post, hospital, civil aviation system Receipts
- * Print Inquiry, Service system Receipts
- * Print Instrument test Receipts
- * Print Tax, Tab Receipts

Main Features:

- * Command protocol is based on ESC/POS standard
- * Low-noise thermal printing.
- * Various Layouts are possible by using page mode.
- * Repeated operation and copy printing are possible.

Thermal Receipt Printer

Thermal Receipt Printer

- * Character font size optional.
- * Easy paper-roll installation.
- * Easy paper jam clearance.
- * Easy maintenance for tasks such as head cleaning.
- * Built-in interface provides control capability for cash drawer.


Technique Spec.

Print method	Line thermal printing
Printing speed	90mm/ s
Paper width	57.5±0.5mm
Resolution	384dots/line
Characters	ANK Character: Font A: 12*24dots Simplify/Traditional: 24*24 dots
Printing command	Compatible with ESC/POS
Interface	Parallel/Serial/USB/Ethernet
Reliability	50km
Barcode mode	UPC-A/UC-E/JAN13(EAN13)/JAN8(EAN8)/ CODE39/ITF/CODABAR/CODE93/CODE128
Paper thickness	0.06~0.08mm
Printer power input	DC12V---2.6A
Adaptor power input	AC110V/220V 50-60Hz
Adaptor power output	DC12V---2.6A
Cash Drawer	DC12V---1A
Work Temperature	0~45°C, Dampness: 10~80%
Storage temperature	-10~60°C, Dampness: 10~90%
Operation system	Win 9X/Win ME/Win 2000/Win 2003/Win NT/Win XP/Win Vista/win 7

Connection


- Connect the adapter cable to power connector of the printer.
- Connect the interface cable to the connector on the rear panel of the printer.
- Connect the cash drawer's RJ-11 phone jack to the connector on the rear panel.

 Thermal Receipt Printer

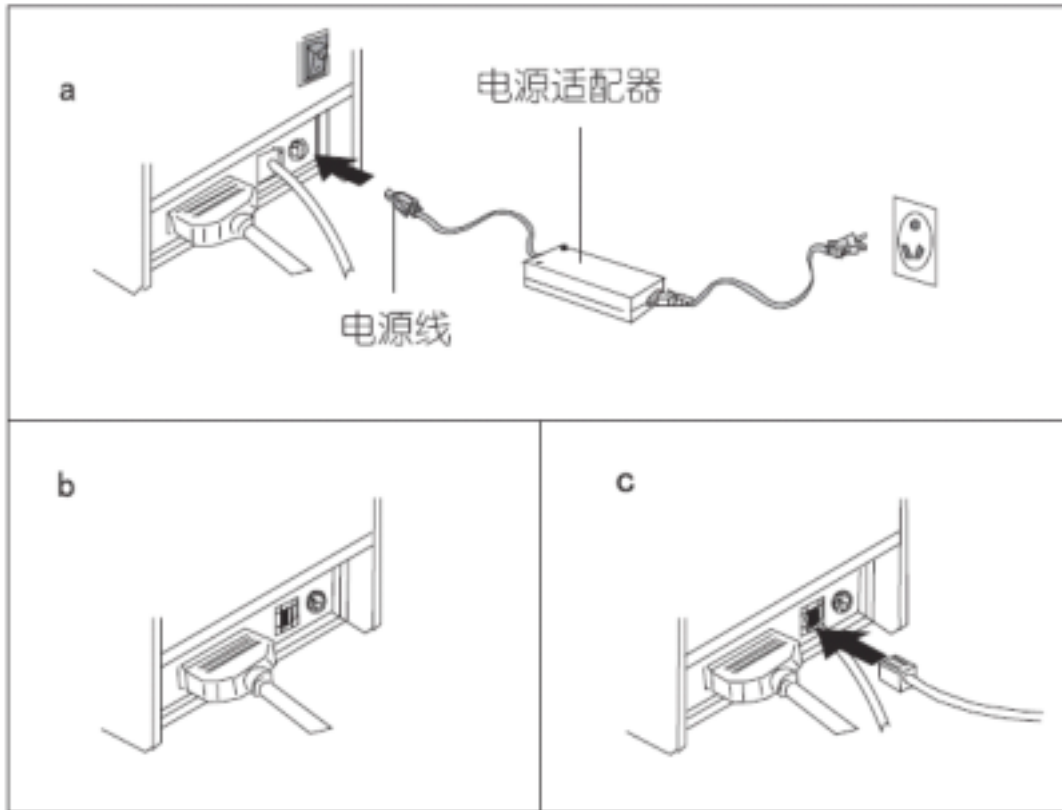

Paper Roll Installation

 - Open the top cover, install the paper roll as the picture showing direction.
- Set the paper roll into the hollow, and pull on the leading edge of the paper towards you as shown.
- Press the center of printer cover firmly to prevent paper miss loading.
- Tear off the paper outside the cover as shown.

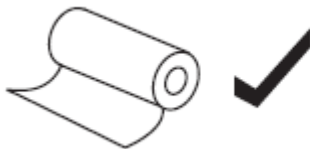

Driver Installation

- Insert the bundled CD disk into the CD-ROM drive, in the CD-Rom menu, click DRV58EN V4.4G file to begin driver installation

Set print mode (DIP switch)

Set print mode by the DIP switch, such as Cutter, Language, Speed, Beep, Density etc mode

Printer drive

The thermal series printer have two way for drive, one is install the drive directly under the

Thermal Receipt Printer

Thermal Receipt Printer

WIN9X/2K/IT/XP; another is use parallel or serial directly

(1) Install the drive under the WINDOWS

Add the printer under the windows, and appointed drive document to windows, you can print with transfer print command in the program. Under this way, It is actually transfer the character to dot matrix to print

(2) Serial / Parallel drive directly

in this way,don't use the drive program , just need to direct character output to the port . and achieve transforming by printer internal hard character ; the drive way is use port directly. The print mode is change from page print to row print, so that print control is more convenience

If you use direct drive port, you need to use the print command collect to control the printing, and 80mm series printer has been integrated within the ESC / POS command set.

Printer cleaning

You need to cleaning the printer if have below question:

- (1). Unclearly letter
- (2). The print page row is unclearly for the line
- (3). Loading paper too noise

The printer head cleaning step:

- (1) Turn off the printer and unplug the power cord. open the upper cover, if have a paper, pls clean out
- (2) Until the printer head cooling you can cleaning
- (3) Wipe the damp cloth with alcohol (without water) cleaning the printer head surface if have dust,spot
- (4) Waiting the alcohol completely volatilize, pls close the upper cover, try again to print

Notice :

- (1) You must make sure the power cord is close when you maintenance the printer

Thermal Receipt Printer

(2) Don't touch the printer head surface with your finger or metal goods, don't use the forceps etc tools avoid to scratch the printer head, print roller sensor surface

(3) Don't use oil, acetone ect organic impregnant

(4) Waiting the alcohol completely volatilize, open the power again and continue print