

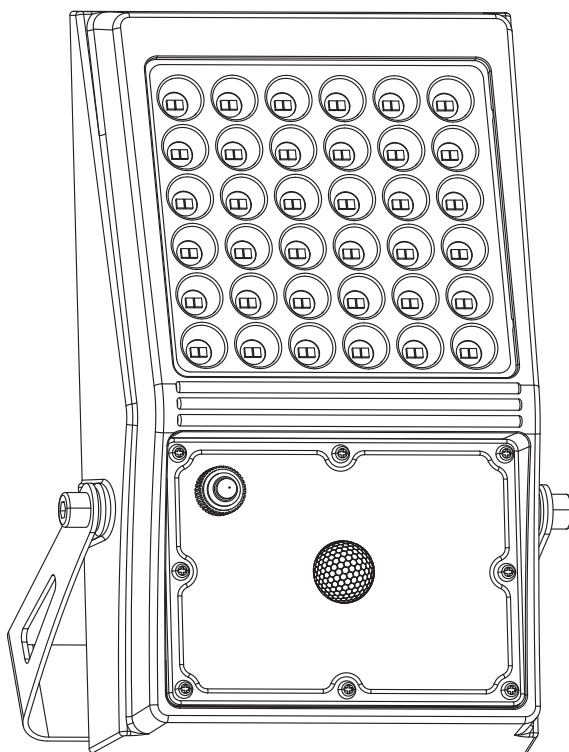
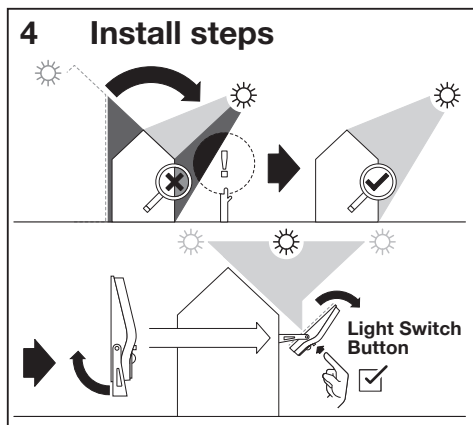
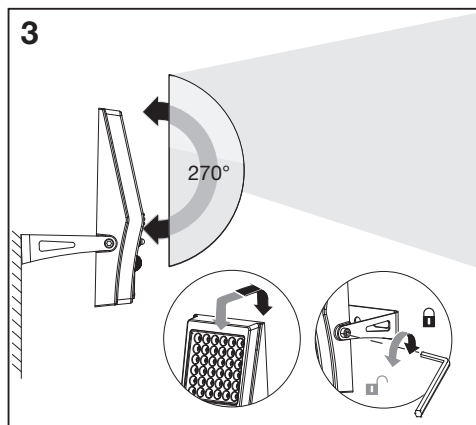
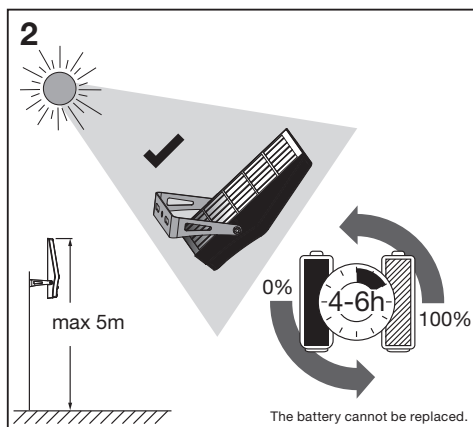
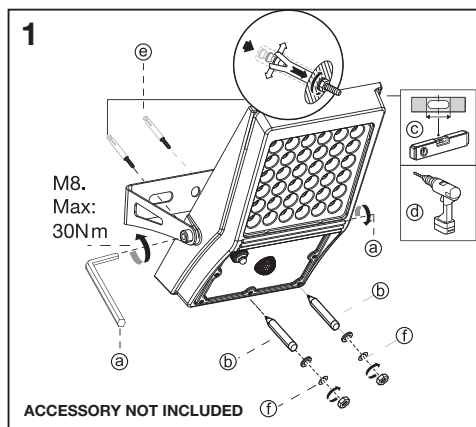



ENDURA FLOOD SOLAR SENSOR

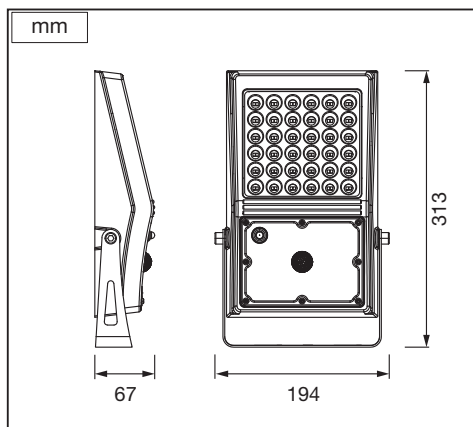


	EAN	W	lm	K	° (°C)	IP	°		Projected area / m2
ENDURA FLOOD SOLAR SEN REM 10W 840	4058075762350	10	1200	4000	-20...+45	65	95°	36000	0.047538

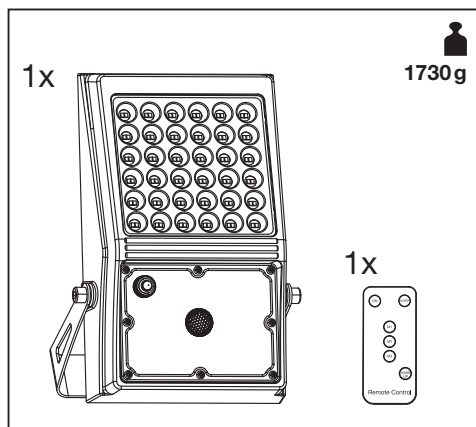







5 Before 1st use

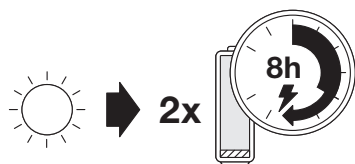


6 Operation

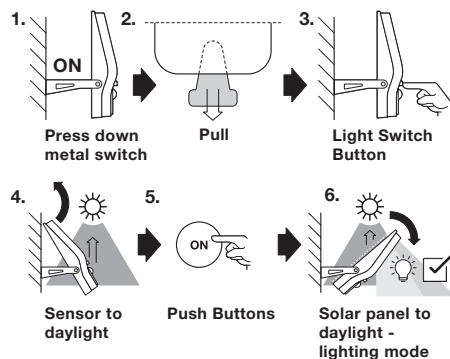

7 Working mode

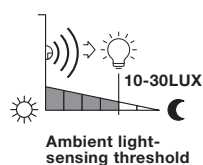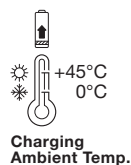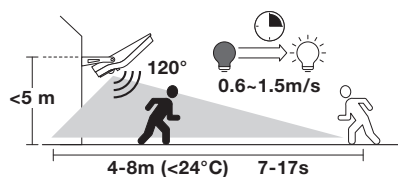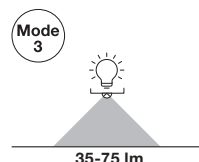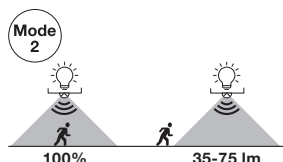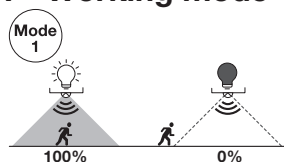

8 Remote control

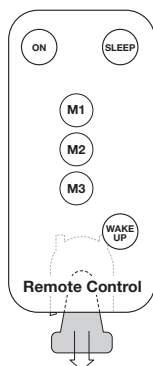

9

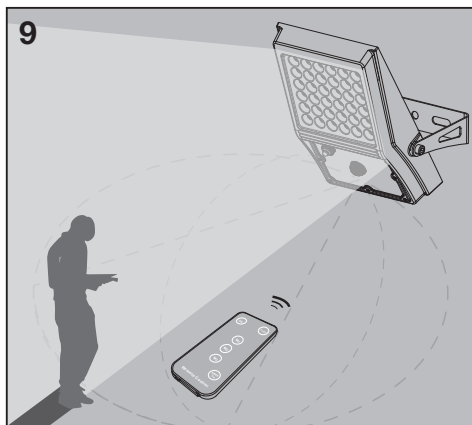


Figure 1-Warning against swallowing coin batteries

 BATTERY WARNING	
KEEP OUT OF REACH OF CHILDREN Swallowing can lead to chemical burns, perforation of soft tissue, and death. Severe burns can occur within 2 hours of ingestion. Seek medical attention immediately.	

NOTE BS EN IEC 60086-4:2019, Figure 9, modified.

- a) "BATTERY WARNING: KEEP OUT OF REACH OF CHILDREN";
- b) "If the battery compartment (if applicable) does not close securely, stop using the product and keep it away from children" ; and
- c) "If you think batteries might have been swallowed or placed inside any part of the body, seek immediate medical attention."

No obvious symptoms

Unfortunately, it is not obvious when a button or coin battery is stuck in a child's oesophagus (food pipe). There are no specific symptoms associated with this. The child might:

- cough, gag or drool a lot;
- appear to have a stomach upset or a virus;
- be sick;
- point to their throat or stomach;
- have a pain in their abdomen, chest or throat; - be tired or lethargic;
- be quieter or more clingy than usual or otherwise "not themselves";
- lose their appetite or have a reduced appetite; and
- not want to eat solid food / be unable to eat solid food.

These sorts of symptoms vary or fluctuate, with the pain increasing and then subsiding.

A specific symptom to button and coin battery ingestion is vomiting fresh (bright red) blood. if the child does this seek immediate medical help.

The lack of clear symptoms is why it is important to be vigilant with "flat" or spare button or coin batteries in the home and the products that contain them.



FR

Cet appareil et ses accessoires se recyclent

À DÉPOSER EN MAGASIN

À DÉPOSER EN DÉCHÈTERIE

OU

Points de collecte sur www.quefairedemesdechets.fr

C10449057
G11137809
20.09.2022



LEDVANCE GmbH
Steinerne Furt 62
86167 Augsburg, Germany
www.ledvance.com