

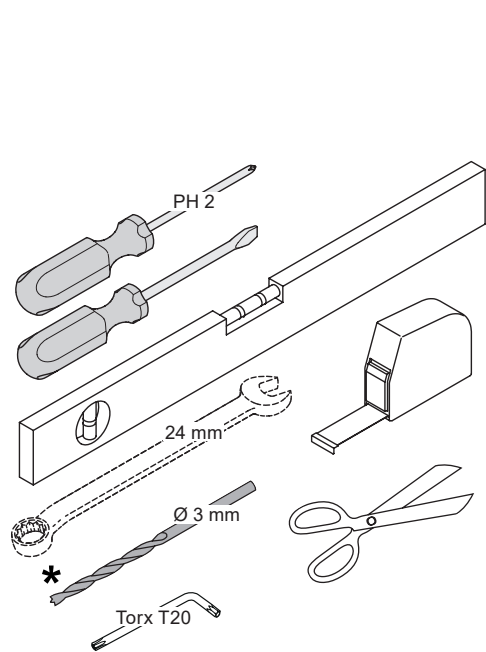
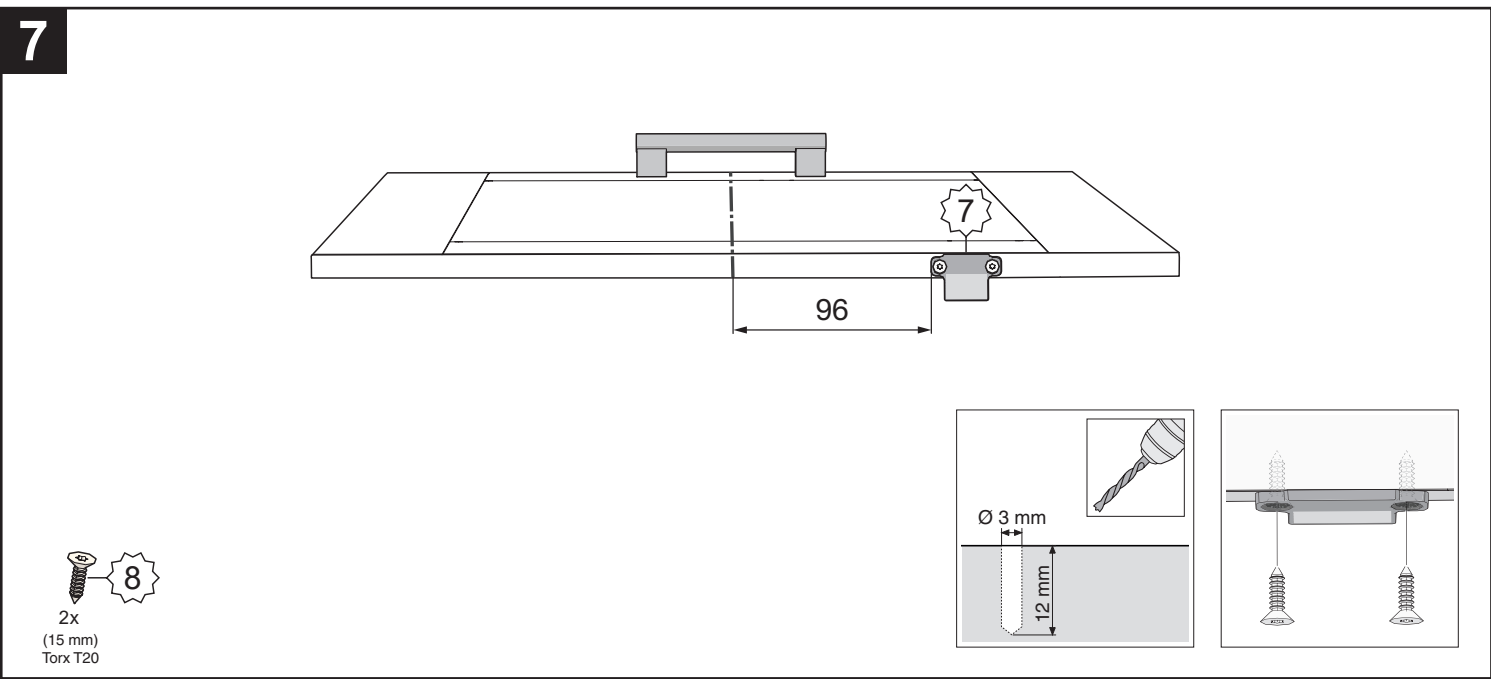
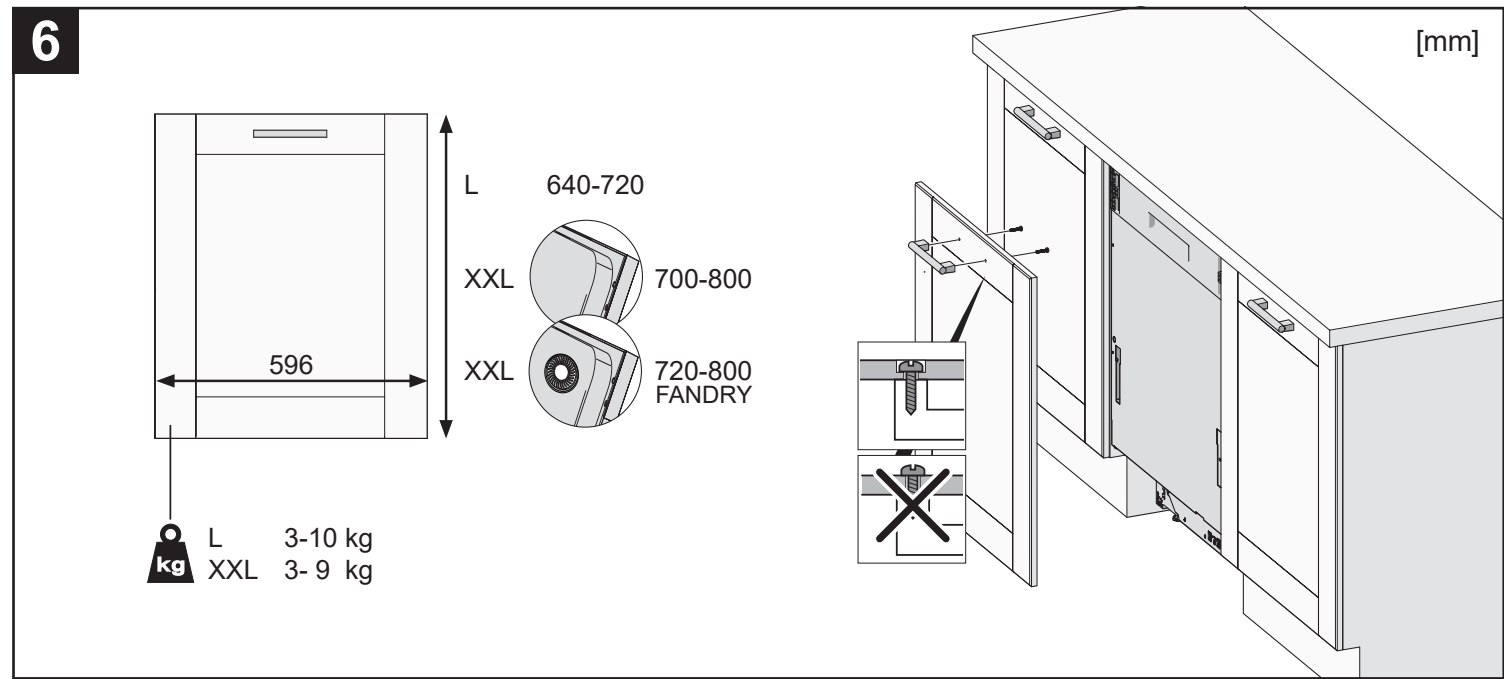
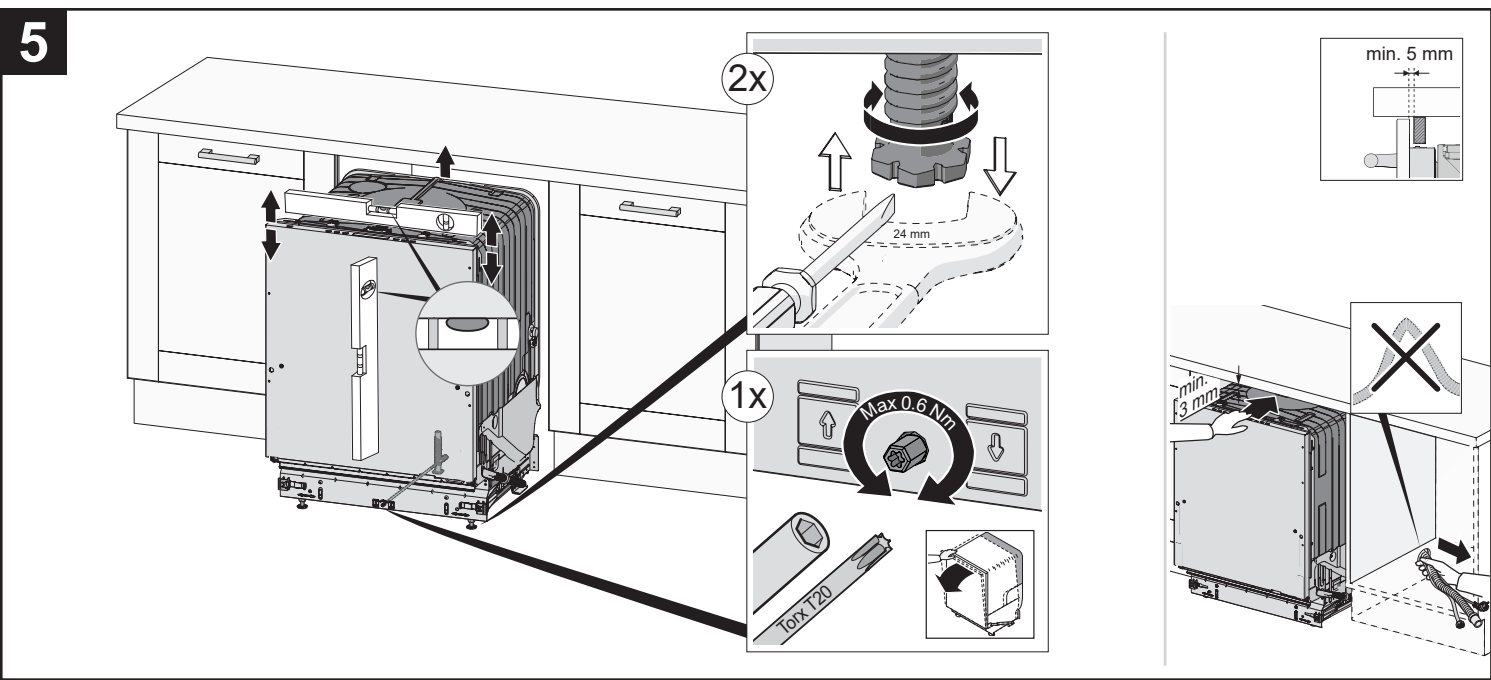
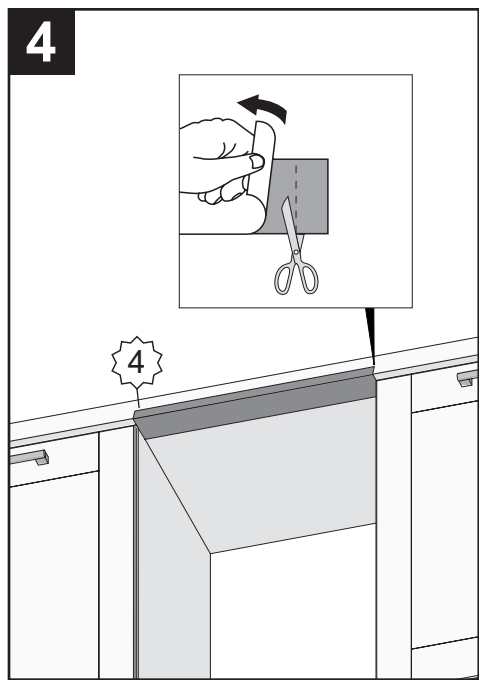
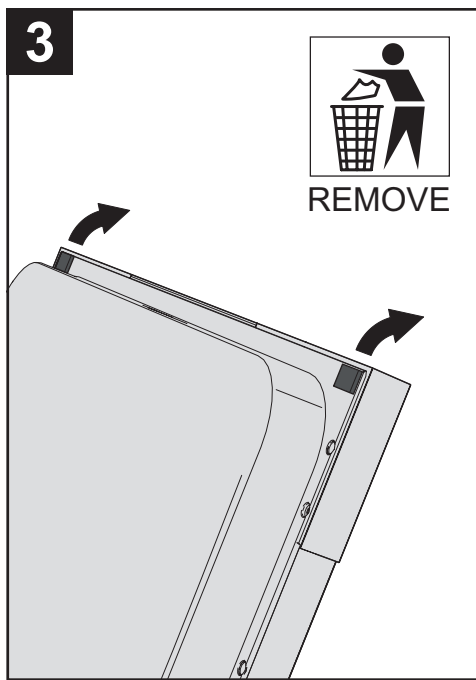


*** EN** Only certain models.
If the following parts are not supplied with your dishwasher, they are not intended for your specific model.

AR	في موديلات معينة.	IT	Solo per alcuni modelli.	RO	Numai la anumite modele.
BG	Само определени модели.	RU	Только в некоторых моделях.	SK	Iba niektoré modely.
CS	Pouze některé modely.	SL	Samo nekateri modeli.	SQ	Vetëm disa modele të caktuara.
CN	僅限部分型號。	SR	Samo neki modeli.	SV	Endast vissa modeller.
DA	Kun visse modeller.	UK	Тільки в деяких моделях.		
DE	Nur bei bestimmten Modellen.				
ES	Sólo se aplica a determinados modelos.				
ET	Ainult teatud mudelite.				
FA	فقط بعضی از مدل ها.				
FI	Vain tietyt mallit.				
FR	Uniquement pour certains modèles.				
HR	Samo na nekim modelima.				
HU	Csak bizonyos modellek esetében.				

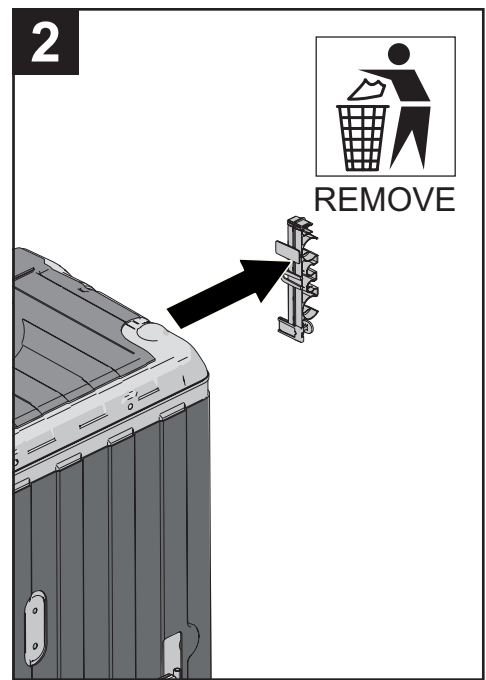

We reserve the right to make changes.

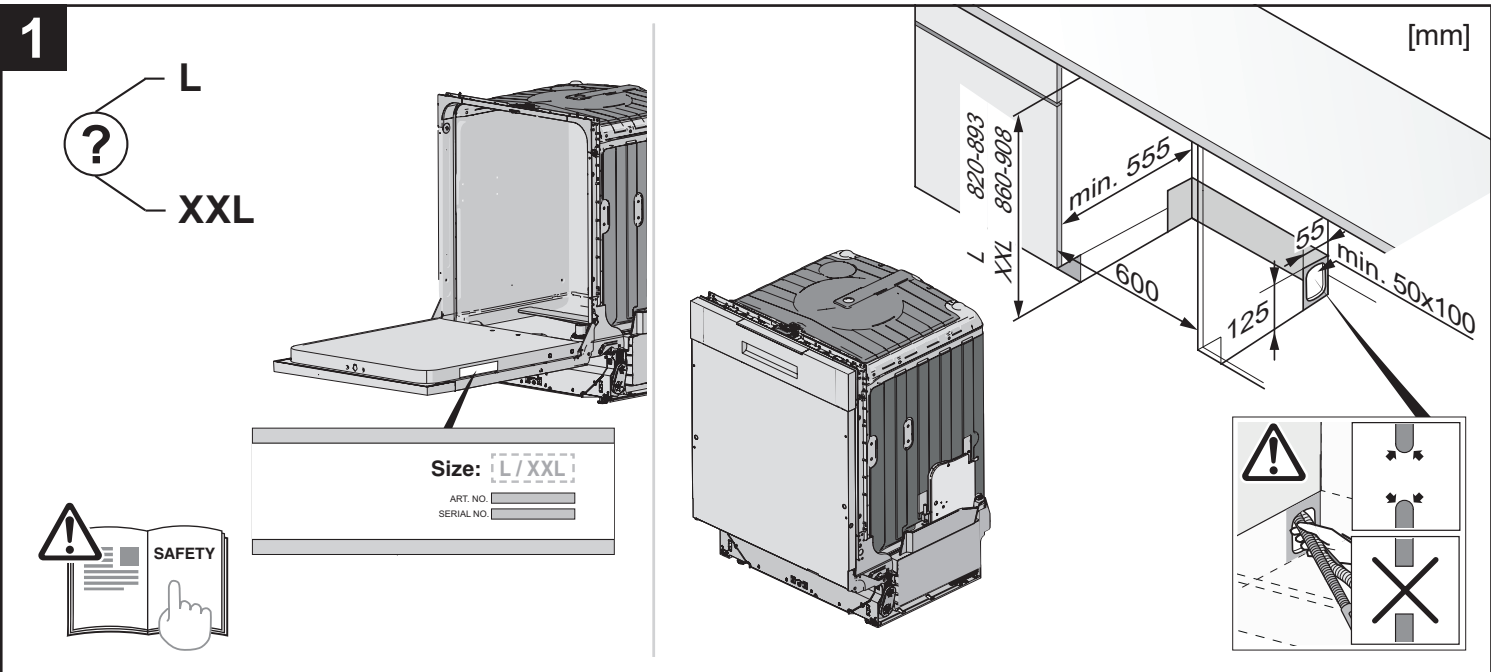