 
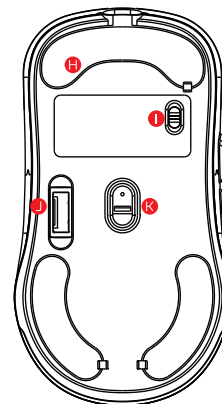 
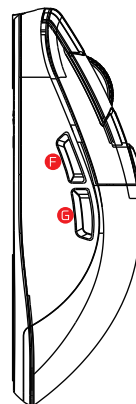 


## SPECIFICATIONS

|                            |                                               |
|----------------------------|-----------------------------------------------|
| <b>Model Number:</b>       | WG9                                           |
| <b>Connectivity:</b>       | 2.4GHz                                        |
| <b>Switch Lifetime:</b>    | 5 Million Clicks                              |
| <b>Sensor:</b>             | Pixart Optical Sensor                         |
| <b>Speed (Max):</b>        | 30 IPS                                        |
| <b>Acceleration (Max):</b> | 10 G                                          |
| <b>Polling Rate:</b>       | 500 Hz                                        |
| <b>Battery Capacity:</b>   | 600 mAh                                       |
| <b>Battery Lifetime:</b>   | ± 85 Hours                                    |
| <b>Size:</b>               | 123*67*44 mm                                  |
| <b>Weight:</b>             | 94 ± 1 g                                      |
| <b>Power Rating:</b>       | 3.7V $\approx$ 15 mA                          |
| <b>Compatibility:</b>      | Windows® 7 or later & Mac® OS 10.11 or later. |

## PRODUCT TOUR

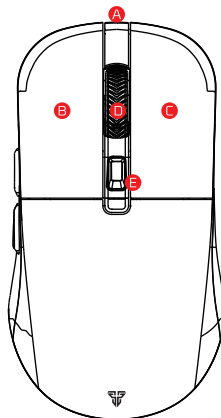

### EN

- A** USB C Port
- B** Left Mouse Button
- C** Right Mouse Button
- D** Scroll wheel
- E** DPI Button
- F** Forward Button
- G** Back Button
- H** Mouse Feet
- I** Power ON/OFF Switch
- J** USB Receiver
- K** Optical Sensor

### ID

- A** Port USB C
- B** Tombol Kiri Mouse
- C** Tombol Kanan Mouse
- D** Roda Gulir
- E** Tombol DPI
- F** Tombol Maju
- G** Tombol Kembali
- H** Alas Mouse
- I** Tombol ON/OFF
- J** Penerima USB
- K** Sensor Optik

### ZH

- A** USB C 连接口
- B** 鼠标左键
- C** 鼠标右键
- D** 滚轮
- E** DPI 按键
- F** 前进键
- G** 后退键
- H** 鼠标脚垫
- I** 电源开关键
- J** USB 接收器
- K** 光学传感器

### ES

- A** Puerto USB C
- B** Botón izq. del ratón
- C** Botón der. del ratón
- D** Rueda de desplazamiento
- E** Botón DPI
- F** Botón de avance
- G** Botón de retroceso
- H** Pies de ratón
- I** Interruptor de encendido/apagado
- J** Receptor USB
- K** Sensor óptico

### JP

- A** USB Cポート
- B** マウスの左ボタン
- C** マウスの右ボタン
- D** スクロールホイール
- E** DPIボタン
- F** 進むボタン
- G** 戻るボタン
- H** マウスパッド
- I** 電源オン/オフスイッチ
- J** USBレシーバー
- K** 光学センサー

### KR

- A** USB C 포트
- B** 마우스 왼쪽 버튼
- C** 마우스 오른쪽 버튼
- D** 스크롤휠
- E** DPI 버튼
- F** 앞으로 단추
- G** 뒤로 버튼
- H** 마우스 패드
- I** 전원 켜기/끄기 스위치
- J** USB 수신기
- K** 광학 센서

Join the Fantech  
Discord  
Community



 
FANTECHWORLD.OFFICIAL  
SUPPORT@FANTECHWORLD.COM



FANTECH WORLD  
FANTECH WORLD



FANTECH\_WORLD  
FANTECHWORLD.OFFICIAL

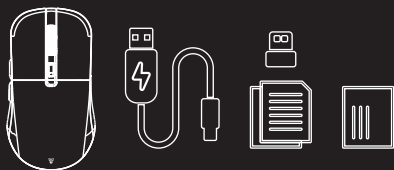

## ANY QUESTIONS?

Wondering how to use your new epic Fantech gaming gear, or have any other questions? Reach out to our dedicated support team.

[support@fantechworld.com](mailto:support@fantechworld.com)

WG9  
**KANATA** WIRELESS  
GAMING MOUSE



## QUICK START GUIDE

PANDUAN CEPAT [ID]  
快速入门指南 [ZH]



## STEP 1: DOWNLOAD

To further customize your settings, please visit our website and download the software (if applicable).



[www.fantechworld.com](http://www.fantechworld.com)

## STEP 2: HOW TO CONNECT

### USB C CHARGING CABLE



\*The USB C charging cable is exclusively for charging; this mouse does not support a wired mode.



### 2.4GHZ CONNECTION



1



2



\*You have the option to choose between ECO mode and ON mode for using the mouse. ECO mode operates without lighting, whereas ON mode activates the lighting.



### DPI INDICATOR

|       |      |  |
|-------|------|--|
| Red   | 800  |  |
| Blue  | 1200 |  |
| Green | 2000 |  |