

[illegible]

<h3>htc</h3> <h4>Wireless Earphones 20</h4> <p>Quick Start Guide HTC NE20</p>	<h4>Product Specifications</h4> <p>Model: HTC NE20</p> <p>Bluetooth Range: ~10 m Version: 6.0</p> <p>Speaker Diameter: 13 mm Impedance: 32 Ω</p> <p>Earphone power Input: 5 V/300 mA Battery capacity: 30 mAh Battery life: ~4 hrs Charging time: ~1.5 hrs</p> <p>Charging case power Input: 5 V/300 mA Output: 5 V/160 mA Battery capacity: 300 mAh Charging time: ~1.5 hrs Earphone recharges: 3 charges (when case is fully charged)</p>	<h4>What's in the box</h4> <p>Charging case</p> <p>USB-C cable</p> <p>Lanyard</p> <p>2 Earphones</p> <p>Quick Start Guide</p>	<h4>Components</h4> <p>Earphone LED</p> <p>Touchpad</p> <p>Earphone speaker</p> <p>Charging contact</p> <p>Charging case display screen</p> <p>USB Type-C port</p> <p>Multi-Function Buttons</p>	<h4>Take out and pair the earphones</h4> <p>If you're using the earphones for the first time, remove both from the charging case. The LED on one earphone will blink white and cycle alternately, indicating that they are in pairing mode.</p> <p>Note:</p> <ul style="list-style-type: none"> The earphones have not been paired with each other, they will automatically enter pairing mode when turned on. You'll hear two beeps when pairing is successful. If the earphones have been paired before, they will automatically reconnect to each other when turned on. You'll hear a beep when they connect. 	<h4>How to put on the earphones</h4> <ol style="list-style-type: none"> 1. Insert the earphones into your ears. 2. Press and hold the touchpad on the right earphone until the LED indicator starts flashing. 3. Wait for the earphones to connect to your device. 4. Enjoy listening! 																					
<h4>Power on and off</h4> <p>Power on Opening the charging case will automatically turn on the earphones. To manually turn on each earphone, press and hold the touchpad for three seconds.</p> <p>Power off Placing the earphones in the charging case and closing the case will automatically turn them off. To manually turn off each earphone, press and hold the touchpad for five seconds.</p> <p>Note: If the earphones are not paired with a Bluetooth device within three minutes after powering on, they will automatically power off. They will also power off after three minutes if the paired Bluetooth device moves out of the effective connection range and has not reconnected.</p>	<h4>Connect to Bluetooth device</h4> <p>On your device, turn on Bluetooth and choose to connect to "HTC NE20".</p> <p>Note: If the earphones are not paired with a Bluetooth device within three minutes after powering on, they will automatically power off. They will also power off after three minutes if the paired Bluetooth device moves out of the effective connection range and has not reconnected.</p>	<h4>Basic operations</h4> <p>Power on/off</p> <p>Phone mode</p> <p>Music mode</p> <p>Game mode</p> <p>Call mode</p> <p>Video mode</p> <p>Photo mode</p> <p>App mode</p> <p>Navigation mode</p> <p>Search mode</p> <p>Find mode</p> <p>Find headphones</p> <p>Find headphones</p> <p>Find headphones</p>	<h4>Key functions</h4> <ul style="list-style-type: none"> Play/Pause: Tap either earphone once. Volume Up: Tap the right earphone twice. Volume Down: Tap the left earphone twice. Play previous track: Tap the left earphone three times. Play next track: Tap the right earphone three times. Answer/End call: Tap either earphone once. Reject call: Press and hold either earphone for two seconds. Activate voice assistant: Press and hold the left earphone for two seconds. <p>Note: When using a single earphone only, press and hold the active earphone for two seconds.</p> <ul style="list-style-type: none"> Switch between Game and Music modes: Music mode is the default mode. Press and hold the right earphone for two seconds to switch between modes. (The louder notification sound indicates Game mode.) Note: Mode switching is disabled when you're using a single earphone only. <p>Indicator LEDs</p> <table border="1"> <thead> <tr> <th>Blinking LED</th> <th>Status</th> </tr> </thead> <tbody> <tr> <td>Blinking white and cyan</td> <td>Both earphones: Powered on Single earphone: Unpaired</td> </tr> <tr> <td>Solid white</td> <td>Charging</td> </tr> <tr> <td>Off</td> <td>Powered or fully charged</td> </tr> </tbody> </table>	Blinking LED	Status	Blinking white and cyan	Both earphones: Powered on Single earphone: Unpaired	Solid white	Charging	Off	Powered or fully charged	<h4>How to reset the earphones</h4> <p>If the earphones fail to pair or reconnect to each other, reset them by tapping both earphones five times simultaneously. Note: Resetting the earphones will clear the Bluetooth pairing history.</p>	<h4>Case Display Screen: Basic Operations</h4> <p>Activate the Display Screen Slide/Clean Activation: Open the charging case lid. Display activates automatically. Touch Activation: Tap the display area when screen is off. Deactivate the Display Screen Auto Deactivation: Display turns off automatically after 30 seconds of inactivity. Manual Deactivation: Press the multi-function button once to turn off the display.</p> <p>Note: Initial activation required for first-time use. Method 1: Charge the charging case via the Type-C port to activate and power on. Method 2: Press and hold the multi-function button for 8 seconds to power on. Tip: The product is preset in shutdown mode upon factory shipment. Initial activation is required before first use.</p>	<h4>Multi-Function Button Operations</h4> <p>Single-click: Turn the screen on/off. Press and hold for 2 seconds: Open the system menu ("Power Off" or "Reset"). Press and hold for 8 seconds: When powered on: Restore to factory settings.</p> <p>Status Icons Guide</p> <table border="1"> <thead> <tr> <th>Icon</th> <th>Status</th> </tr> </thead> <tbody> <tr> <td>Solid red</td> <td>Earphones in case, not connected to phone</td> </tr> <tr> <td>Solid black</td> <td>Case connected to earphones, earphones paired to phone</td> </tr> <tr> <td>Solid green</td> <td>Earphone Charging</td> </tr> <tr> <td>Solid black</td> <td>Earphone fully charged</td> </tr> <tr> <td>Solid red</td> <td>Earphone in use</td> </tr> </tbody> </table>	Icon	Status	Solid red	Earphones in case, not connected to phone	Solid black	Case connected to earphones, earphones paired to phone	Solid green	Earphone Charging	Solid black	Earphone fully charged	Solid red	Earphone in use
Blinking LED	Status																									
Blinking white and cyan	Both earphones: Powered on Single earphone: Unpaired																									
Solid white	Charging																									
Off	Powered or fully charged																									
Icon	Status																									
Solid red	Earphones in case, not connected to phone																									
Solid black	Case connected to earphones, earphones paired to phone																									
Solid green	Earphone Charging																									
Solid black	Earphone fully charged																									
Solid red	Earphone in use																									
<h4>Case Display Screen: Feature Overview</h4> <p>Swipe right: Access the Menu Interface</p> <p>Menu</p> <p>Click the icon to access the corresponding function interface.</p>	<h4>Music Playback Functions</h4> <p>Volume down</p> <p>Previous Track</p> <p>Play/Pause Track</p> <p>Next Track</p> <p>Volume up</p> <p>Sound Effect Switching</p> <p>Click icon: Switch Corresponding Sound Effect</p>	<h4>TIKTOK Page Flipping and Like Function</h4> <p>After connecting the earphones to the mobile phone and entering TikTok, you can adjust the volume, switch to the previous video, switch to the next video, and give a like using the charging case. For iOS devices, you need to enable AssistiveTouch in Settings - Accessibility - Touch > AssistiveTouch (This function is only available for use with TikTok software). This feature may vary with compatibility issues with certain phones, and phones may not be able to do it.</p> <p>2. This feature is unavailable, please downgrade it.</p> <p>Switch to the previous video</p> <p>Like the current video</p> <p>Switch to the next video</p> <p>Find headphones</p> <p>Find headphones</p> <p>Click to find left or right earbud when connected to the charging case. The earbud will beep continuously during location mode.</p>	<h4>Camera Control</h4> <p>Requires Bluetooth connection to a compatible device (e.g., smartphones).</p> <p>Infractive camera exclusively - Only works with the device's pre-installed camera application. Third-party photography applications are not supported.</p> <p>2.Compatibility limitations - Functional restrictions may exist due to varying smartphone specifications.</p> <p>3.Non-functional handling - Disable this feature if incompatible.</p> <p>camera</p> <p>Take picture</p> <p>Open your phone's camera app and click the device button to take photos.</p> <p>Activate Voice Assistant</p> <p>Tap to start</p> <p>Click the icon to activate the voice assistant.</p>	<h4>Mini Games</h4> <p>Precise Bird</p> <p>Click the screen to navigate birds' positions and maintain flight.</p> <p>Settings</p> <p>System menu</p> <p>Display</p> <p>Do setting</p> <p>Wallpaper background</p> <p>Time setting</p> <p>Language</p> <p>Touch wake-up</p> <p>Tap the icon to access configuration options on the charging case display.</p>	<h4>Brightness Control</h4> <p>Adjust brightness</p> <p>Brightness Control: Swipe up/down to adjust screen brightness. Screen Timeout: Tap the display area when screen is off. To confirm selection.</p> <p>Wallpaper settings</p> <p>Long press the main interface for 3 seconds to switch wallpaper style.</p> <p>Menu Background</p> <p>Toggle between background options.</p>	<h4>Time settings</h4> <p>Time setting</p> <p>One hour</p> <p>15 minute</p> <p>24 hour clock</p> <p>Set current time/date and format preferences.</p> <p>Language settings</p> <p>Language</p> <p>Switch between different country/region languages. Requires re-selection after factory reset.</p>																				
<h4>Touch Wake-Up</h4> <p>Enable to wake screens by touch. Dislike to prevent accidental activation. Default Enabled.</p> <p>AI Translation</p> <p>Displays translated content synchronized with the connected app.</p>	<h4>Important Safety Instructions</h4> <p>Carefully read all the safety instructions in this document before using the product.</p> <p>General safety instructions</p> <ul style="list-style-type: none"> Use the product with care and store it in a clean environment, safe it free from extreme temperature, pressure, and humidity. Make sure the product is stored in a location where it cannot be bent or squeezed. Repairs and replacements should only be performed by authorized after-sales service staff. Do not attempt to disassemble or replace any part of the product yourself to prevent injury or damage to the device. Any unauthorized modification to the product voids the warranty. Only use the product in environments where Bluetooth transmission is permitted. <p>Personal safety instructions</p> <ul style="list-style-type: none"> Do not use the product if it is obviously defective or exhibits abnormalities such as bulging or excessive heating. Do not use the product when performing high-risk tasks that require your full attention. For your hearing protection, do not listen at high volume for long periods. Keep the product and its packaging out of reach of children and pets to prevent accidents such as swallowing and choking. 	<h4>Battery safety instructions</h4> <p>The product has a built-in rechargeable battery. Read the following instructions to ensure safe use and avoid fire.</p> <ul style="list-style-type: none"> Keep the product away from prolonged exposure to heat sources such as open fires or direct sunlight. Only store the product in environments with ambient temperatures of 0°C to 35°C (32°F to 95°F). Do not use or store the product in dust-prone, smoke-prone, high-temperature, high-pressure, or highly humid environments. Keep the product dry and away from liquids or moisture. Only use an FCC or CCC-certified charger with an output voltage of 5 V/1 A DC. Do not use the product while charging. Do not leave the product charging for longer than eight hours. Dispose of the product responsibly according to your local waste management guidelines. 	<h4>FCC ID: 2BHJR-NE20</h4> <p>FCC Caution</p> <p>This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device must not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.</p> <p>Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment. If this equipment does cause harmful interference to</p>																							

提示卡

颜色: 白色
单粉卡

80 mm

Special reminder operation

Before initial operation, power on the device.

1. Press and hold the multi-function button for 8 seconds to power on.
2. The battery level icon should appear on screen.
If the charging case enters sleep mode due to low battery, charge it for 30 minutes before checking the charging case's battery level.

Multi-Function button

Connect to Bluetooth to synchronize the screen lock time

1. Please remove the earphones from the charging case.
2. Enable Bluetooth on your phone, locate "HTC NE20" in available devices, and tap to connect/pair.

4 mm

Basic operations

Power on/Off

Phone mode

Music mode

Break earphones

Thank you for choosing our product! If you have any issues or unsatisfactory experiences during your shopping, please don't leave a negative review. Instead, reach out to 7if@htc-earphone.com. We'd love to help and make it right for you!