

Video instructions page URL:

[www.homespotdigital.com/support/videos/](http://www.homespotdigital.com/support/videos/)




# Quick Start Guide


**HomeSpot® JY508**  
**Wireless Neckband Speaker**

HOMESPOT


# PRODUCT OVERVIEW

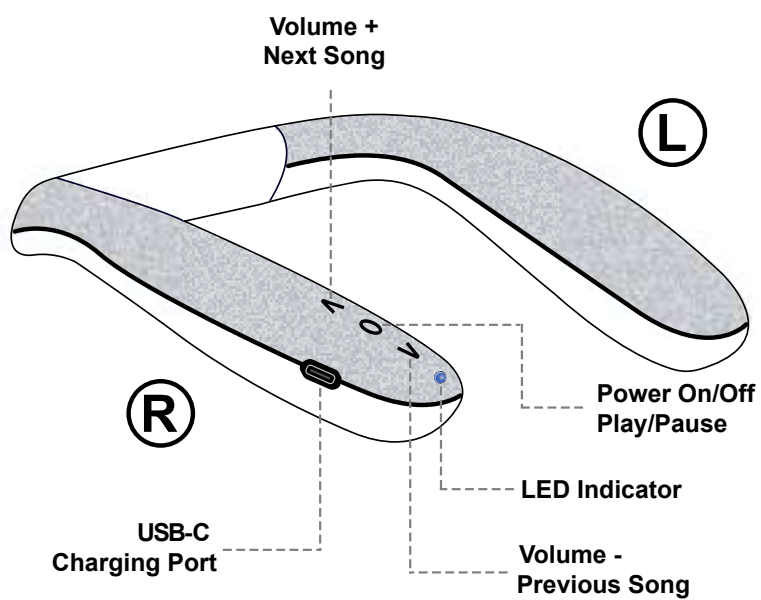


## CHARGING

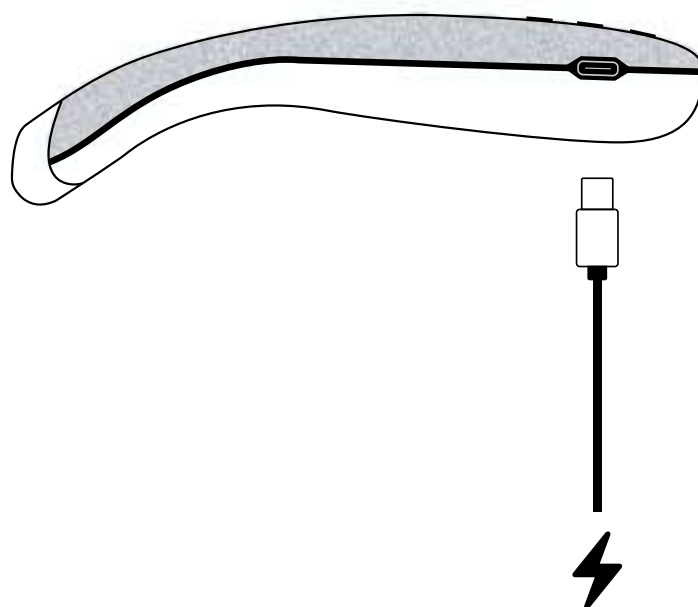

## HOW TO WEAR

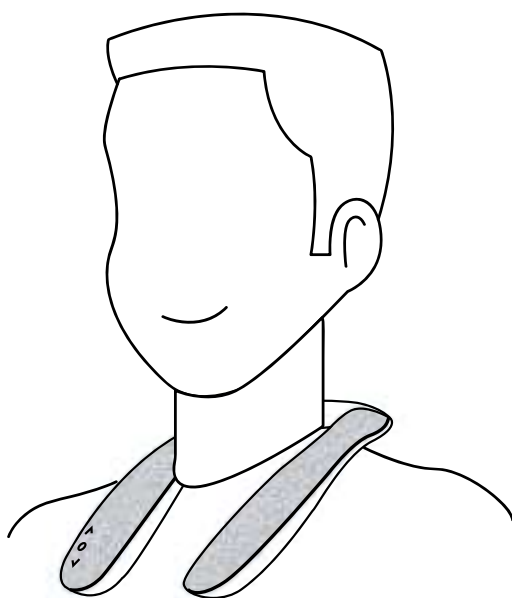


## POWER ON/OFF

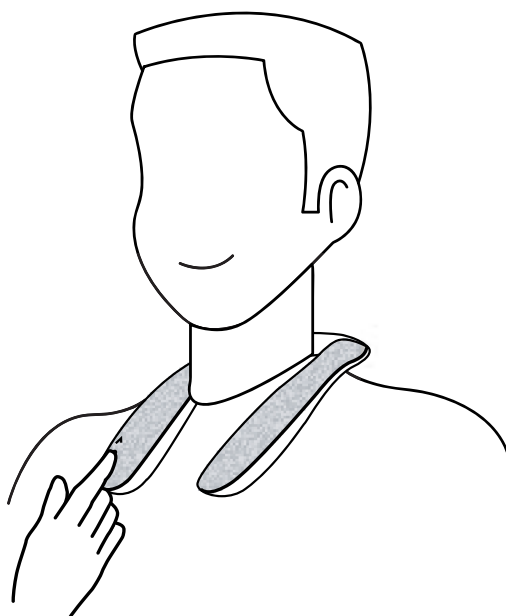


# BLUETOOTH PAIRING


①

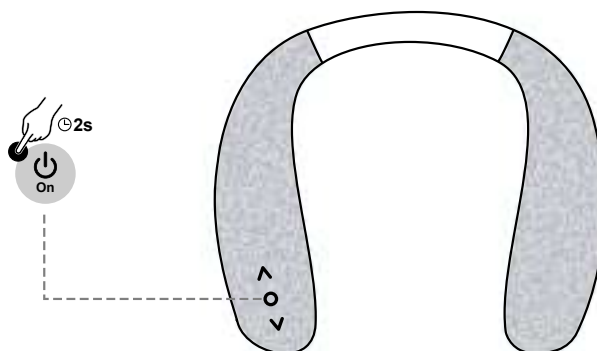


②

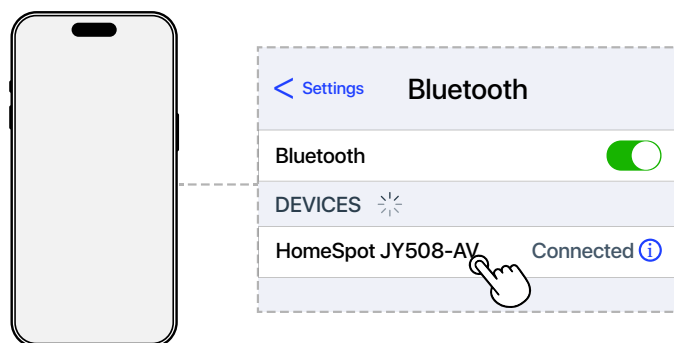

# BASIC CONTROLS

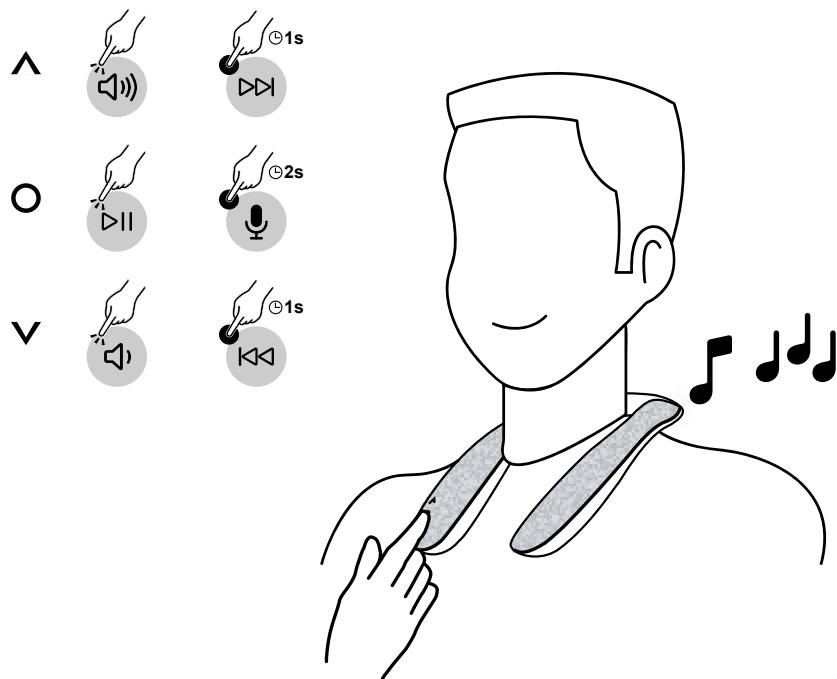

## LED INDICATORS

LED Indication	Status	Meaning
	Solid Blue	Power On or Waiting for Connection
	Fast Blue Blinking	Bluetooth® Pairing or Connecting
	Slow Blue Blinking	Bluetooth® Connected
	Solid Red	Battery Charging

## SPECIFICATIONS

Transducers	33mm 4Ω full range loudspeaker x 2
Output power	3W x 2, Total 6W RMS
Frequency response	50 Hz - 20 kHz
Signal-to-noise ratio	> 80 dB
Battery type	Li-ion polymer 600mAh
Battery charge time	2 hours (5V/ 500mA)
Music play time	up to 12 hours (60% volume level)
Bluetooth® version	5.1
Effective Range	10m (line of sight)
Bluetooth® profile	A2DP 1.3, AVRCP 1.6
Product dimensions (W x H x D)	223 x 202 x 51 mm / 8.8 x 8 x 2"
Net weight	0.24 kg / 0.53 lbs
Maximum Operating Temperature	45 °C



# TROUBLESHOOTING

Problems	Suggestions
○ How to reset the speaker?	○ Turn on the speaker, press and hold <b>▲</b> and <b>▼</b> buttons for 10 seconds. The LED will be fast blinking blue after reset.
○ Cannot pair the speaker with my mobile phone	○ Turn on the mobile phone before turning on the speaker. ○ Enable the Bluetooth feature on your mobile phone.
○ Mobile phone cannot discover the speaker	○ Remove the previous pairing record on the mobile phone, then re-do the pairing. ○ Reset the speaker.
○ Poor audio quality	○ Reduce the distance and remove obstacles between the speaker and the paired mobile device.
○ Speaker cannot be switched on	○ The battery level is too low, charge the speaker with the included charging cable.



The Bluetooth® word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. and any use of such marks by GT-ronics HK Ltd, Incorporated is under license. Other trademarks and trade names are those of their respective owners.

## Notice

**WARNING:** To protect battery lifespan, fully charge at least once every 3 months. Battery life will vary due to usage patterns and environmental conditions. When using an external adapter, the output voltage/current of the external adapter should not exceed 5V/3A.

### COMPLIANCE

This device complies with Industry Canada licence-exempt RSS standard(s).

Operation is subject to the following two conditions: (1) This device may not cause interference, and (2) This device must accept any interference, including interference that may cause undesired operation of the device.

Le présent appareil est conforme aux CNR d'Industrie Canada applicables aux appareils radio exempts de licence.

L'exploitation est autorisée aux deux conditions suivantes:

- (1) l'appareil ne doit pas produire de brouillage, et
- (2) l'utilisateur de l'appareil doit accepter tout brouillage radioélectrique subi, même si le brouillage est susceptible d'en compromettre le fonctionnement.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) this device may not cause harmful interference, and
- (2) this device must accept any interference received, including interference that may cause undesired operation.

### NOTE:

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.

However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

This equipment must not be co-located or operated in conjunction with any other antenna or transmitter.

20230925\_HS-JY508\_EN