




4 in 1 Wireless Induction Bluetooth Speaker

With Phone Holder and Power Bank

KA4IN1BLSPK

Overview

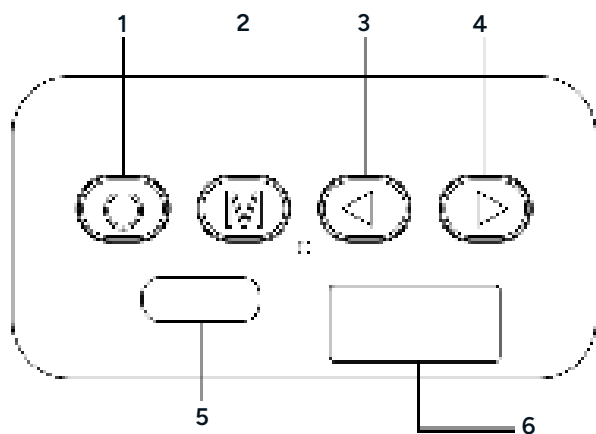

1	Power Button	<ul style="list-style-type: none">• Press and hold to turn the speaker on/off.• Press to toggle between Inductive and Bluetooth modes.
2	Light Button	<p>Press to cycle through following Light modes:</p> <ul style="list-style-type: none">• Rainbow.• Blue.• White.• Off.
3	Previous Button	<ul style="list-style-type: none">• Press to return to the previous song.• Press and hold to reduce the volume.
4	Next Button	<ul style="list-style-type: none">• Press to skip to the next song.• Press and hold to increase the volume.
5	USB-C Input Port	Connect a USB-C cable to power the speaker.
6	USB-A Output Port	Connect a USB-A cable to use the power bank.

Operation

Powering the Speaker

- To power the device, connect one end of a USB-C cable (not provided) to the USB-C port on the speaker and connect the other end to a USB-C power adaptor.
- Press and hold the 'Power' button to turn the device on/off.

Connecting a Device to the Speaker

This device supports 2 playback modes: Inductive Mode and Bluetooth Mode. Toggle between these by pressing the 'Power' button.

Inductive Mode (Wireless Induction)

1. Place your phone directly on the phone holder.
2. Press the 'Power' button to switch to Inductive mode. A prompt tone will play. The speaker will amplify audio without requiring Bluetooth pairing.

Bluetooth Mode

1. Press the 'Power' button to switch to Bluetooth mode. A prompt tone will play.
2. On your phone or other Bluetooth-enabled device, activate Bluetooth and search for 'Kogan 4 in 1 Speaker.'
3. Tap to connect. A confirmation tone will indicate successful pairing.
4. Once paired, audio will play through the speaker.

Using the Power Bank

This speaker features a power bank function for emergency charging.


1. Insert a USB-A cable into the output port on the rear of the speaker.
2. Connect the other end to your phone or device to begin charging.

Note:

The power bank has limited capacity and is intended for emergency use only. Using this function will reduce the speaker's available playback time.

Phone Holder

Use the speaker as a phone holder by adjusting it to your desired angle. It folds for convenience and rotates 300° horizontally for optimal viewing.

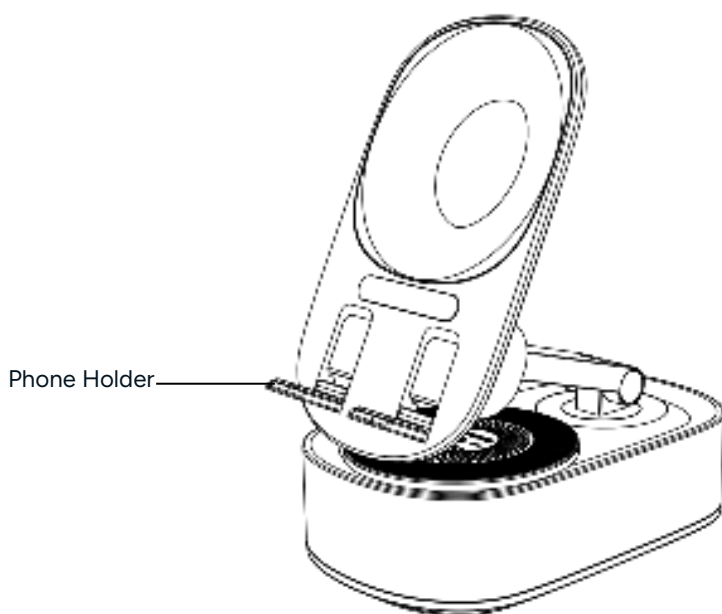

Specifications

Rotating Angle	300°
Power	5W x1
Speaker	52mm
Play Time	5-8 hours
BT Version	5.3
Distance	10m
Input	DC-5V (USB-C)
Battery	2000mAh
Output	5V $\overline{\text{---}}$ 1A
Materials	ABS/Silicon
Play Mode	BT/Induction
Charging	3-hours
Size	156x108x76mm

Notes

[illegible]

Need more information?

We hope that this user guide has given you the assistance needed for a simple set-up.

For the most up-to-date guide for your product, as well as any additional assistance you may require, head online to **help.Kogan.com**.

