 
 



ZEALOT S-67

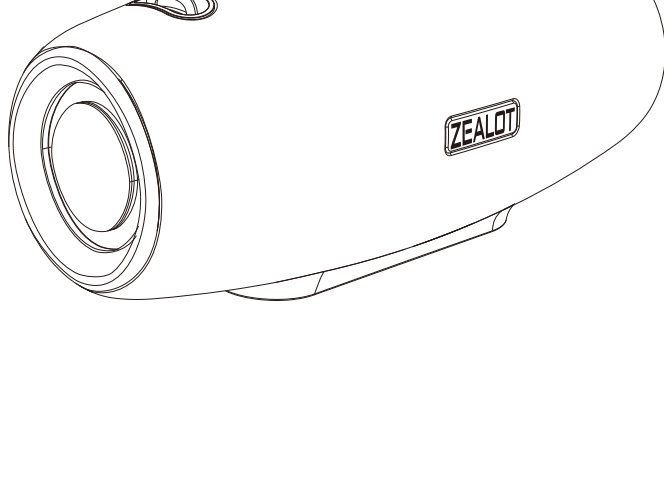

Quick Start Manual

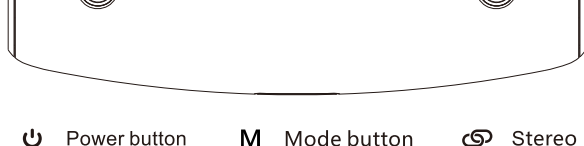

 - Power button Mode button Stereo
- Equalizer Play/Pause
- Short press 1s: Volume - / Long press 3s: Previous song
- Short press 1s: Volume + / Long press 3s: Next song

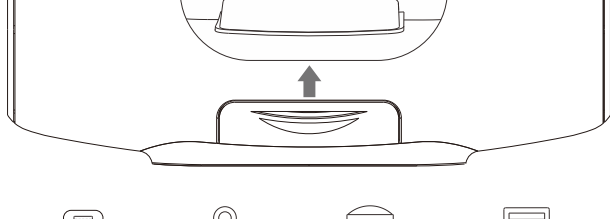

USB-C AUX port TF card slot USB port

1. Turn On/Turn Off

	Long press for 3 seconds: Hear the "Dī dū" prompt sound to realize power on/off
	Long press for 8 seconds: Reset shutdown

2. Function introduction

MODE SWITCHING ORDER:

Bluetooth mode

TF card mode



AUX mode

Switch mode:

Press and hold" M "button. Remark: M button requires 2 or more modes to switch

When switch between TF card and AUX mode, the last insert will prior by default.


Bluetooth mode, TF card / USB flash disk mode working indicator light (Blue) status

Play	Flashing	Pause	Flashing
------	----------	-------	----------

2.1 Bluetooth

2.1.1 Bluetooth connection

 1. Power on the speaker and after the blue indicators flashing with the voice prompt "BLUETOOTH" the speaker has entered the pairing mode. waiting for connection.
2. Select the "ZEALOT-S67" in your Bluetooth device (cell phone) for connection and click on connect. When hear the two prompt sounds and the blue indicator is steady on, the speakers and the device have been successfully connected.



Notices:

1. When it shows the below pictures, please ignore the ZEALOT-S67 on your iPhone's Bluetooth devices list, and restart Bluetooth connection.
2. When you use iPhone to reconnect, begin with ZEALOT-S67 powered off, please turn on Bluetooth on your phone before starting up ZEALOT-S67, 1 meet the first problem.

Pairing failed

Please confirm ZEALOT-S67 is turned on, and it is in communication mode, and is ready to pair.

OK

Reconnection?


1. Restart the speaker, it will automatically connect the paired cell phone or other Bluetooth devices;
2. If the connection fails, please enter the Bluetooth settings to ensure the Bluetooth on your phone has been turned on;
3. With IOS device, the Bluetooth should be turned on in advance for the speaker to automatic connect. If not, you need to manual select the "ZEALOT-S67"

2.1.2 TWS Connect

When both machines are turned on and the distance is with 10m, click on the button of any machine to connect each other. After the first connection is successful and the subsequent connection will be automatic.

2.1.2 Bluetooth Call

	Tap: answer/ hang up
	Press and hold: reject
	Double-tap: call back the last number

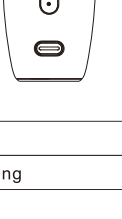 

2.1.3 Bluetooth Play

Open the music player to play music in the Bluetooth state.

	Short press 1S: volume + / long press 3s: next song
	Short press 1S: volume - / long press 3s: previous song
	Tap: Play/Pause

Open the TF card / U disk mode, the operation is the same.

2.2 Data transmission and USB audio function

USB data cable connect with computer can be used for power charging when the speaker in power off state. Connect with the computer in power on state, after the USB used for data transmission, you need to power on the speaker and insert the TF card, after the mobile USB and hard disk identified by the computer, you can start to copy.

2.3 Equalizer function

EQ	Click the vocal green light flashes twice and then stays on!
	Click the subwoofer orange light flashes twice and then stays on!
	Click the normal state, the blue light flashes twice and then stays on!



x1 1Vocal

x2 2 bass

x3 3 normal tone

2.4 USB Mode

Insert the U disk and hear the prompt tone "USB" to play the songs in the disk.

	Short press 1S: volume + / long press 3s: next song
	Short press 1S: volume - / long press 3s: previous song

2.5 TF Card Mode

Insert the TF card and hear the prompt tone "TF Card" to play the songs in the TF card.

	Short press 1S: volume + / long press 3s: next song
	Short press 1S: volume - / long press 3s: previous song

2.6 AUX Mode

Connect with audio cable, it will switch to aux mode after hearing the warning tone "AUX".

3. Charging

1. When the battery voltage is insufficient, there is a voice prompt "Low battery please charge", reminding users to charge it. (Support view the power state of this bluetooth speaker on your phone while connecting via bluetooth.)
2. Plug micro USB-C charge cables into the speakers and other end to adapter or computer USB port for charging. Red indicator is on when charging and goes out after fully charged.

3. Charging time vary from the different adapters and computer USB charging ports.

4. Specification

Input Voltage:DC5v	Driver:4Ω
Transmission range:10m	Frequency response:80Hz-20KHz
SNR:>95dB	Distortion: <1%
Working Voltage:7.4V	Weight:1956g
Dimension:297*133*130mm	

5. Notice

1. Please check if the model of the charger is suitable for this product before charging.
2. Do not submerge in water.
3. Avoid extreme temperatures.
4. Any improper disassemble or modify without professional skills will cause unknown damage even explosion. It's not covered by our warranty.

Tips : Keep your speaker & mobile phone in 30M working range.



recycleable packaging

ZA-S67-20211021