



 Google tv

55" OLED 4K120Hz SMART AI GOOGLE TV

SERIES 9 X98J (KAOD55X98JSVA)

Safety Information	02
Important Safety Precautions	02
Components	03
TV Buttons And Terminal Interface	04
External device connection diagram	04
TV Install And Connect	05
TV Stand Installation Instructions	05
Remote Control overview	06
OSD	07
1 Initial Installation	07
2 HOME	10
3 Settings	11
4 App Install/Move/Uninstall	13
5 TV source setting	13
How to turn on auto sleep function	14
Specifications	15
Troubleshooting	16
Help	17

SAFETY INFORMATION



The exclamation point within an equilateral triangle is intended to alert the user to the presence of important operating in the literature accompanying the appliance.



Warning
The lightning flash with arrowhead symbol within an equilateral triangle, is intended to alert the user to the presence of uninsulated dangerous voltage within the products enclosure that may be of sufficient magnitude to constitute a risk of electric shock to persons.

CAUTION

**RISK OF ELECTRIC SHOCK
DO NOT OPEN**

High, voltage are used in the operation of this product to reduce the risk of electric shock, do not remove cover of the cabinet, refer servicing to qualified service personal.

Do not attempt to open or repair the TV yourself, as this may result in electric shock or injury. If the TV requires repair or major adjustment, please contact a qualified technician or your local customer service centre.

 
IMPORTANT SAFETY PRECAUTIONS

1) Read these instructions. 2) Keep these instructions. 3) Heed all warnings. 4) Follow all instructions.

5) Do not use his product e water. 6) Clean only with dry cloth.

- Do not block any ventilation openings. Install in accordance with these instructions.
- Do not install near any heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.
- Do not defeat the safety purpose of the polarized or grounding-type plug. A polarized plug has two blades with one wider than the other. A grounding type plug has two blades and a third grounding prong. The wide blade or the third prong are provided for your safety. If the provided plug does not fit your outlet, consult an electrician for replacement of the obsolete outlet.
- Protect the power cord from being walked on or pinched particularly at Plugs, convenience receptacles, and the point where they exit from the apparatus.
- Only use attachments /accessories specified by the manufacturer.
- Use only with the cart, stand, tripod, bracket or table specified by the manufacturer, or sold with the apparatus. When a cart is used caution when moving the cart/apparatus combination to avoid injury tip-over.
- Unplug this apparatus during lightning storms or when unused for long periods of time. Caution:
- To reduce the risk of fire or electric shock, do not expose this apparatus to rain or moisture.
- The mains plug is used as disconnect device, the disconnect devices shall remain readily operable.
- The socket-out shall be installed near the equipment and shall be easily accessible.
- This product should never be placed in a built-in installation such as a bookcase or rack unless proper ventilation is provided or the manufacture's instructions have been adhered to.
- The apparatus shall not be exposed to dripping or splashing and that no objects filled with liquid, such as vases, shall be placed on the apparatus.
- Do not place any sources of danger on the apparatus (e.g. liquid filled objects, lighted candles).
- Wall or Ceiling Mounting- The appliance should be mounted to a wall or ceiling only as recommended by the manufacturer.
-  Never place the TV, remote control or batteries near naked flames or other heat sources, including direct sunlight. To prevent the spread of fire, keep candles or other flames away from the TV, remote control and batteries at all times.
- The USB terminal should be loaded with 0.5A under normal operation. These servicing instructions are for use by qualified service personnel only. To reduce the risk of electric shock do not perform any servicing other than that contained in the operating instructions, unless you are qualified to do so.
- The battery shall not be exposed to excessive heat such as sunshine, fire or the like.
-  This equipment is a Class II or double insulated electrical appliance. It has been designed in such a way that it does not require a safety connection to electrical earth.
- The maximum using environment temperature is 45 degrees. The Maximum using altitude is 2000 meters



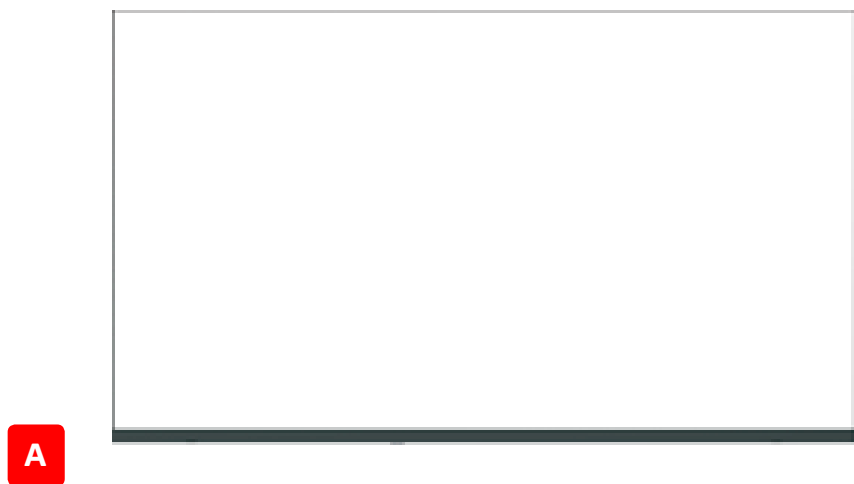

A Kogan 55" OLED SMART TV

B Remote control

C Stand (x1)

D M6 x 18 mm screw (x4)

M6 x 11 mm screw (x5)

 
E AAA battery (x2)

F Quick-start guide

G Warranty card



Note: The following is a functional diagram only. The actual position and layout may vary depending on the model.

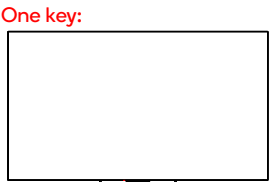


Press this button in standby mode to turn on/off the TV.


Terminal Interface

Note: The following is a functional diagram only. The actual position and layout may vary depending on the model.

	AV input External Av Signal Input.
	HDMI input Digital signal input from HDMI video connector.
	ANT 75 Connect the antennal/cadle tv input (75/VHF/UHF).
	USB input Connect a USB device here to play its media files or to record programs via the PVR function.
	EARPHONE OUTPUT When earphones are plugged in, speakers are disabled
	OPTICAL output Connect the SPDIF receiver.
	LAN Connect the Internet.

  EXTERNAL DEVICE CONNECTION DIAGRAM

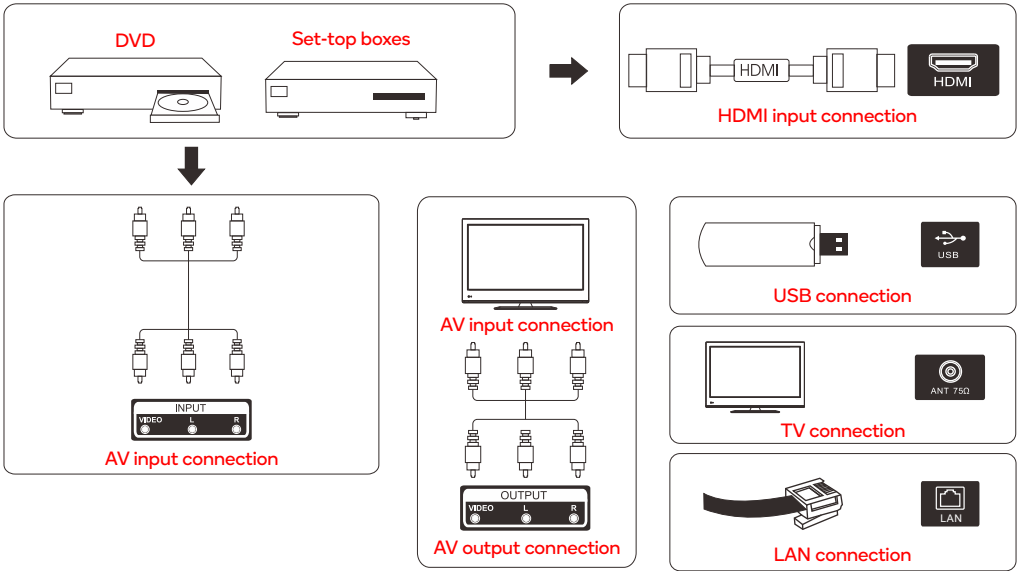


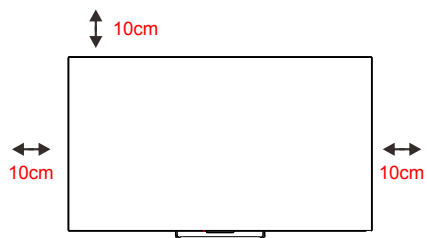

Set your TV

To put your TV on a firm place which can bear the weight of the TV.

 To avoid danger, please don't position the TV near water or heating place (such as light, candle, heating machine), do not block the ventilation at the back of TV.

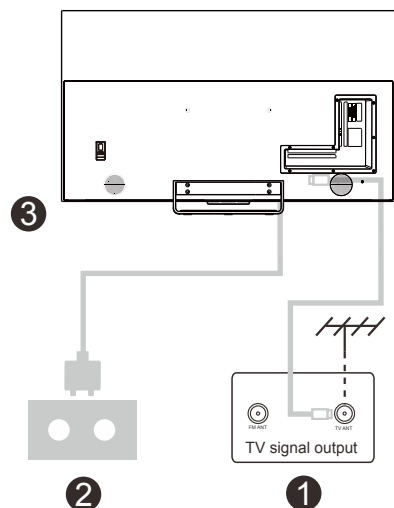

Connect antenna and power

1. Connect the antenna cable to the antenna socket on the back of the TV.

2. To plug the power cord of TV (AC 100-240V~ 50/60Hz).

Turn on TV

3. Connect the power supply, enter the standby mode (red light), press the power button of the TV or the power button on the remote control to turn on the TV

Note:

Picture for reference purposes only.

 
TV STAND INSTALLATION INSTRUCTIONS

1. Open the carton and remove the TV and scattered accessories and base (some models without base).
2. In order to avoid damaging the TV, please cover it with soft material, put it on the table, face down on the soft material and screw the neck of the base to the TV.
3. screw the base and connected to the TV.
4. the installation is complete.

Note:

Picture for reference purposes only.
Please prevail in kind


M6 x 18 (4PCS)
M6 x 11 (5PCS)

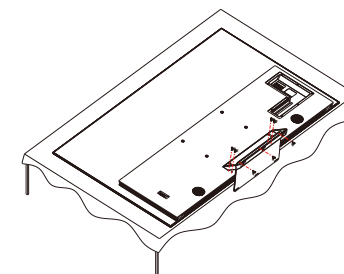



- 1 : Switches the TV between on and standby mode
- 2 : Indicator light.
- 3 : Mute or restore your TV sound.
- 4 : Live TV
- 5 : Displays the present channel information such as the current time and channel name.

 - 6 : Open the main menu, press to list the sources
- 7 : Talk to Google to control your TV using your voice
- 8 : Switch to Kids mode.
- 9 : In the HOME page, this button is "Dashboard" function. On the Live TV, this button is "Menu" function.

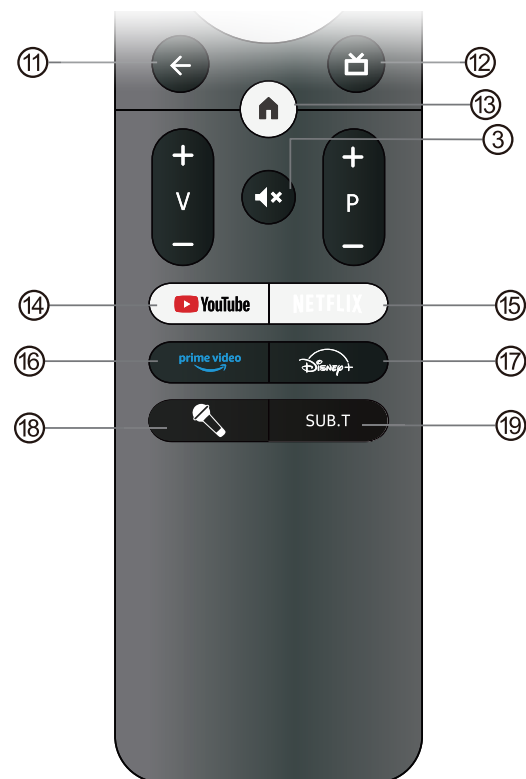

- 10 : Cursor UP/LEFT/RIGHT/DOWN.
- 11 : Press to move back through menus.
- 12 : Open the Live TV EPG.
- 13 : Displays the home screen.
- 14 : Connects to YouTube (Internet connection required).

 
- 15 : Connects to NETFLIX for viewing Online TV shows and films (Internet connection required).
- 16 : Connects to Prime video (Internet connection required)
- 17 : Connects to Disney+
- 18 : Open the Karaoke menu
- 19 SUB.T : SUB.T

1. Initial Installation

The first time you switch the TV on, the initial step screen appears which guides you through the initial process. Please according to the Text Tips to finish initial installation.


1.1 Pairing Bluetooth Remote

1. Press "BACK ← " and Home 🏠 simultaneously on remote control to enter the Bluetooth pairing mode. The indicator light on remote control will flash when starting the pairing mode.
2. Select the "Skip" icon to skip the pairing mode.

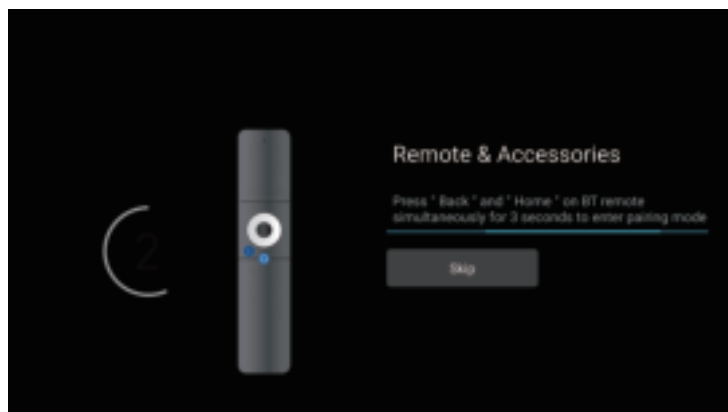


1.2 Language select

 Use ▲/▼ buttons to select system languages, then press [OK] to confirm.

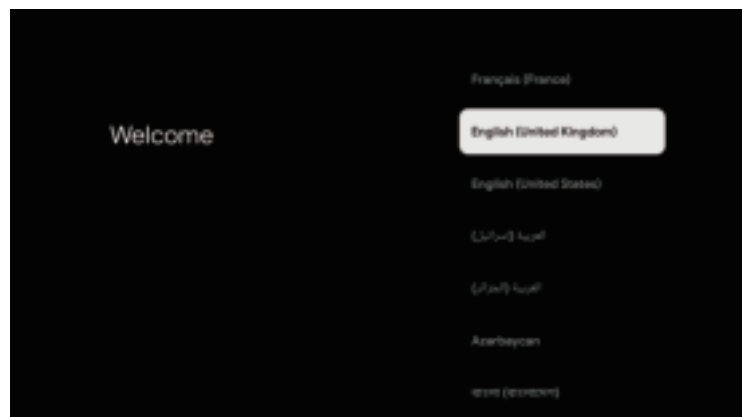

1.3 TV Set-up select

 Use ▲/▼ buttons to select your TV setup, then press [OK] to confirm.

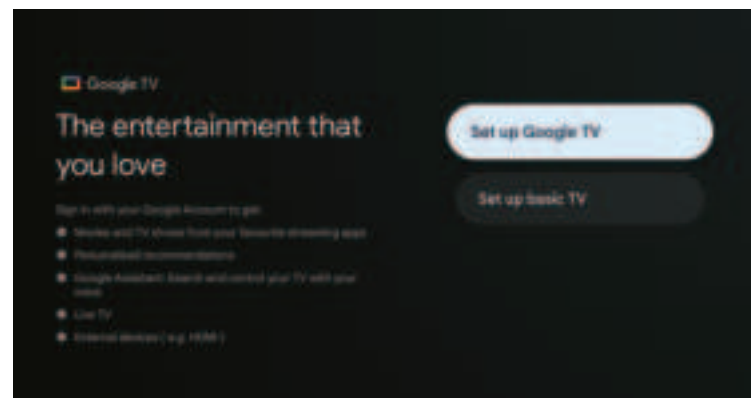

1.3.1 Set up Google TV™

1. Use your Android™ Smart phone to download and open the Google Home App on your phone.
2. Use the Google Home to scan the QR code on the TV device.
3. Follow the instructions in the Google Home App.
Note: Press "BACK" to cancel
If you just want to use your TV normally, please select "Set up basic TV"

 
1.3.2 Set up basic TV

Press "OK" button enter to the next page to Select your wifi network.

1.3.2.1 Configure the wifi network


Press ▲/▼ buttons to select Wi-Fi you wish to connect to enter the password and then confirm to connect.
If you select "Skip", it could be performed in homepage or settings menu.

1.3 Select your Wi-Fi network

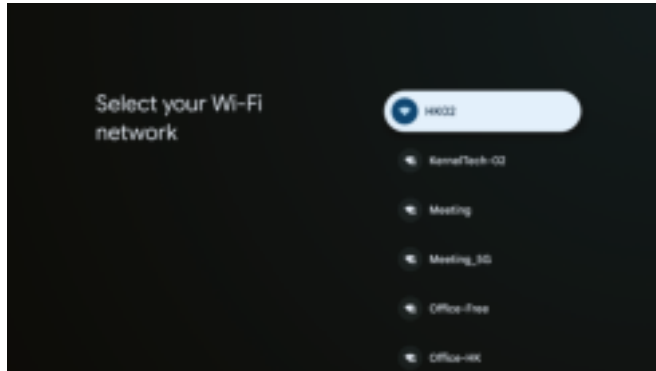


1.4 Terms of Service

 By accepting the Terms of Service to improve the product experience, select "Accept" to proceed with this condition.

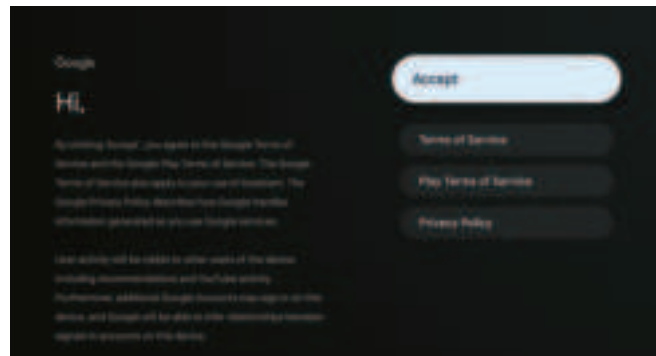


1.5 Google Services

 Select "Accept" to confirm if you want your location identified on your Google TV and agree to automatically send diagnostic information to help improve your experience.

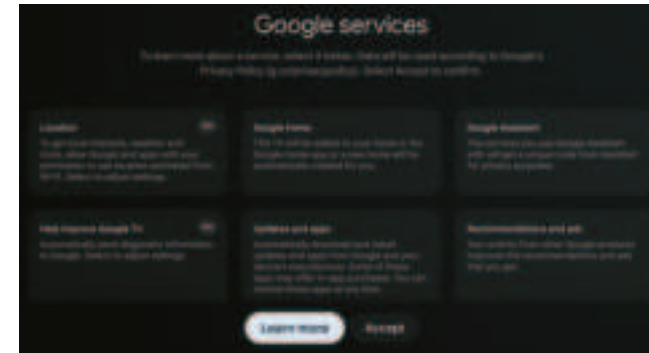


1.6 Region or Country select

 Use ^ / v buttons to select your region or country, then press "OK" to confirm.

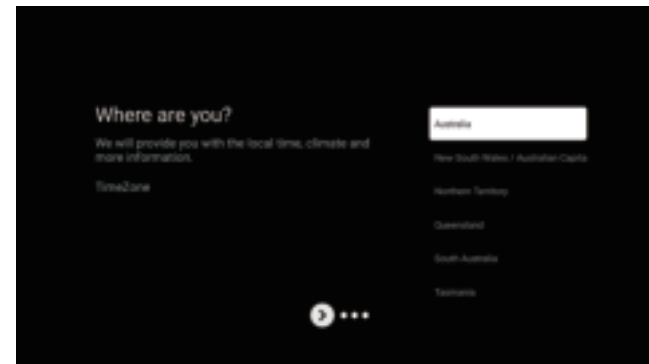


 1.7 Disclaimer Terms

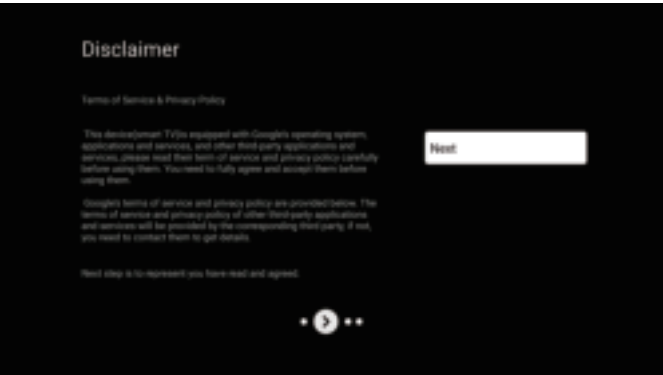


1.8 Tuner mode Setting

 Use **▲/▼** buttons to select Antenna/Cable/Satellite to scan TV channel, then press **[OK]** to confirm. If you select "Skip", the channel scan could be performed in menu.

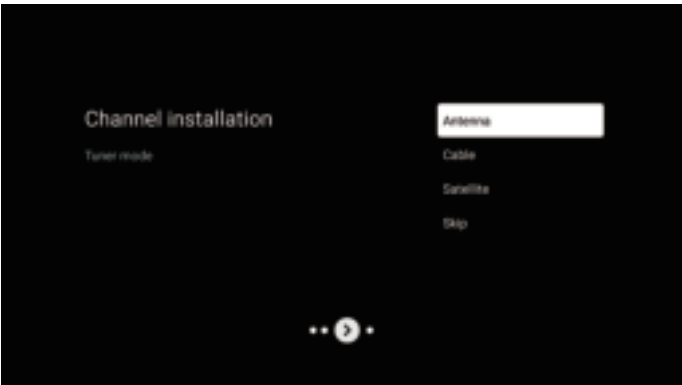


1.9 Check Settings

 Please verify settings in system settings, then select "Start now".

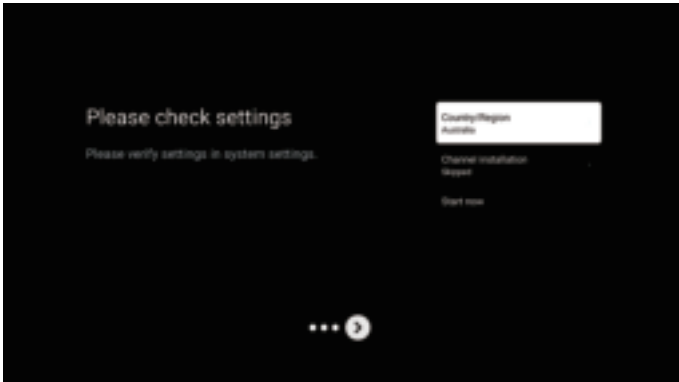


1.10 Play Auto Installs

 Select install or un-install the recommended apps by using this process. Select "Start exploring" to the next page.

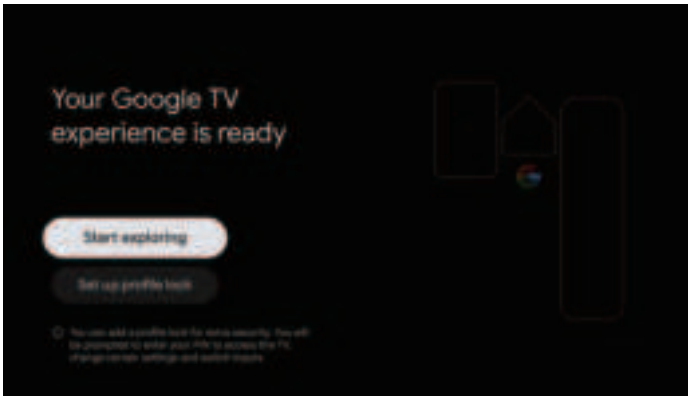

2. HOME

 Once you have completed initial setup, you will now enter the home by screen or press **⬆** button to display the homepage.

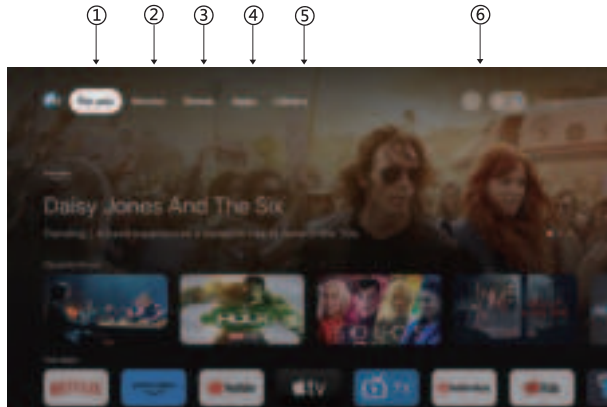

Some countries home screen UI may display different from above image, please refer to the product for details

1. For You

Selected the "For you" to browse content from across your Apps, intelligently organized just for you.

2. Movies & Shows

Watch what's happening live. Movies and Shows are grouped in ways that reflect your interests, So you can binge your favorite sagas and find your way to uncharted worlds.

3. Apps

Selected the "Apps" to have access to all your applications. Pre-installed applications are available for you in this row.

4. Library

Find your purchases, rentals and watch listed content across TV, mobile and web here.

 
5. Search

Thousands of movies and shows at the sound of your voice, Ask Google to quickly find what you want to watch.

3. Settings

Allows to set various performance of your TV .


1. Press **⬆** / **⬆** button to select "Settings" which is in the upper right corner of the screen.
2. Press **⬆** / **⬆** button to select the option which you want to adjust in the Settings menu.
3. Press "OK" button to enter.

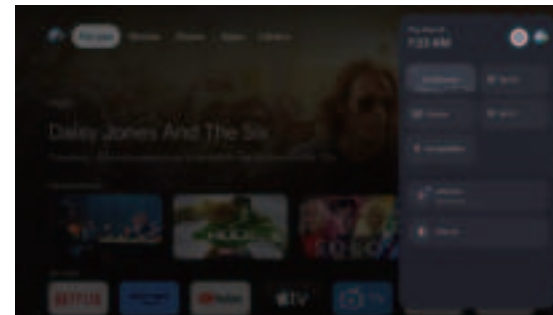

Channel and inputs

Display the scan sub-menu based on different channel installation modes

 1. Press **⬆** / **⬆** button to select "Channel Source" & "Inputs".
2. Press "OK" button to enter "Channels", then press **⬆** / **⬆** to choose Analog, antennato scan the channels.
3. Press **⬆** / **⬆** button to select "Inputs", press "OK" to enter "Inputs", then press **⬆** / **⬆** to choose HDMI1, HDMI2, HDMI3, HDMI4, Composite etc.

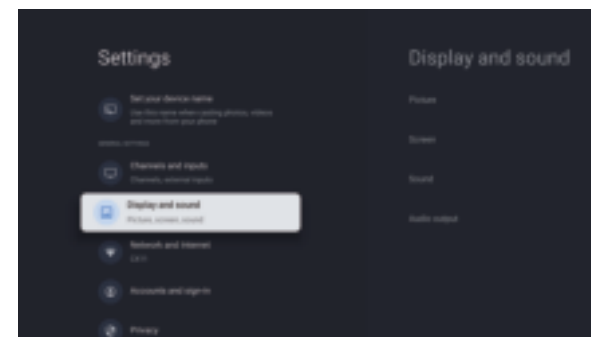

Network & Internet

 
Adjust all network setting and check connection if you have connection problems.

1. Press **▲/▼** button to select "Network & Internet" in the settings menu.
2. Press **▲/▼** button to select Wi-Fi/Add new network/Scanning always available/Proxy settings/IP settings.




System

1. Press **▲/▼** button select the options of About, Date & Time, Timer, Language, Inputs, Picture, Sound, Google Assistant, Reset and others.
2. Press "OK" to jump to the corresponding sub-option.

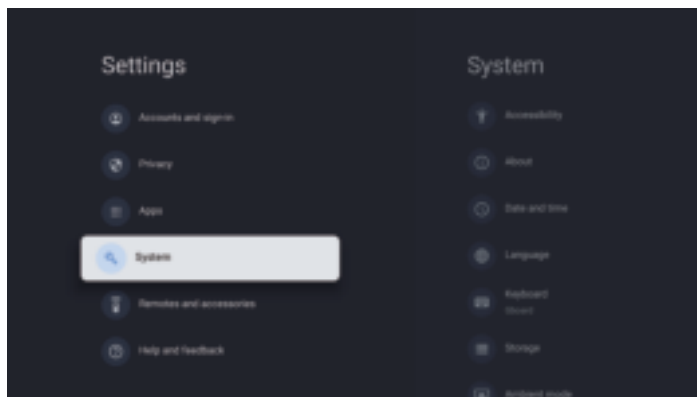

About

 
1. Press **▲/▼** button to check additional information such as System update, Device name, Restart, Status, and more.
2. Press **←** button to return to the previous menu.
3. Press **←** button to exit the menu.

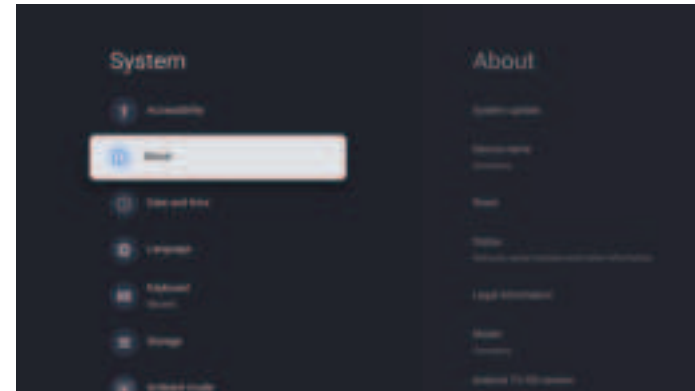

The above pictures are for reference only, please refer to the product for details.

Factory Reset

 
If Factory reset is selected, it will erase all data from your device's internal storage, including your Google account, system and apps data and settings, and downloaded apps.

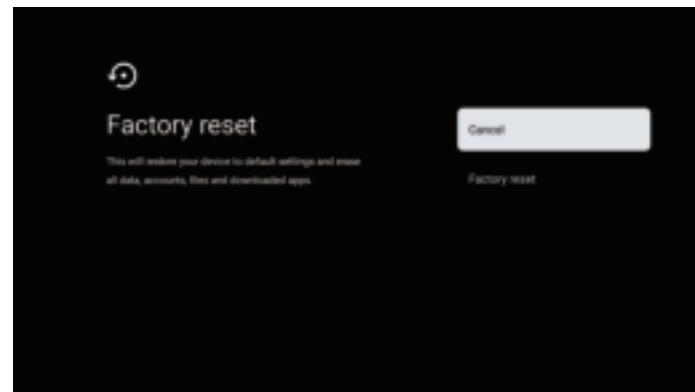

4. TV SOURCE SETTING


To enter TV source in Homepage

 1. Press  button to select input source.
2. Press  button, then select "Channels" and select "New Channels available" to enter

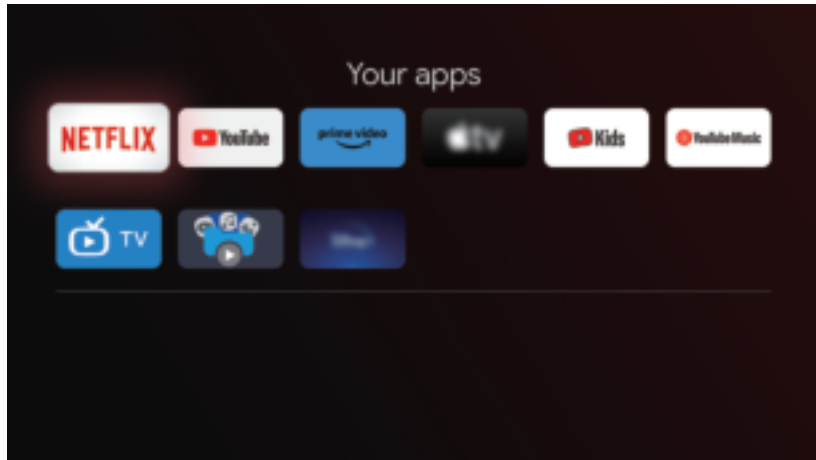


5. Accounts & sign-in

 
To have access and to download applications, you must sign in with a Google Account.

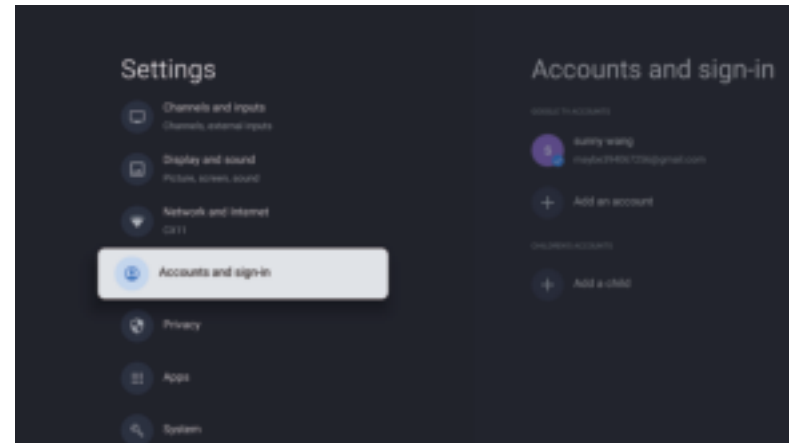

 Once you open Google Play, you will be promoted to sign in or create a new account.

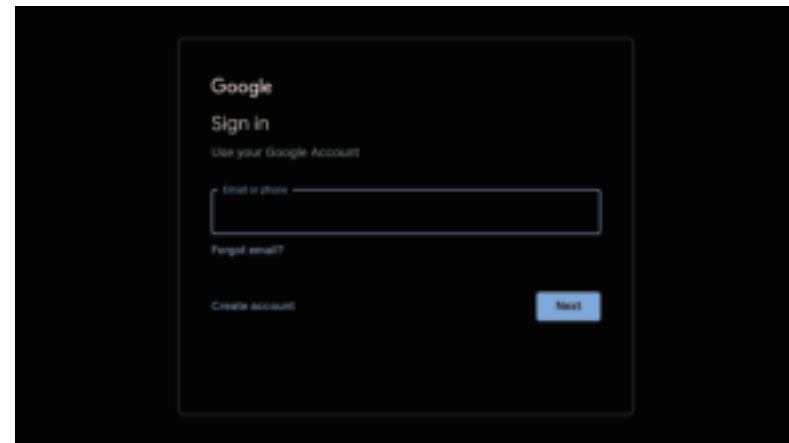

 Once you have signed in, you will be brought to the below page, scroll through the list of applications available for download or go to the search button, and search via entering text or by asking Google Assistant on your voice remote.

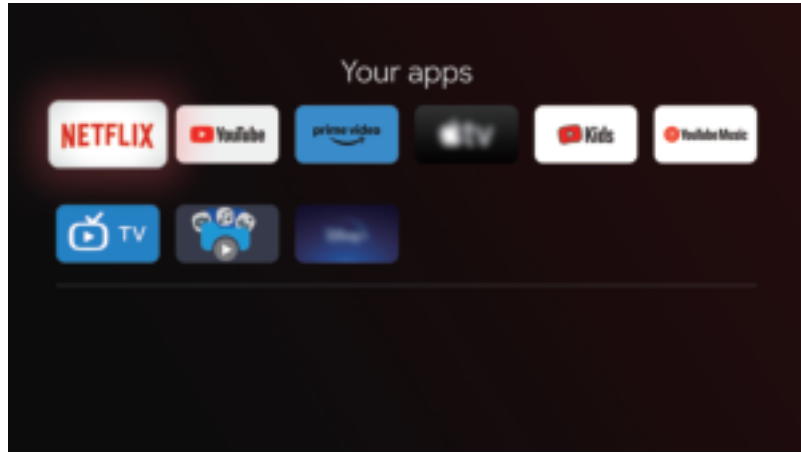

The above pictures are for reference only, please refer to the product for details.

 
How to Sleep TV Screen

Menu -> Settings -> Device Preferences -> Power -> Off


Menu




Power

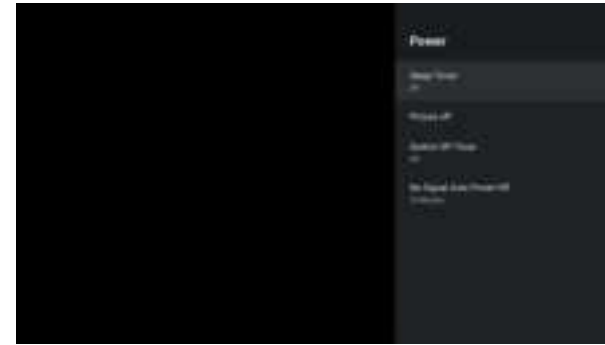


Settings

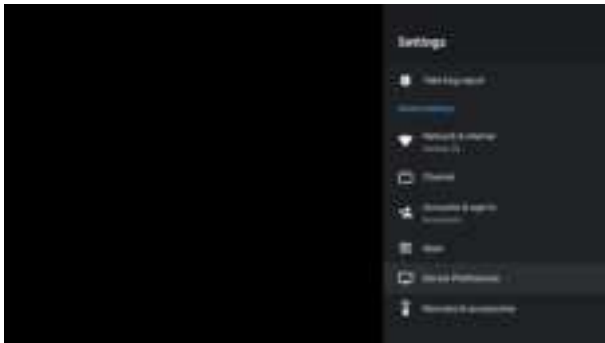 

Off

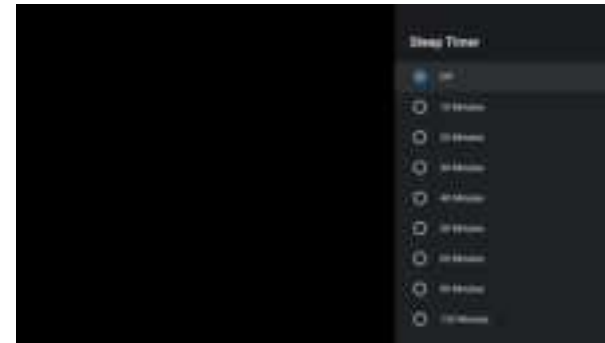 

Device Preferences

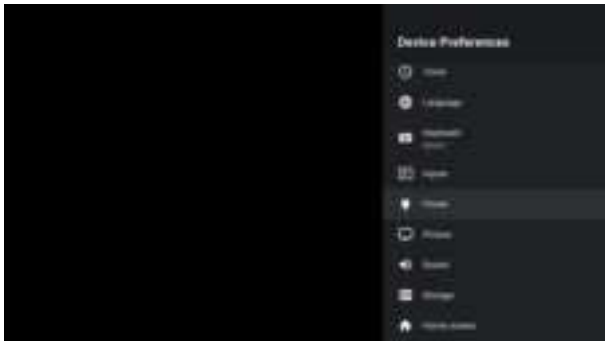 

Audio

Speakers 2 x 15W

Connectivity

Ethernet (RJ45) Yes
HDMI 2.0
HDMI-ARC Yes | HDMI 3
HDMI-CEC Yes | HDMI 1 2 3 4
USB 2 x USB 2.0, 1 x USB 3.0
Wi-Fi IEEE 802.11 a/b/g/n/ac

Dimensions

Distance Between Legs 406 mm
Without Stand 1227.8 x 38.9 x 702.3 mm
With Stand 1227.8 x 233.1 x 750.3 mm
VESA Wall Mount Pattern 300 x 300
Weight 30.55 kg

Display

Colours 1.07G
Computer Supported Resolutions 640×360, 853×480, 1024×576, 1280×720,
1366×768, 3840×2160 (@120Hz)
Contrast Ratio 150000:1
Native Aspect Ratio 16:9
Refresh Rate 120Hz
Resolution 3840 x 2160
Response Time 0.1 ms
Size 55”
Viewing Angle 120°/120°/120°/120°

Features

EPG Yes
HDCP Yes | 2.0
TV Resolution UHD
Browser No

USB Media Playback

Yes

USB Media Playback Formats

JPG, JPEG, PNG, BMP, MP3, DD, DD+,
AAC, MPG, MPEG4, H.264, 2160p30

Inputs

Composite (AV) 1
HDMI 4

Outputs

3.5mm Stereo Audio 1
Optical Audio Out 1

Performance

CPU CA75*2@1.3GHz+A55*2@1.15GHz
GPU BXE4-32MC1@700Mhz
OS Android 11.0
RAM 3 GB
Storage Capacity 32 GB

Power

Average Consumption 260 W
Energy Consumption 422 kWh per year
Energy Rating 4 Star

Tuning And Signal

Tuner Type DVB-T2

Note:

- Design and specifications are subject to change without notice.
- Weight and dimension shown are approximate.

Common fixes

Many minor issues can be resolved by hard resetting, or power cycling the unit or upgrading the firmware.

To perform a hard reset, or power cycle, please use the following steps.

- Unplug it from the main power socket and leave it for 10-15 minutes.
- Press and hold the power button on the TV for 5 seconds.
- Connect the TV back to the power and turn it on.

Poor picture and sound quality

- Try a different channel
- Adjust the antenna
- Check all connections

No picture or sound in TV status

- Try another channel
- Press the TV/AV button
- Make sure TV is plugged in
- Check the antenna connection

No sound or sound is too low at maximum volume

- Check the volume settings on any external speakers connected to your television
- Adjust the TV volume accordingly
- Check another channel or input
- Check that MUTE hasn't been turned on

Picture rolls vertically

- Check all connections

No colour, wrong colour or tints

- Make sure the program itself is broadcast in colour
- Select the picture menu, then adjust the colour and tint submenus

Blurred or snowy picture, distorted sound

- Check direction, location and connections to your antenna
- Issues may be caused by the use of an indoor antenna (poor signal)

Remote control malfunctions

- Replace remote control batteries
- Check battery terminals
- Remote is out of range, move closer to TV
- Remove any obstructions between remote and IR sensor of TV
- Make sure the power cord to your TV is plugged in and turned on

Image is not centred on the screen

- Adjust the horizontal and vertical position

"No Signal" on HDMI source

- Test the device with a different HDMI cable
- Plug the device into another HDMI port
- Try a different device connected to the same cable and port
- Perform a factory reset on your TV

Care & maintenance

Unplug the television from the power supply before cleaning. Do not use any liquid cleaners or harsh chemicals. Always use a soft, damp cloth.

Cleaning the screen

Wet a soft cloth in a mixture of lukewarm water and a little fabric softener or dish washing detergent. Wring the cloth until it's almost dry, and then use it to wipe the screen.

Make sure the excess water is off the screen, and then let it air-dry before you turn on your TV.

Cleaning the casing

To remove dirt or dust, wipe the TV casing with a soft, dry, lint-free cloth. Please be sure not to use a wet cloth.

For our full TV troubleshooting guide, head online to help.kogan.com