

Bluetooth Speaker



USER
MANUAL

 For use with
Enabled devices

YOUR PRODUCT

Thank you for purchasing and using our wireless bluetooth speaker. This productcan provide high quality listening and enjoyment for moible phone, computer and multimedia. Before using this product, carefully read this manual to correctly manipulate and play its best performance.

PACKAGE CONTENTS

- BLUETOOTH SPEAKER X1
- Charging Cable X1
- User Manual X1

PAIRING YOUR PRODUCT

- 1.Place device within 10 m of bluetooth enabled device.

- 2.Press the ON/OFF button to turn on the speaker. You will hear a “beep” sound. The speker body will light up, indicating that it is ready to pair.
- 3.Follow the instructions of your device to search for the device.
- 4.The bluetooth pairing name is “BT-SPEKER”.
- 5. LED lights will flash according to music.

BATTERY CAUTION

The battery used in this device may present a risk of fire, explosion or chemical burn if used incorrectly. Never use or charge the battery if it appears to be leaking, discolored, deformed, or in any way abnormal. Never dissassemble the unit or attempt to remove the battery as that could cause leakage of alkaline solution or other electrolytic substance. Always confirm that the temperature is 5 degrees Celsius before you change the battery. Never expose the battery to any liquid. Never expose the battery to excessive heat such as direct sunlight or fire. Never use the battery pack in an unventilated vehicle where excessive internal temperatures may be encountered. Always keep the battery out of reach of infants and small children.

BATTERY DISPOSAL

Please do not attempt to change the battery yourself. If the battery has died and you do not want us to replace your battery, you should follow the disposal instructions listed here. Never dispose of used batteries/ electronics with ordinary solid wastes. Always dispose of used batteries/ electronics in accordance with the prevailing community regulations that apply to the disposal of batteries/electronics. If there are no local

regulations concerning batteries/electronics disposal, please dipose of the device in a waste bin for electronic devices. Many electronics retailers now recycle batteries and other electronic components at no charge.

INSTRUCTIONS

Please ensure that your device(Mobile Phone, Tablet or other devices) is paired with the Wireless Speaker to stream music wirelessly. Once it is paired, play music from your device.

LIMITED LIFETIME WARRANTY

Our product is warranted for a limited lifetime warranty from the date of purchase.The warranty is provided on all material defects and workmanship.Guarentee of 24 months does not apply to decrease in the accumulators effective capacity caused by its use or age. Effective capacity gradually decreases depending on the method of use of the accumulator. **WE RESERVE THE RIGHT TO CHANGE TECHNICAL SPECIFICATIONS.**

Tip: Must choose the formal manufacturer certified charger, output voltage of 5v. If the product is not in use for long time, please charge it.

SPECIFICATIONS

Wireless Versions / Wireless Distance	5.0+ EDR / up to 10 metres
Output Power / Horn Type	1 x 3 Watts / 4 Ω 40mm
Unit Size	80.5*80.5*132mm
Power Input	DC 5V (1.0A)
Charging Time	About 1 hours
Play Time	Up to 2-3hours
Built-in Rechargeable Battery	3.7V / 400Mah
Multiple Functions	Wireless Play / LED

FCC Warning Statement
Changes or modifications not expressly approved by the party responsible for compliance could void the user’ s authority to operate the equipment. This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:
- - Reorient or relocate the receiving antenna.
- - Increase the separation between the equipment and receiver.
- - Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- - Consult the dealer or an experienced radio/TV technician for help.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

The device has been evaluated to meet general RF exposure requirement.