

LA CROSSE[®]
TECHNOLOGY


ATOMIC DIGITAL WALL CLOCK



SETUP GUIDE

MODEL: 513-88907



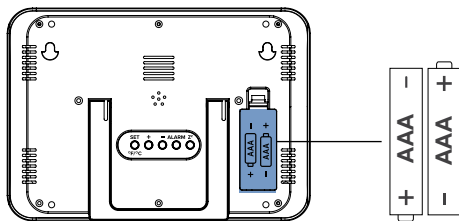

Buttons



Initial Setup

1. Insert 2 AAA batteries into your clock.
2. Hold the **SET °F/°C** button to enter the Settings Menu.
3. Use the **+/-** buttons to adjust values, holding to change quickly.
4. Press the **SET °F/°C** button to confirm settings and move to the next item in the menu.

Settings Menu Order:

- WWVB Atomic Time (ON/OFF)
- Time Zone - 7 time zones
- DST (Daylight Saving Time ON/OFF)
- Hour
- Minutes
- Year
- Month
- Date

Time Zones

AST = Atlantic
 EST = Eastern
 CST = Central
 MST = Mountain
 PST = Pacific
 AKT = Alaska
 HAT = Hawaii

Atomic Time: The menu will skip the Time Zone and DST settings if Atomic Time is set to OFF.


DST: If your area follows Daylight Saving Time, leave this setting ON for automatic time changes.

Weekday: Your weekday will be set automatically when the Year, Month, and Date are set correctly.

Fahrenheit/Celsius Display

Press and release the **SET °F/°C** button to select Fahrenheit or Celsius Temperature Display.

Atomic Time


- The clock will automatically search for the Atomic Time Signal on powerup and at UTC 7:00, 8:00, 9:00, 10:00, and 11:00.
- The Atomic Time Signal Icon  will flash while searching and be solid when it has connected.
- From the normal time display, hold the **- (MINUS)** button to manually start or stop a search for the atomic time signal.
- For information about Atomic Time (WWVB) visit: bit.ly/atomic_time

Time Alarm

Set Alarm:

1. Hold the **ALARM** button to enter the Alarm Settings, “AL” will show.
2. Use the **+/-** buttons to adjust values, holding to change quickly.
3. Press the **ALARM** button to confirm the alarm hour, then minutes.

Activate/Deactivate Alarm:

1. From the normal time display, press the **ALARM** button to view your set alarm time.
2. While viewing the alarm time, press the **ALARM** button to activate or deactivate the time alarm, indicated by the Alarm Icon  when active.

Silence a Sounding Alarm:

Press any button except the **Zz** button to silence the alarm for 24 hours.

Snooze:

When the alarm sounds, press the **Zz** button to silence the alarm for 10 minutes. **Zz** will show on the display.

Note: The alarm will sound with increasing frequency for two minutes, then shut off automatically if not silenced.

Low Battery Indicator

When the Low Battery Indicator  shows, replace the clock's batteries.

Specifications

Time Digit Height: 2.09 in (5.31cm)

Alarm Sound: Up to 54dB

Alarm Duration: 2 Minutes

Snooze Duration: 10 Minutes

Indoor Temperature Range: +32°F to 122°F (0°C to 50°C)

Update Interval: About every 30 seconds

Power: 2 "AAA" (LR3, IEC) batteries (not included)

Battery Life: 12+ months

Dimensions: 7.8 in L x 1.06 in W x 5.47 in H
(19.80cm L x 2.70cm W x 13.90cm H)



We're Here to Help

If you require additional assistance, get in touch with our friendly customer support team based in La Crosse, WI.

Self Help: bit.ly/513-88907_support

Online: bit.ly/contact_techsupport

Phone: 1.608.782.1610

Our knowledgeable customer support team is available:
Mon-Fri 8am-6pm CST

Stay in Touch!

Ask questions, watch set up videos, and provide feedback on our social media outlets. Follow La Crosse Technology on Youtube, Facebook, and Instagram.



SCAN HERE
Additional Info
and Support ▾



Warranty & Patents

La Crosse Technology Ltd. provides a 1-year limited-time warranty on this product relating to manufacturing defects in materials & workmanship. Per the Song-Beverly Act, in the state of California, the warranty on this item becomes effective on the date of delivery.

La Crosse Technology, Ltd, 2830 S. 26th St., La Crosse, WI 54601

For Full Warranty Details, Visit: www.lacrossetechnology.com/pages/warranty

Patents: www.lacrossetechnology.com/pages/patents



WARNING: This product can expose you to chemicals including acrylonitrile, 1, 3-butadiene, and styrene, which are known to the State of California to cause cancer and birth defects or other reproductive harm.

For more information go to: www.P65Warnings.ca.gov

Care & Maintenance

When batteries of different brand or type are used together, or new and old batteries are used together, some batteries may be over-discharged due to a difference of voltage or capacity. This can result in venting, leakage, and rupture and may cause personal injury.

- Do Not Mix Old and New Batteries.
- Do Not Mix Alkaline, Standard, or Rechargeable Batteries.
- Always purchase the correct size and grade of battery most suitable for the intended use.
- Always replace the whole set of batteries at one time, do not mix old and new ones, or batteries of different types.
- Clean the battery contacts and also those of the device prior to battery installation.
- Ensure the batteries are installed correctly with regard to polarity (+ and -).
- Remove batteries from product during periods of non-use. Battery leakage can cause corrosion and damage to this product.
- Remove used batteries promptly.
- For recycling and disposal of batteries, and to protect the environment, please check the internet or your local phone directory for local recycling centers and/or follow local government regulations.

FCC Statement

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation.

This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference, and
- (2) This device must accept any interference received, including interference that may cause undesired operation.

Caution!

Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

All rights reserved. This manual may not be reproduced in any form, even in part, or duplicated or processed using electronic, mechanical or chemical process without the written permission of the publisher. This booklet may contain errors or misprints. The information it contains is regularly checked and corrections are included in subsequent editions. We disclaim any responsibility for any technical error or printing error, or their consequences. All trademarks and patents are recognized. The manufacturer is not responsible for any radio or TV interference caused by unauthorized changes or modifications to this equipment. Such changes or modifications could void the user authority to operate the equipment.