 


Mode Switch:
1. The top position [2.4G]
indicates 2.4G mode.
2. The middle position [B]
indicates wireless mode.
3. The bottom position [OFF]
indicates USB wired mode.

CAPS Lock Indicator

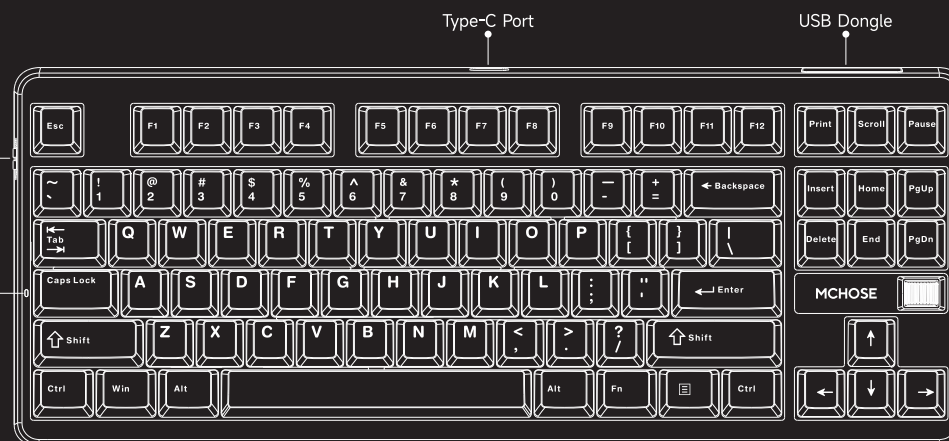

 
Multimedia Knob
Turn right for volume +;
turn left for volume -;
press to mute

MCHOSE G87 HANDY GUIDE

• System Mode Switch



• Lighting Adjustment

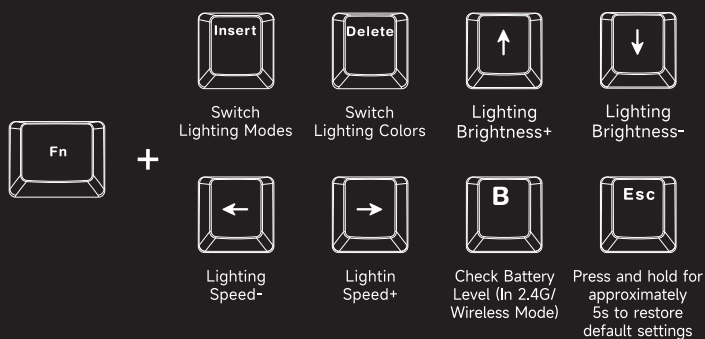


While charging, the [Esc] key will stay red. Once fully charged, the [Esc] key will return to its normal lighting effect.


• 2.4G Connection



 1. Switch to [2.4G] mode.



 2. Remove the USB dongle, as shown in the image above. Press down to open the metal cover and then remove the USB dongle.



3. Insert the USB dongle into the computer's USB port to start using.

• Wireless Connection



1. Switch to [B] mode.



2. Press [FN+!] to switch to Wireless 1. Press and hold until the [indicator light] flashes rapidly to enter pairing mode.



3. Search for the pairing name [MCHOSE G87 3.0] or [MCHOSE G87 5.0] and click to connect. Once connected, the indicator light will return to normal mode.

• Wired Connection



1. Switch to [OFF] mode.



2. Insert the Type-C end of the provided USB cable into the corresponding port on the keyboard.



3. Insert the USB end of the cable into the corresponding USB port on your computer to start using.