

Bluetooth®
Wireless Charging
Speaker




User Manual




K: 43-559-749 | T: 71-038-85
MODEL: EBAI-240026A

- Includes:
- ▶ Bluetooth® Wireless Charging Speaker
 - ▶ USB-A to USB-C Charging Cable
 - ▶ User Manual

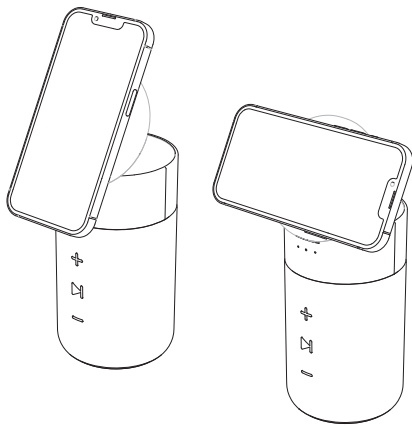

Function overview:

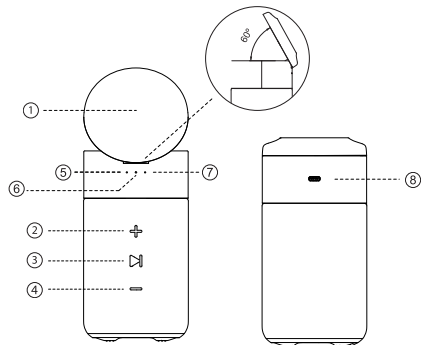

1. Wireless Charging Pad/Phone Holder
2. Volume Up/Next Song
3. Power ON/OFF
Play/Pause
Answer/End/Reject Call
4. Volume Down/Previous Song
5. Charging Indicator/Bluetooth Indicator
6. MIC
7. Wireless Charging Indicator
8. USB-C Input

How to use this speaker

Function Operation

Power ON/OFF Long press button 3 seconds **Play/Pause** Short press button

Previous Song Long press key for 3 seconds to skip the track **Next Song** Long press key for 3 seconds to skip the track.

Volume Down Short press key to decrease the volume **Volume Up** Short press key to increase the volume

Specifications:

- | | |
|---------------------------------------|--|
| Model no:
EBAI-240026A | USB-C input:
9V=3A |
| Version:
Bluetooth V5.3 | Battery capacity:
3.7V 1500mAh |
| Working distance:
10 Meters | Charge time:
Approx 3 hours |
| Output:
RMS 8W (THD≤10%) | Music time:
Approx 4 hours(80% volume) |

Magnetic mobile phone wireless charging output:
5W/7.5W(iphone)/10W(Samsung need with magnetic accessory)

*Please note that the wireless charging function can only be used when connected to the power supply

Power ON Button Function

- ▶ Press and hold button for 3 seconds to turn on the device.The blue indicator light on the left will first stay on constantly, and then start flashing rapidly. At this point, the device will automatically enter Bluetooth pairing mode. If no Bluetooth device is connected within 5 minutes, the machine will automatically shut down with a prompt tone.

Short press	Play/pause music while playing music.
Short press	Answer/end the call when a call comes in.
Long press	Reject the call during a call.

Bluetooth Mode

- ▶ Once the speaker is powered on,it will automatically enter Bluetooth mode in several seconds,and blue indicator light on the left will flash.
- ▶ Search for "anko43559749" (Bluetooth name) and connect from the Bluetooth menu on the source device that has Bluetooth turned on.
- ▶ Once the speaker is successfully paired and connected,the indicator light on the left will stay on in blue.
- ▶ When the device is turned on again,it will automatically reconnect to your media device via Bluetooth as it did last time.

Phone Holder

- ▶ The charging pad can be used as a phone holder and can be adjusted to a suitable angle (up to about 60 degrees). After a magnetic phone is placed on the charging pad, the desired display angle of the phone can also be adjusted.

TWS Function

1.Connect pairing:

- ▶ Double-click button on either speaker when both speakers are powered on to initiate TWS pairing. The speakers will complete the pairing within 15 seconds. Once the TWS connection is established, the indicator light on the left of the host speaker will flash blue, while the indicator light on the left of the secondary speaker will turn off.
- ▶ When two speakers have successfully completed TWS pairing, you can search for "anko43559749" in the source device that has Bluetooth turned on to establish the Bluetooth connection same as Bluetooth Mode operation.

- ▶ All actions performed on one speaker are automatically applied to the other speaker.These include switching songs,adjusting volume, Play/Pause and power on/off;You can also control these functions from the source device.

2.Disconnect pairing:

- *Double-click button on either speaker to disconnect TWS.The host speaker will remain Bluetooth connected and continues to work; The secondary speaker will disconnect from Bluetooth and enter pairing mode.

3.Re-connection after disconnection:

- *Double-click button on the disconnected speaker to re-enter TWS pairing and it will re-connect to the other speaker automatically (both speakers should be in Bluetooth mode).

Note:When two speakers have been connected via TWS during their first use, they will automatically connect to each other whenever TWS functionality is used subsequently.

Magnetic Phone Wireless Charger

- 1.After connecting the power supply,the indicator light on both the left and right sides will stay on in red.(If Bluetooth is connected,the indicator light on the left will stay on in blue and red.)
- 2.Place your wireless charging enabled device on the charging pad to start charging.
- 3.When place the mobile phone,the indicator light on the right will stay on in blue.
- 4.If there is metal foreign object placed on the charging pad,the indicator light on the right will flash red.At this moment, the wireless charging function stops,and the foreign matter needs to be taken away.

Charging

- ▶ This Speaker is powered by rechargeable Lithium battery.Please use provided USB-C cable for charging(Plug the USB-C end into the device's charging port and the other USB-A end into a charger with a minimum output of 9V/3A).The indicator light on the left will turn red while charging and will turn off when fully charged.

Operating Environment & Storage Environment

- ▶ Operating environment
Temperature: -5℃~45℃
- ▶ Storage environment
Temperature: -20℃~60℃

The Bluetooth® word mark and logos are registered trademarks owned by Bluetooth® SIG, Inc., and any use of such marks by KMAAT AUSTRALIA is under licence.



12 month warranty

Thank you for your purchase.

Your new product is warrantied to be free from defects in materials and workmanship for the period stated above, from the date of purchase, provided that the product is used in accordance with accompanying recommendations or instructions where provided. This warranty is in addition to your rights under the Australian Consumer Law. For New Zealand customers, this warranty is in addition to statutory rights observed under New Zealand legislation.

We will provide you with your choice of a refund, repair (where possible) or exchange (availability dependent) for this product if it becomes defective within the warranty period. The business will bear the reasonable expense of claiming the warranty. This warranty will no longer apply where the defect is a result of alteration, accident, misuse, abuse or neglect.

Please retain your receipt as proof of purchase and contact our Customer Service Centre as listed below, for the entity you purchased this product from, for any difficulties with your product. Warranty claims and claims for expense incurred in returning this product can be addressed to the respective Customer Service Centre.

Our goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure.

Statement

- This product shall not be connected to power supply source exceeding PS1 (5V d.c. 1A).
- Battery cannot be subjected to high or low extreme temperatures, low air pressure at high altitude during use, storage or transportation.
- Disposal of a battery into fire or a hot oven, or mechanically crushing or cutting of a battery, that can result in an explosion.
- Leaving a battery in an extremely high temperature surrounding environment that can result in an explosion or the leakage of flammable liquid or gas.
- A battery subjected to extremely low air pressure that may result in an explosion or the leakage of flammable liquid or gas.
- The apparatus is only suitable for mounting at height < 2m.
- The marking located on the bottom of the apparatus.

Contact for Kmart purchases	Contact for Target purchases
Kmart Australia Ltd. C/- Customer Service Centre 690 Springvale Road, Melbourne Vic 3170 Customer Service: 1800 124 125 (Australia) or 0800 945 995 (New Zealand) or via Customer Help at kmart.com.au	Target Australia Pty Ltd C/- Customer Service Centre 2 Kendall Street, Williams Landing, Vic. 3207 Customer Service: 1300 753 567 or via Customer Help at target.com.au/help/contact-us