

ELECTRONIC KITCHEN SCALES

INSTRUCTIONS FOR USE



 
ISO 9001 CERTIFIED BY SGS

EK-67 SERIES

■ MAIN FUNCTION

1. With high precision load cell
2. A good assistant for baking. Weighing with 5 gears, adding up and weight unit conversion functions.
3. Battery power low and over loaded warning function.
4. Zero function.
5. Auto off function

■ TO INSTALL OR REPLACE BATTERY

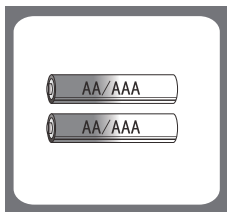

2 x 1.5V(AA/AAA)batteries

Open the battery cover. Install new batteries by putting one side of the battery down first and pressing down the other side.
(Please observe the polarity)

■ LCD INCONS INDICATION



Weight mode



Milk mode



Water mode

LCD display differs from one to another, so the above picture is indicative only.

■ BUTTONS FUNCTION



 
Press button

Switch on, switch off (long time press)/
zero (weight function when switched on)/
unit convert (unit conversion function when switched on)



Rotary switch button

Weigh with 5 gears + unit conversion/weight adding up

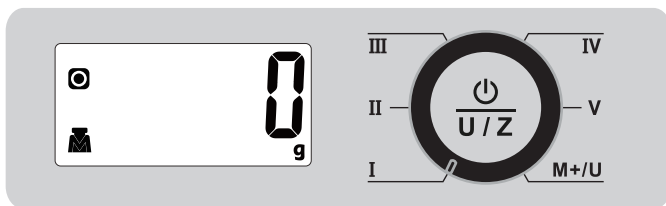

1. Twist the rotary switch button to weigh with 5 gears: **I II III IV V**
It can weigh separately with each gear.

2. Adding up/unit conversion: **M+/U**



Twist to this symbol, it shows the 5 gears adding up weight.

 
Twist to this symbol and press $\frac{\text{U}}{\text{U/Z}}$ to convert units.

 
Note: Scale can't weigh when twisted to this symbol.

The unit system of scale depends on scale destination or the requirement of distributor.

 
■ TO WEIGHT / ADD UP

1. Place the scale on solid and flat surface. Place bowl(if used) on scale.
2. Press  to switch on. Twist the rotary button to **M+/U** after LCD shows zero. Then press  to convert units.
3. Twist to gear **I** . Place article and LCD shows its weight.
4. When the weight reading is stable, twist to **II** to weigh second article.
In the same way, twist to **III IV V** one by one to weigh. Finally twist to **M+/U** to check adding up total weight for all articles.

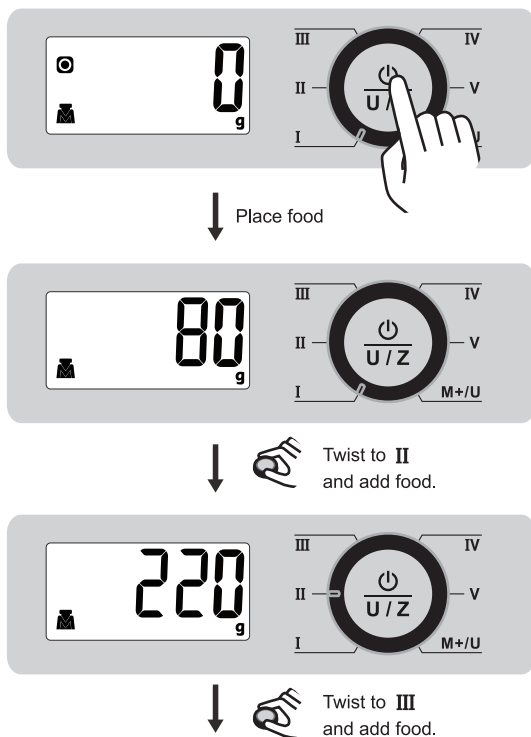 


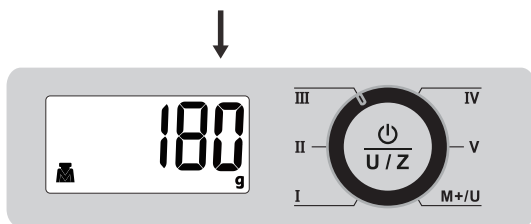


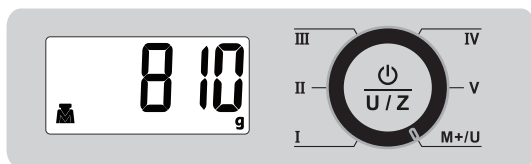 
↓  Twist to **IV**
and add food.

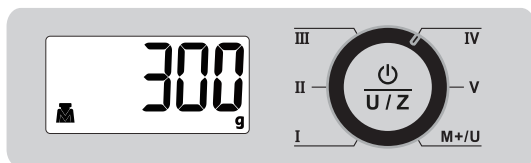

↓  Twist to **V**
and add food.

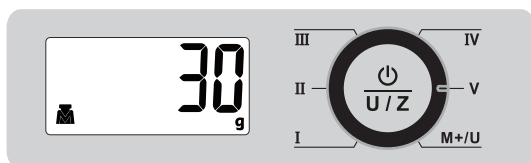 


↓  Twist to **M+/U** and
check the total weight.




- Note: 1. After being adding up, the operated gear can't be weighed once more. All weigh function can be renewed by pressing the zero button.
2. Total reading can be recorded when weight in each gear is stable, but it'll be lost if zero function works.


■ AUTO OFF (BATTERY POWER SAVING MODE)

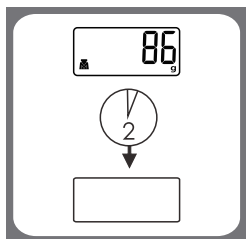


If there is no operation or weight changing in two minutes, scale will be auto off.

 ■ MANUALLY SHUT OFF

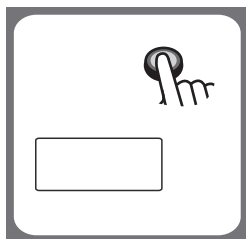

To maximize battery life, always long press  to turn off the scale after using.

 ■ WARNING

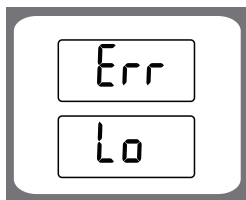

OVER LOADING WARNING

When LCD shows Err, it is over loaded(Max capacity is shown on product), please take off the object to prevent damage to the scale.

LOW POWER WARNING

When LCD shows Lo, battery power is low, please change new battery(ies).



ADVICE FOR USE & CARE

1. Clean the scale with slightly damp cloth. DO NOT immerse the scale in water or use chemical/corrosive cleaner. Keep the scale in cool dry place.
2. All plastics parts should be cleaned immediately after contact with fats, spices, vinegar and strongly flavored/colored foods. (Avoid contact with acids citrus juice.)
3. Always use the scale on a solid, flat surface, keep the scale unmoved when weighing.
4. This product is precision instrument, please handle with care; Do not strike, shake or drop the scale.
5. Keep away from high temperature, do not strip the scale arbitrarily.
6. If fail to turn on, please check whether battery(ies) are installed or battery power is low.
7. Don't abandon as family garbage, please send this scale to electronic equipment recycle station.
8. Designed for family use only, not for commercial use.

FC CE RoHS  

MADE IN CHINA