

Warning ⚠️

- 1) Keep combustible materials such as furniture, paper, clothes, and curtains at least 3 feet (0.9 meters) away from the heater's front, sides, and rear.
- 2) Do not place the heater near a bed, as falling objects like pillows or may ignite.
- 3) Always unplug the heater when not in use.
- 4) Plug heaters directly into a wall outlet or receptacle. Do not use extension cords or relocatable power taps (power strips).
- 5) Do not use the heater if the cord or plug is damaged, if the heater malfunctions, or if it has been dropped or damaged. Discard or repair it at an authorized service facility.
- 6) Do not run the power cord under carpets or rugs. Keep it away from traffic areas and avoid covering it with any material that could trap heat or cause tripping.

Product Specification	
Product name	Electric Space Heater
Product model	K-40
Rated voltage	125V
Rated power	500W
Control mode	Touch Control
Product size	4.78*5.74*3.54inch




Made in China

K40 Desktop Electric Space Heaters



Before use, please read this manual and keep it safe

Product Manual

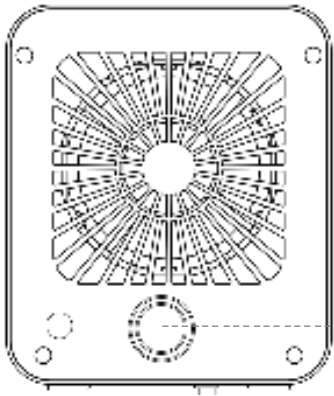

Two Speeds:
250W & 500W

Functional Operation

- 1. Place the heater in a horizontal position.
- 2. Connect the power and turn on the switch on the back to use it normally.
- 3. The first speed is 250W, and the second speed is 500W.

Product Accessories

- 1. K-40 desktop warmer *1
- 2. Type-c charging cable *1
- 3. Instruction manual *1

Notes:

- 1. Do not place the heater directly next to the power socket, and do not touch the heating elements inside the heater with your hands to avoid danger.
- 2. When heating the heater, do not cover it, as covering it will cause the heater to overheat. it is not allowed to use a heater in any place with water or relatively humid conditions, such as sinks, bathtubs, swimming pools, etc. If water drips onto the running heater, it may cause the machine to short circuit or leak electricity.
- 3. The heater should be stored in a safe place away from flammable materials, and the minimum distance should not be less than 0.5 meters.
- 4. Do not use in areas filled with dust, gasoline, paint thinner, and other flammable and explosive hazardous materials to prevent danger.
- 5. Do not allow infants and young children to operate this product alone, When using a heater in areas where children and animal soften appear, special attention should be paid to safety.
- 6. Do not use the heater near curtains, door curtains, and textiles to avoid fires.
- 7. Do not directly unplug the power cord. After turning off the machine, wait for it to cool down before unplugging the power. Please unplug the power when not using the heater.