

S46 TWS Earbuds




User Manual

Specifications:

Bluetooth Version:	V5.3
Bluetooth Range:	33 feet without obstacle
Support Profile:	HSP/HFP/A2DP/AVRCP
Earbud Battery:	30mAh
Charging Case Battery:	300mAh
Charge Time:	1-1.5 hour
Case Charging port:	Type-C

Diagram:

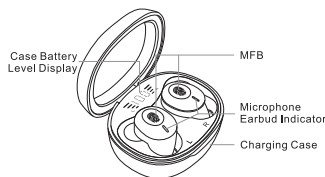

- 1 -

Power On:

2 WAYS:
1. Open the case, they will power on automatically.



2. In power off state, you can touch and hold MFB for 3 seconds to power on.



Earbud indicator turn blue and then flash blue and red.

Power Off:

2 WAYS:
1. When the case has power, put the earbuds into the case, and close the case, they will power off automatically and start charging.

- 2 -



After you close the case, case battery level display is always on for 10 seconds and then off.

2. In power on state, you can touch and hold MFB for 5 seconds to power off. (If the 2 earbuds are paired, power off one of the earbuds, the 2 will power off together)



Pairing:

1. Earbuds pairing
The earbuds will enter pairing mode and pair once you open the case



- 3 -

One indicator flash blue 1 time every 5 seconds, another one flash blue and red means 2 earbuds are paired.

2. Earbuds pair with phone
Turn on the Bluetooth of your phone, search for "S46" and connect.



Earbuds indicator both flash blue 1 time every 5 seconds means paired with phone.

Note: Single earbud use is ok, just take out one earbud to pair with your phone.

3. Open your phone music player and hit play, you can enjoy music wirelessly.



- 4 -

Auto Power Off:

The earbuds will power off automatically if not paired with phone in 3 minutes.

Auto-connect:

The earbuds will auto connect the last paired phone when turned on next time, (Turn on the Bluetooth of your phone first, and then power on the earbuds.)

Clear pairing history:

In power on state, double touch the MFB then touch and hold until they power off with red lights on and go off, you need to put the earbuds back into the case and close it, turn off the phone Bluetooth, then open the case and phone Bluetooth to pair again.

Button operation:

Touch and hold for 2 seconds: Switch Previous music
Touch 2 times: Switch Next music
Touch 2 times: Redial last call



Touch 1 time: Play/Pause music, Answer/Hang up phone calls
Touch 3 times: Activate phone voice control
Touch and hold for 2 seconds: Reject phone calls/Switch phone voice between phone and earbuds

- 5 -

Low Power Warning:

Earbud: The earbud voice prompt 1 time every 2 minutes.
Case: The case display won't show up after close the case.

Charging:

Earbuds charging: When the case has power, put the earbuds into the case and close the case, they will power off and charge automatically.



After you close the case, case battery level display flashes 15s and then go off when earbuds are charging.

Case charging: Use type-c cable to charge the case with DC5V power supply only. (Do not use power supply higher than 5V)



The case battery level display flash when charging, show 100% after charging finished.

- 6 -

Earbud Indicator:

Earbuds Pairing:	Flash blue and red.
Earbuds Connected:	One indicator flash blue 1 time every 5 seconds, another one flash blue and red means 2 earbuds are paired.
Phone Connected:	Both indicator flash blue 1 time every 5 seconds.

Packing Include:

Case *1
Earbud *2
Extra Ear Caps *2 pairs
Type-C Cable *1
User Manual *1

FAQ:

Q1: The product can't pair with my phone.

1. Please make sure the earbuds are in pairing mode and not paired by other device, the indicator flashes red and blue means it's in pairing mode.
2. Clear the pairing history of the product. Power on and pair again.
3. Clear the pairing history of your phone. Turn off the Bluetooth then turn on, and pair again.

Q2: The Bluetooth range or the sound quality is not good.

1. Bluetooth signal can be blocked by surrounding objects thus affect the audio quality, if no obstacle between the product and your phone, the range and sound quality will be better.

- 7 -

2. Turn off the unnecessary wireless device around.
3. Turn off your phone's unnecessary APPs running in the background.

Q3: Why there is a delay?

There is a data transmission process from your phone to the product, so sometimes you can feel delay. It's a common issue for all the Bluetooth devices, and Bluetooth V5.3 already made it better than the old versions.

Q4: Why the case can't charge the earbuds, or the earbuds won't power off after put back in case?

1. If the case has no power, then above issues happen, please charge the case, and it will turn normal after the case has power.
2. Please make sure you didn't put the right & left earbud in the opposite place, and the magnet contacts well.
3. If the earbuds come with charging insulation sticker, please make sure you removed them before charge.

Q5: Why people can't hear me in the call?

Please make sure you wear 2 earbuds when making calls.

Q6: Only 1 earbud pair with my phone?

You need to let the 2 earbuds pair first, one indicator flash blue and another one flash red and blue means 2 earbuds are paired, and then turn on phone Bluetooth to pair with the earbuds.

- 8 -

FCC Compliance Statement:

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation.

If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

RF Exposure Compliance Statement:

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. This transmitter must not be co-located or operating in conjunction with any other antenna or transmitter.

- 9 -

CORRECT DISPOSAL OF THIS PRODUCT



(Waste Electrical & Electronic Equipment)

This marking shown on the product or its literature, indicates that it should not be disposed with other household wastes at the end of its working life. To prevent possible harm to the environment or human health from uncontrolled waste disposal, please separate this from other types of wastes and recycle it responsibly to promote the sustainable reuse of material resources. Household user should contact either the retailer where they purchased this product or their local government office for details of where and how they can take this item for environmentally safe recycling. Business users should contact their supplier and check the terms and conditions of the purchase contract. This product should not be mixed with other commercial wastes for disposal.

- 10 -