 


EDWARD ENTERTAINMENT UNIT

 
SLEDWAETUBA & SLEDWAETUWA

COMPONENTS

Lay all components out on a clean floor and ensure all parts are included. If any pieces are missing, check all packaging thoroughly, then contact **help.Kogan.com** for assistance.

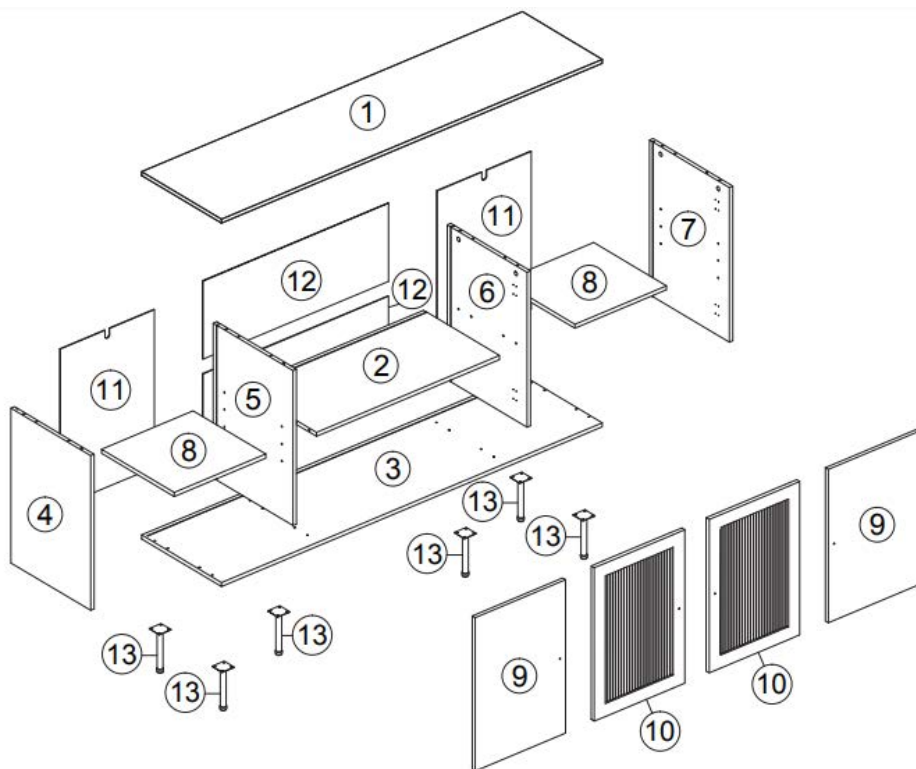

Hardware



A (x12)



 
B (x12)



C $\Phi 6 \times 30 \text{mm}$ (x20)



D $\Phi 3 \times 14 \text{mm}$ (x14)

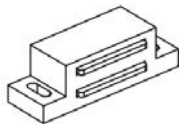

E (x2)



F (x2)



G $\Phi 4 \times 40 \text{mm}$ (x10)



H $\Phi 4 \times 14 \text{mm}$ (x26)



I $\Phi 3.5 \times 12 \text{mm}$ (x48)



 
J (x8)



 
K (x4)



L $M 4 \times 22 \text{mm}$ (x4)



M (x10)



N (x2)



O (x2)



 

 
P $\Phi 2.5 \times 12 \text{mm}$ (x2)

 
 
 


Q (x2)



ASSEMBLY

 
 
Step 1:

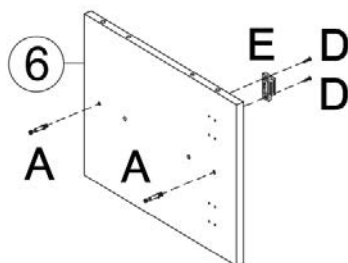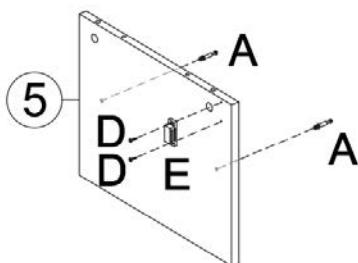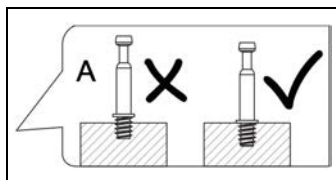		
A (x4)	D (x4)	E (x2)





 
 
Step 2:

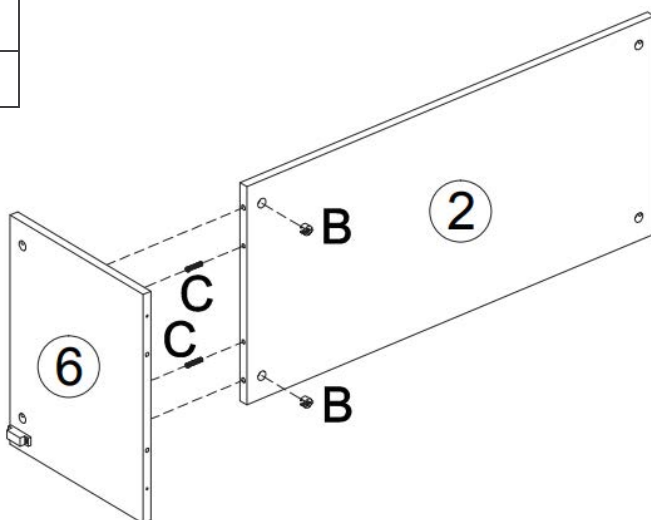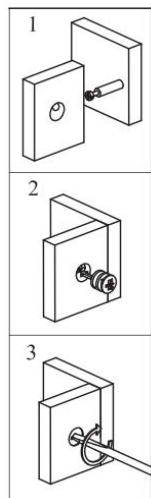	
B (x2)	C (x2)

 

 


 
Step 3:

	
B (x2)	C (x2)

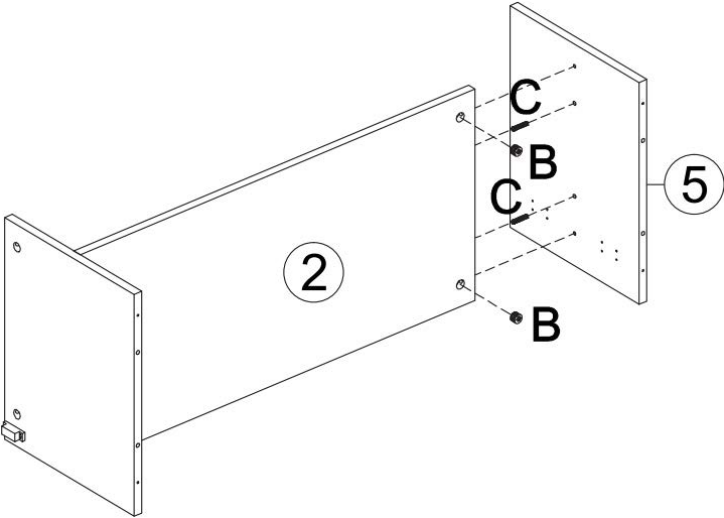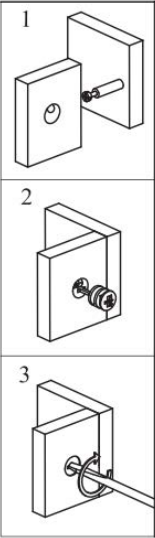



 
Step 4:

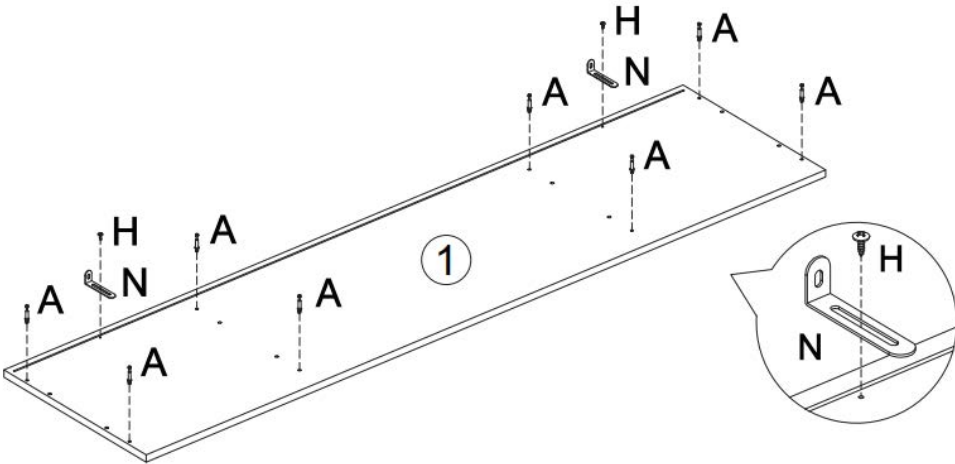		
A (x8)	H (x2)	N (x2)





 
Step 5:

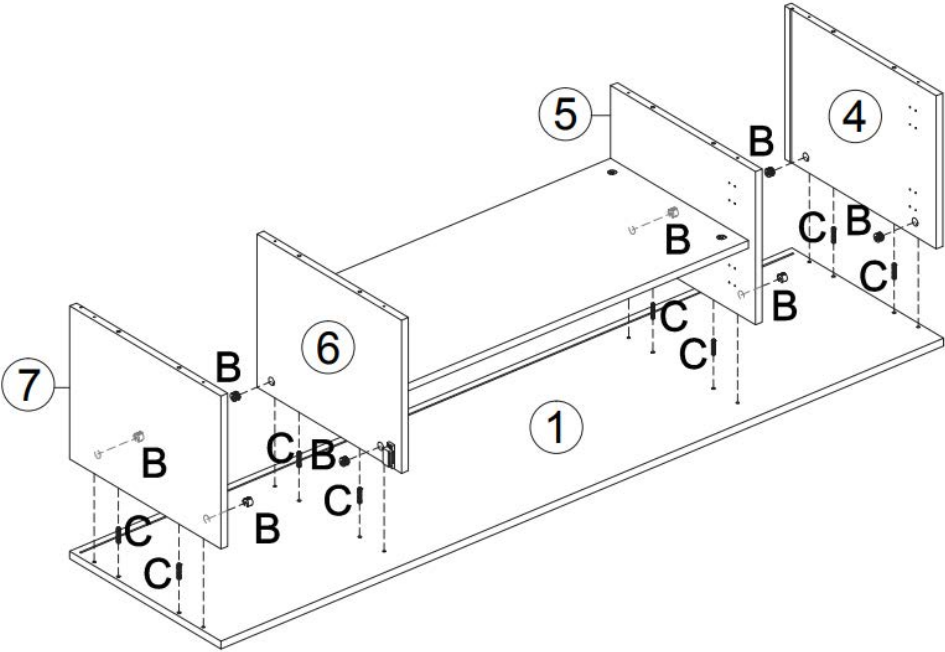	
B (x8)	C (x8)

 
 


Step 6:

 
	
C (x8)	G (x8)

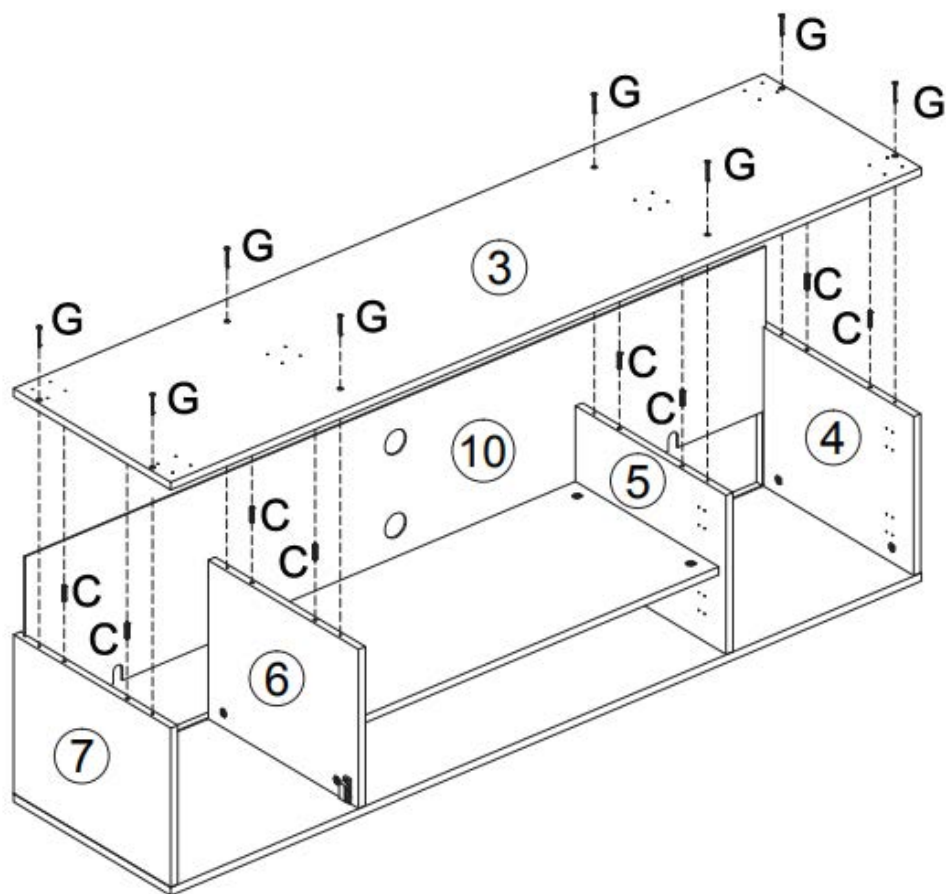



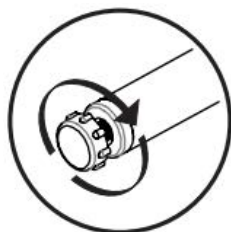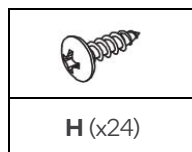

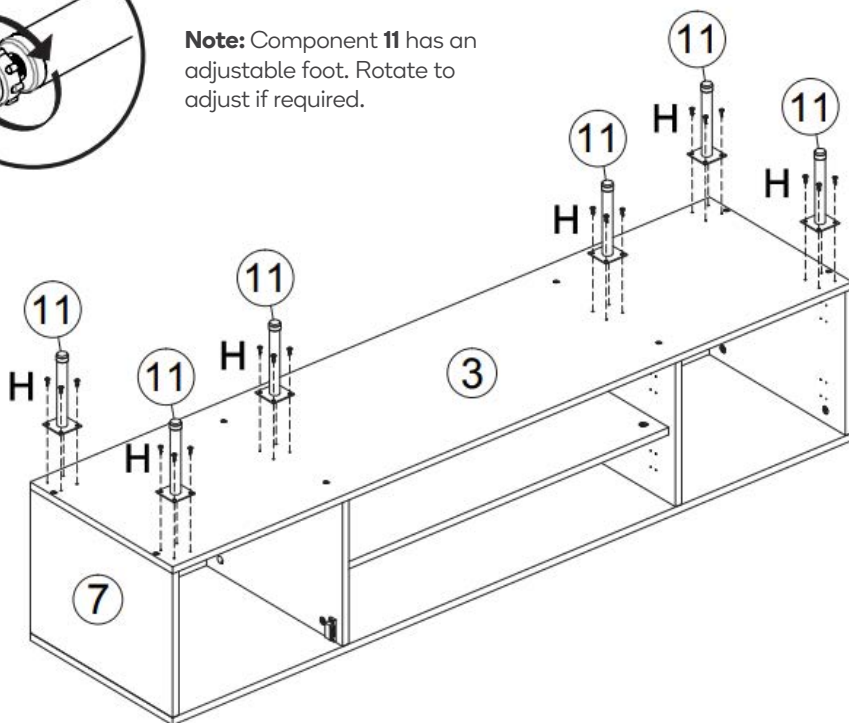


Step 7:

 
 


Note: Component **11** has an adjustable foot. Rotate to adjust if required.



Step 8: Repeat this step for remaining doors

 
 
						
I (x16)	J (x8)	K (x4)	L (x4)	P (x2)	Q (x2)	F (x2)

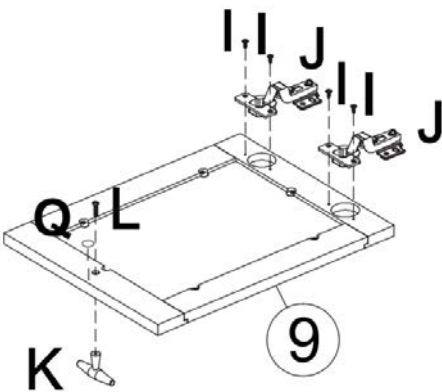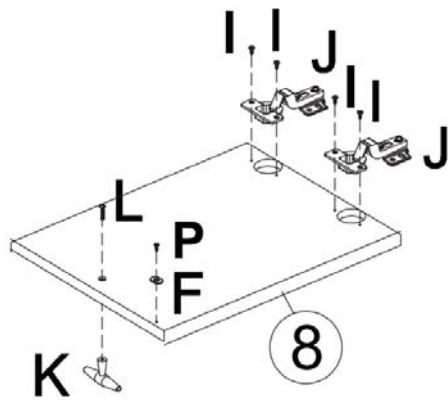


 
Step 9:

 


I (x32)

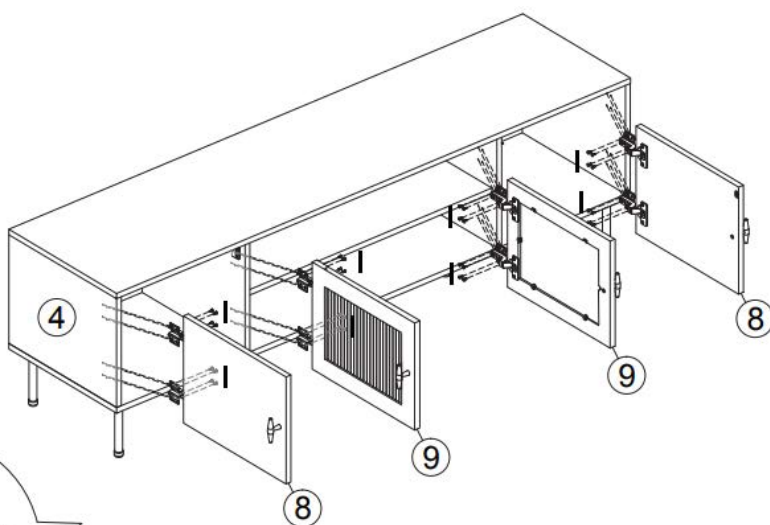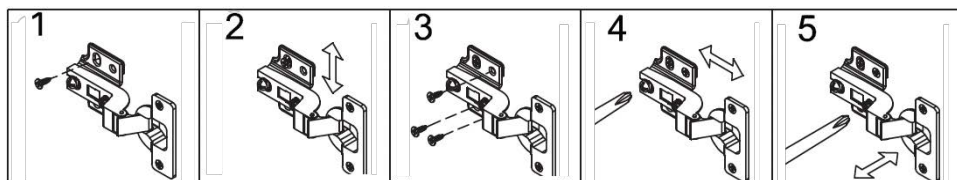 


Step 10:

	
D (x10)	M (x10)

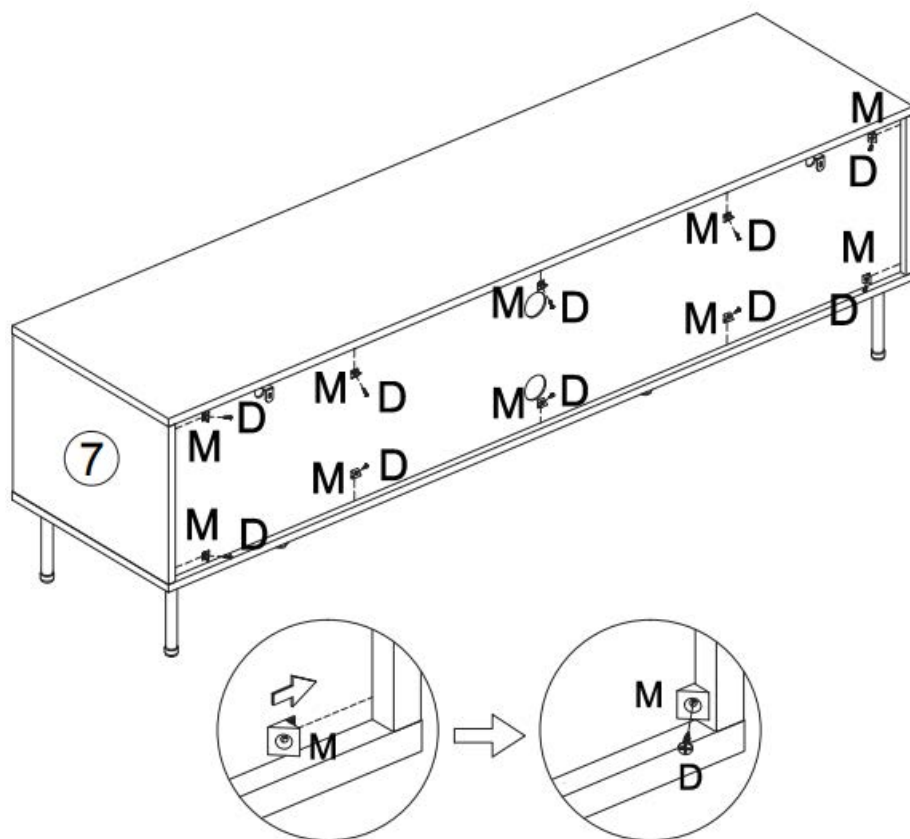

 
 
Step 11:

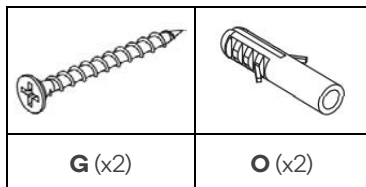

 
TOPPLING FURNITURE WARNING:

- It is strongly recommended that this product is permanently fixed to the wall.
- Please seek professional advice if you are in doubt of what fixing device to use.
- Regularly check that anchors are securely maintained.
- Stability of tall items may be affected by thick carpets or uneven floors.
- Do not place unanchored televisions on furniture.

Caution! For your safety when attaching the anchor fixings, please note the following: Check any electrical wires or plumbing inside the wall before drilling any holes (if you are unsure, please seek professional advice from a qualified tradesperson).

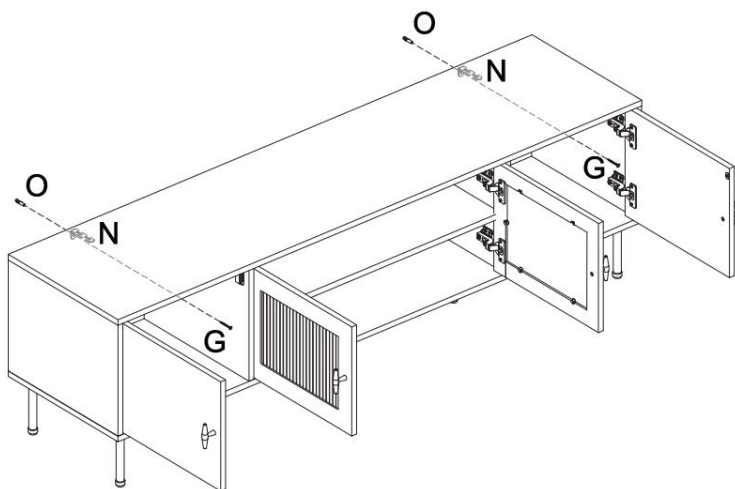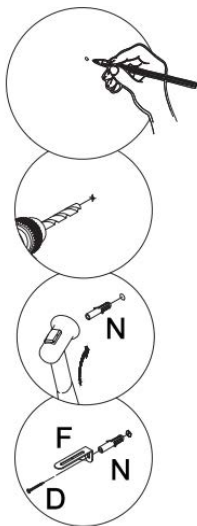

Step 12:

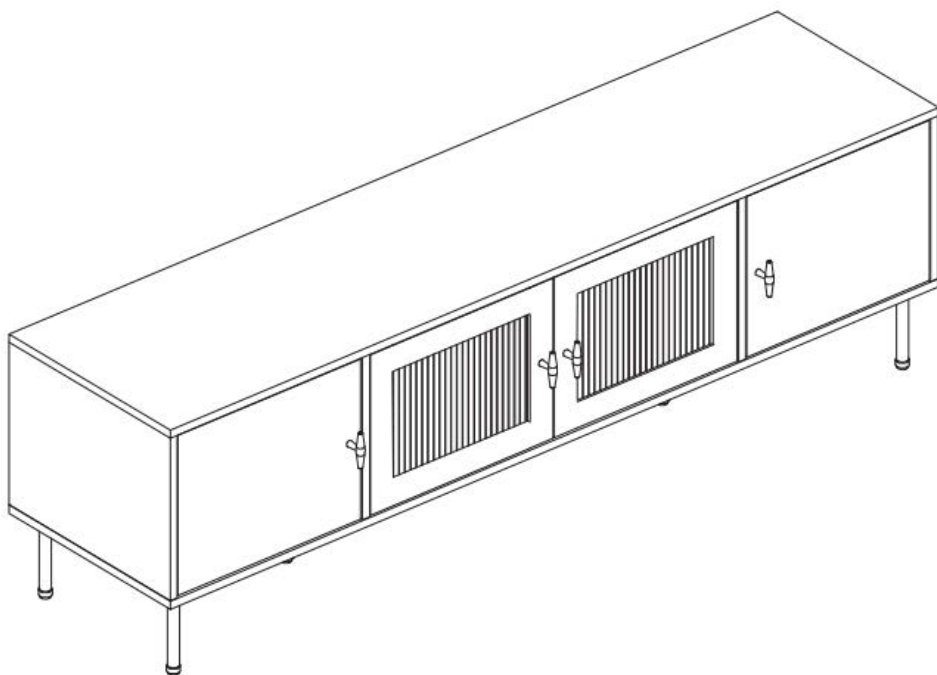

Completed!

Need more information?

We hope that this user guide has given you the assistance needed for a simple set-up.

For the most up-to-date guide for your product, as well as any additional assistance you may require, head online to **help.kogan.com**

kogan.com