




MS852DPM ESD
2D Imager Barcode Scanner

Connecting the Scanner

Connect USB cable to the USB port of a host computer.

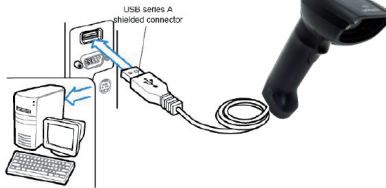

Test & Finish

Open a word processing program such as Microsoft Word or Notepad and scan the following barcode:



If the word "Unitech" appears on the screen, you have successfully installed your scanner.

Buzzer & LED Description

- Three short beeps (low - medium - high): Power on/Exit Setting Mode (setting success)
- One short beep: Barcode Good Read
- Two long beeps: Entering setting mode
- One long beep: Good Read (during setting mode)
- Three short beeps (high - high - high): Setting Failed
- Green Light On: Barcode Good Read

Default Setting



Set Factory Default

Note: The barcode with an Asterisk (*) is the default setting.

Enter/Exit Setup



Enter Setup



Exit Setup

Scanning the Enter Setup barcode can enable the engine to enter the setup mode. Scan the Exit Setup barcode to exit the setup mode.

USB Interface Mode



USB HID Keyboard*



USB CDC

Scan Mode



Level Trigger Mode*



Sense Mode
(Image Change)

Beeper Control



Low



Medium*



High

Good Read Beep



On*



Off

Aiming



Always On



Off



Trigger*

HID Keyboard Case



No Case Conversion*



Upper Case



Lower Case

Illumination Level



Minimum brightness



Intermediate brightness



Maximum brightness*

Terminating Character



Set Terminating
Character to CR (0x0D)*



Set Terminating Character
to CR LF (0x0D,0x0A)



Set Terminating
Character to TAB (0x09)

Language Settings



US (English)*



UK (English)



Brazil



Belgium



Denmark



France



Germany



Hungary



Italy



Japan



Norway



Portugal



Poland



Russia



Spain



Switzerland



Sweden



Turkish Q



Turkish F



None



<http://www.ute.com/>