


Drivers Installation Guide


Driver Pack	RaptorLake-S_20231220
Model	NViS66162/NViS5704
Installation Sequence	1. Chipset 2. GNA 3. CSME 4. Graphics 5. Serial IO 6. HID Event Filter 7. Audio 8. LAN

1. Chipset

1.1 Enter 1.Chipset-10.1.19199.8340-Public-MUP folder

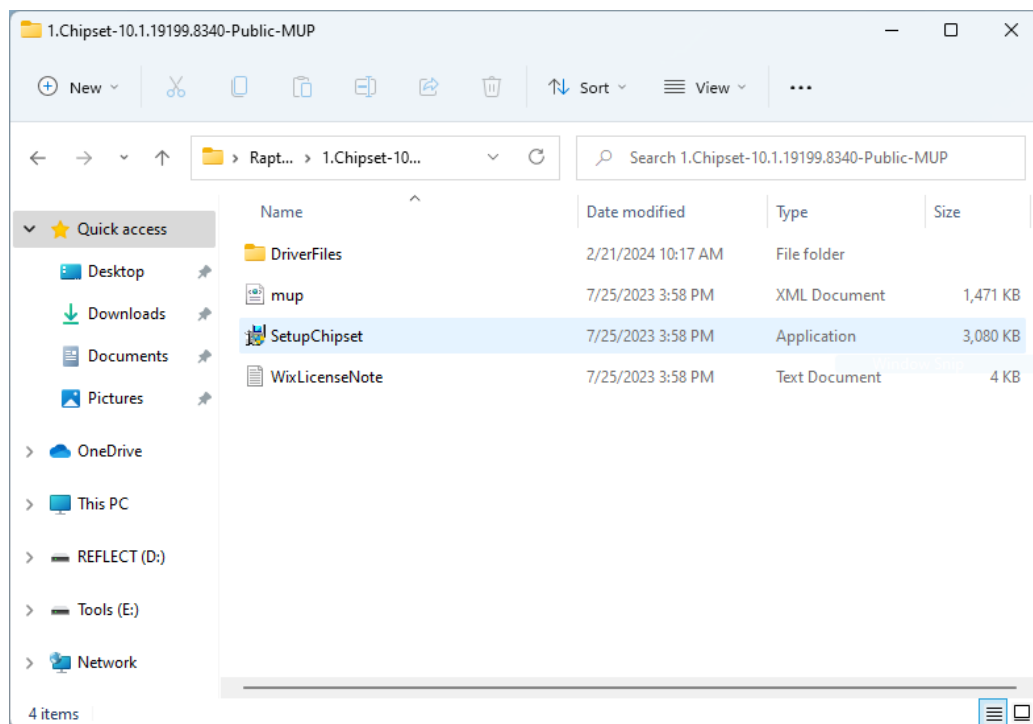


1.2 Execute SetupChipset.exe

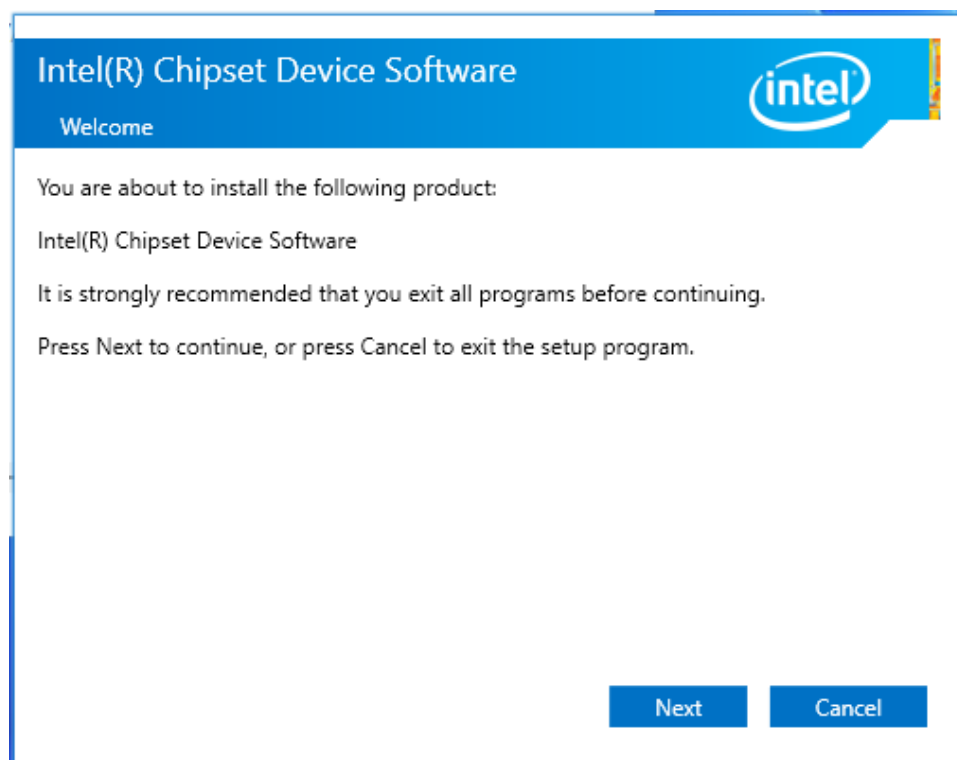


1.3 Restart Windows to apply driver changes

2. GNA

2.1 Enter 2.gna-03.00.00.1457-win-3_0_sv2_resign-20220819 folder

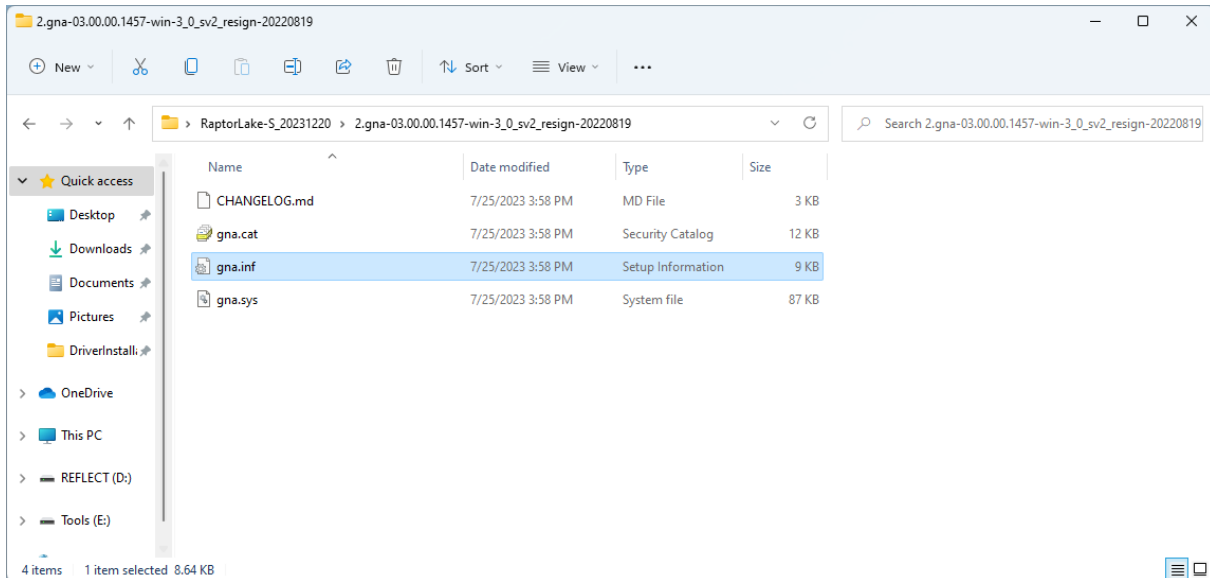


2.2 Right-Click on gna.inf and Install

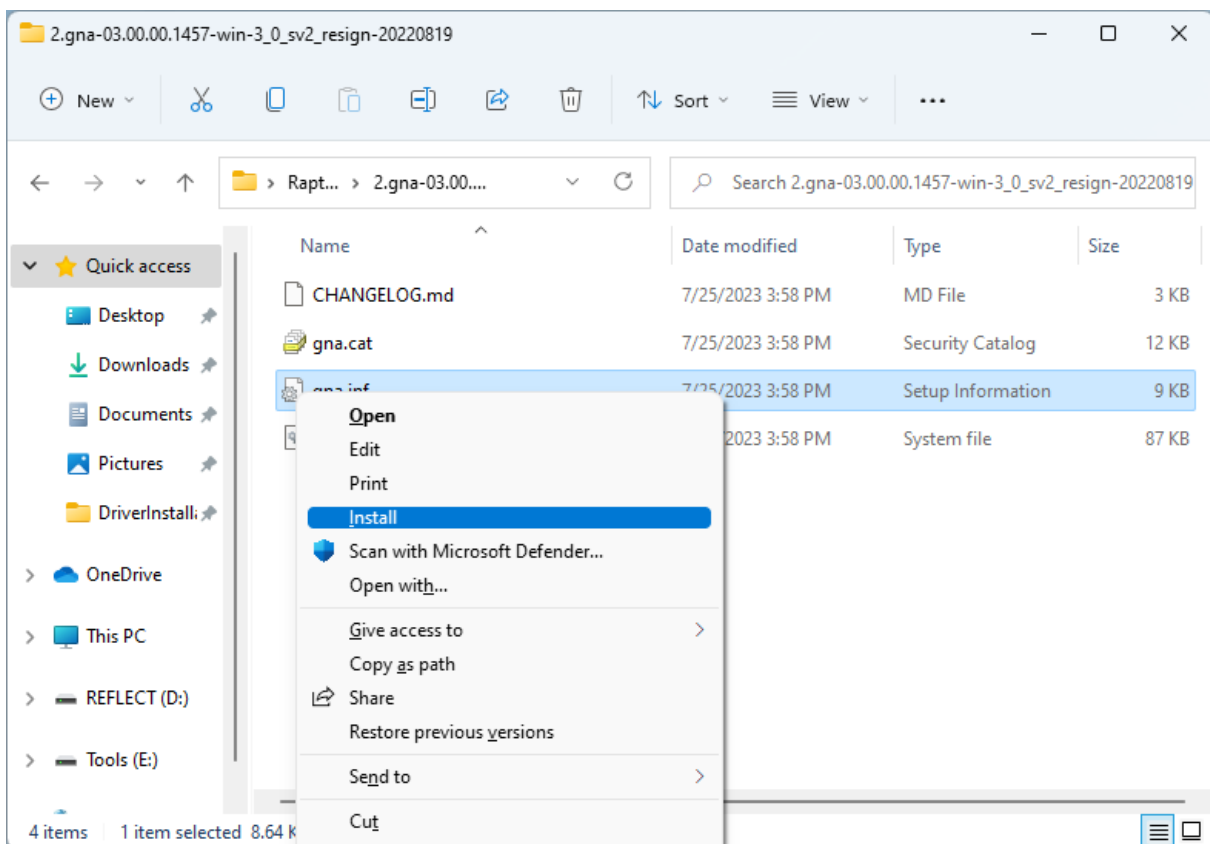


3. CSME

3.1 Enter 3.CSME-16.1.25.2124-SW folder

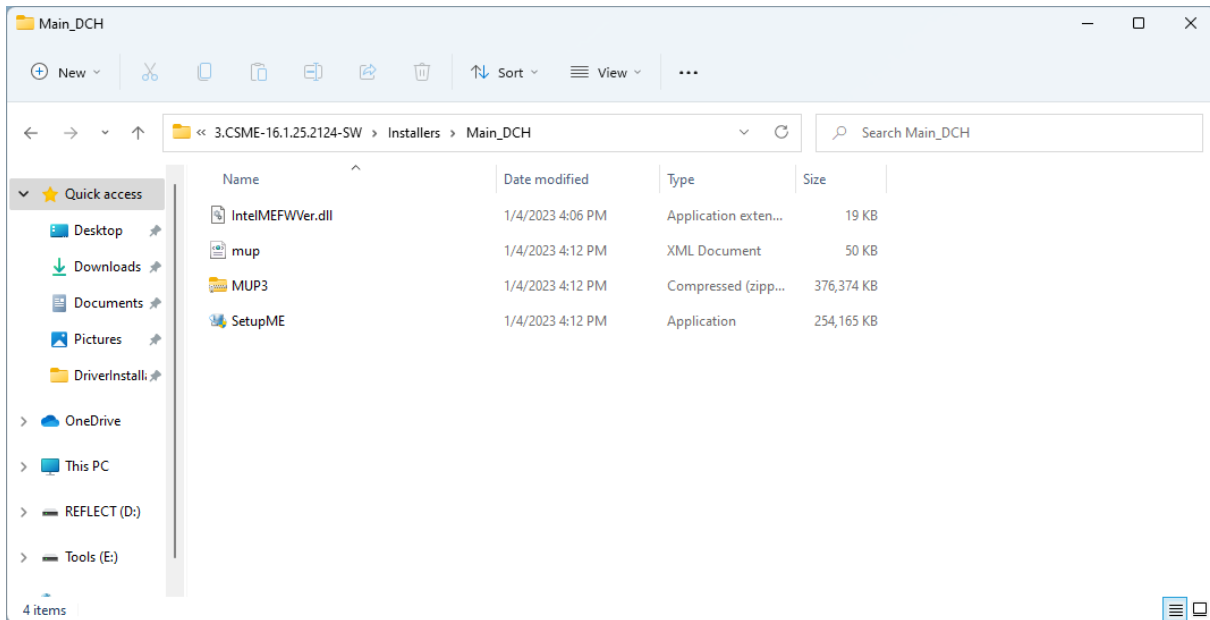


3.2 Execute SetupME.exe

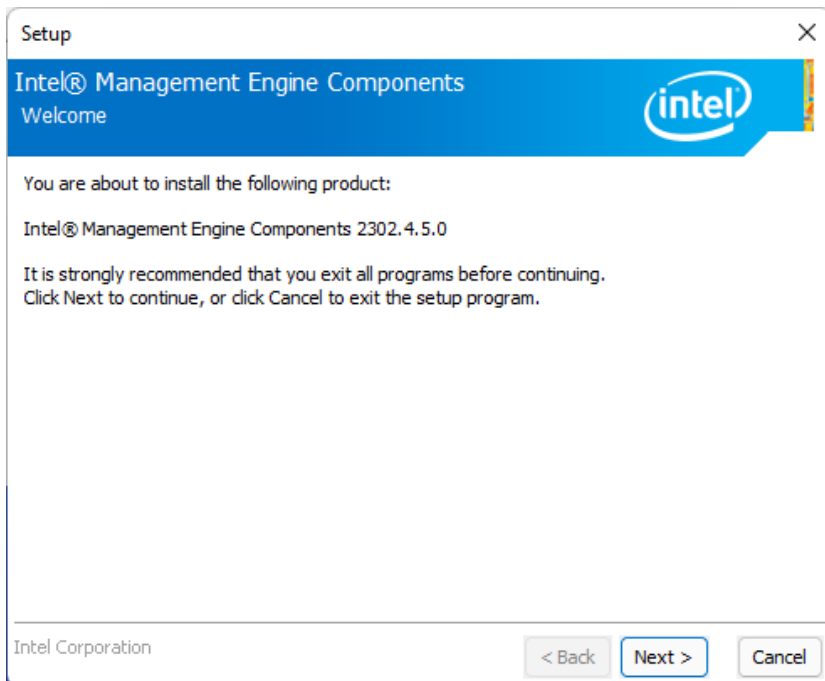


3.3 Restart Windows to apply driver changes

4. Graphics

4.1 Enter 4.Intel Graphics Driver Production Version 101.4146 folder

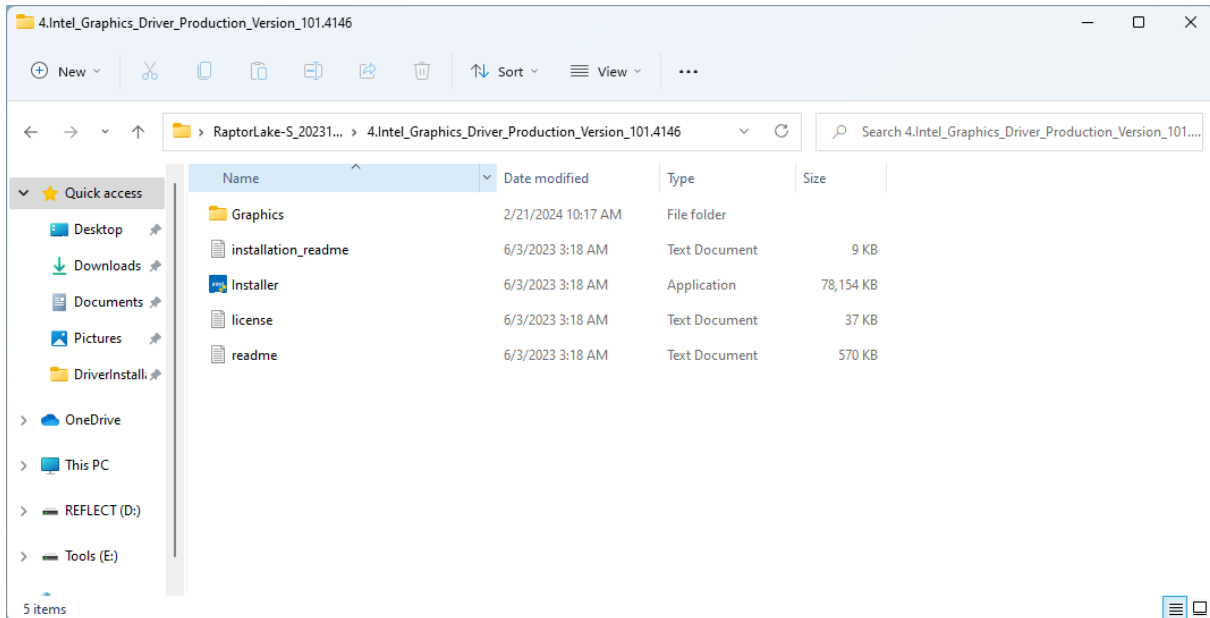


4.2 Execute Installer.exe

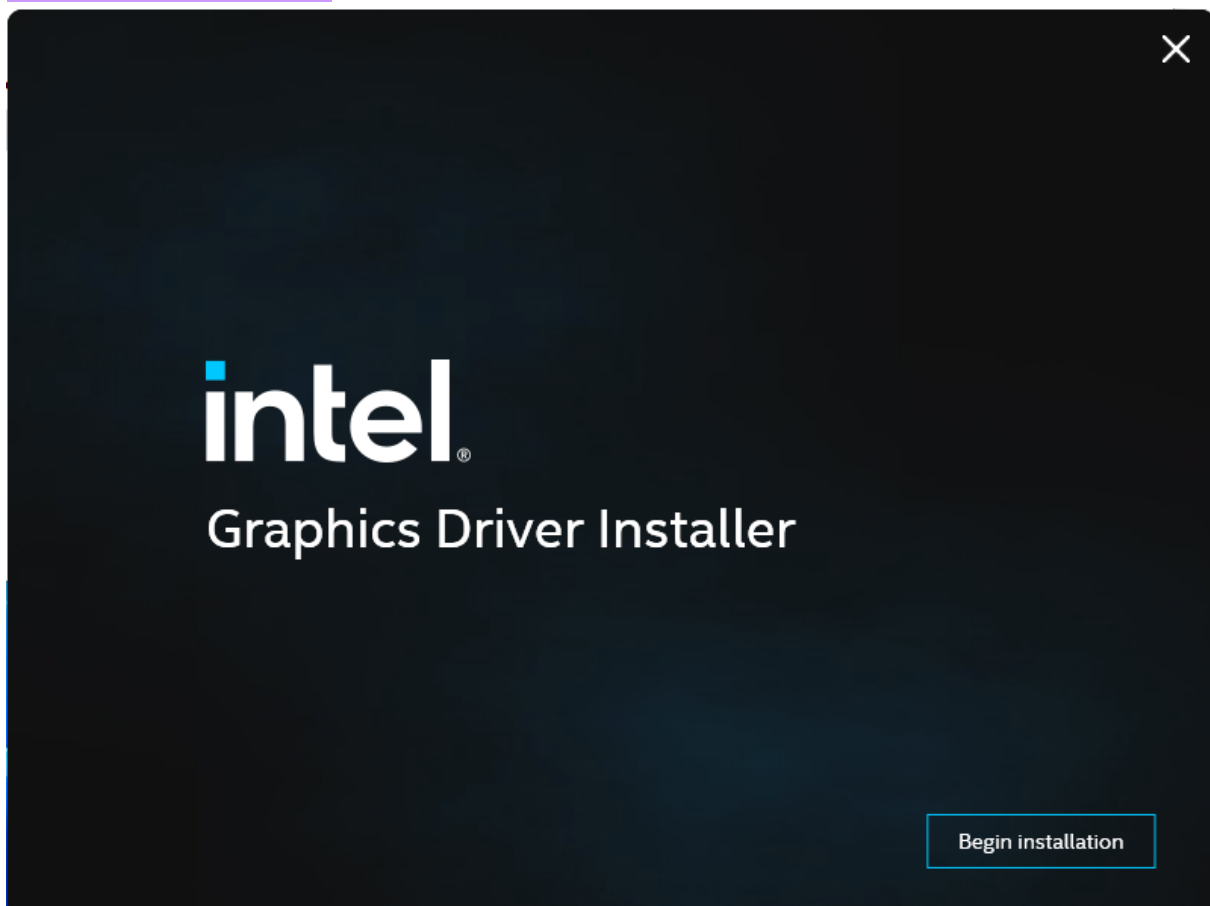


5. Serial IO

5.1 Enter 5.SerialIO 30.100.2221.20v2 RPL ADL-PCH 22H2 folder

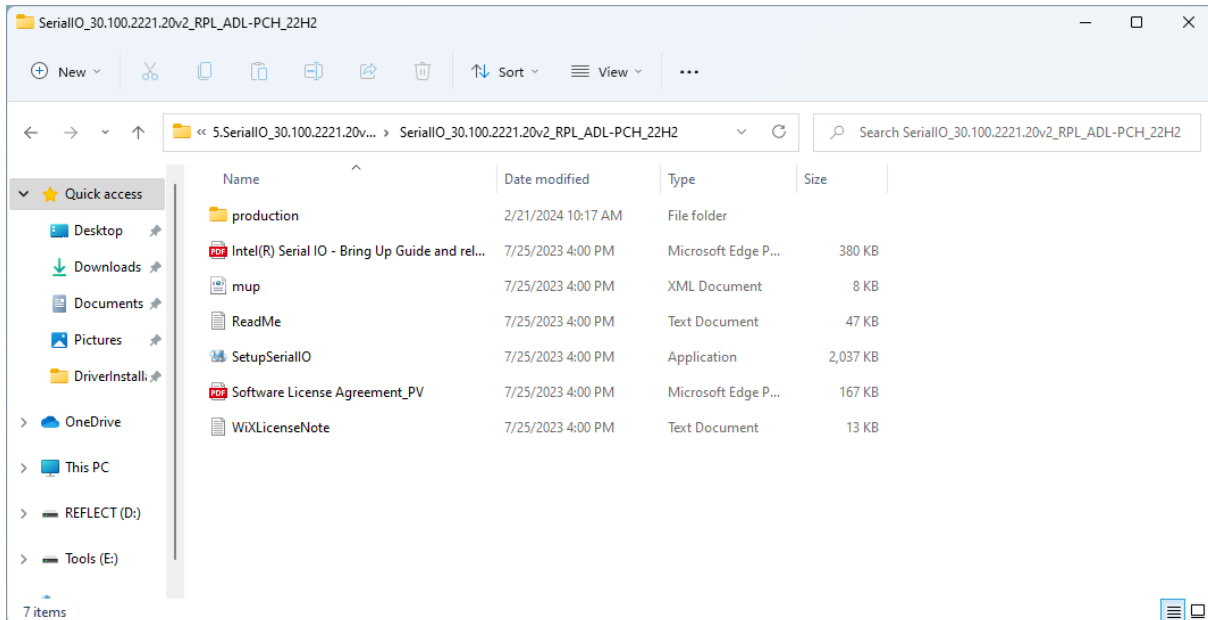


5.2 Execute SetupSerialIO.exe

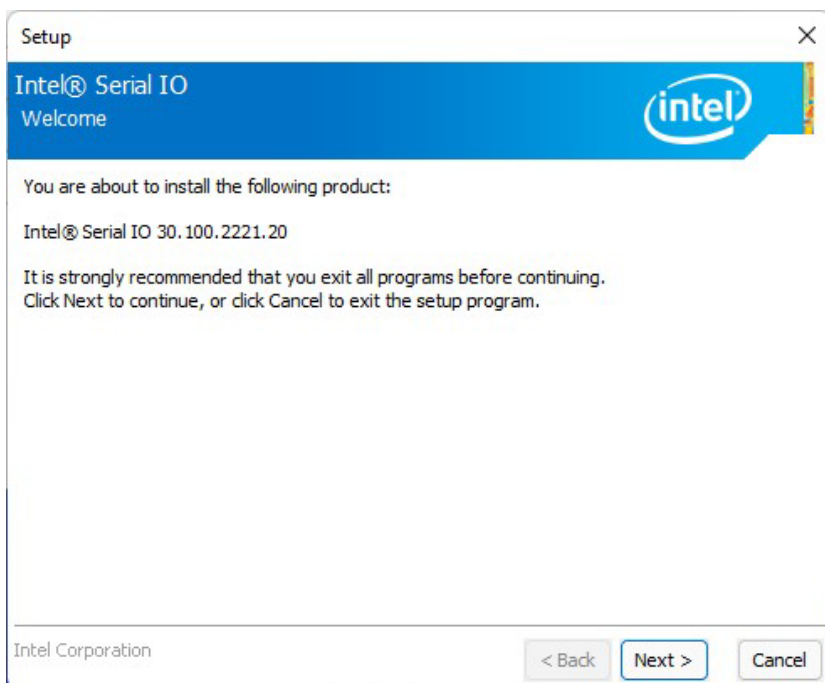


5.3 Restart Windows to apply driver changes

6. HID Event Filter

6.1 Enter 6.HIDEventFilterDriver-2.2.2.1 v3 RS5 19H1 20H1 21H2 22H2 Certified folder

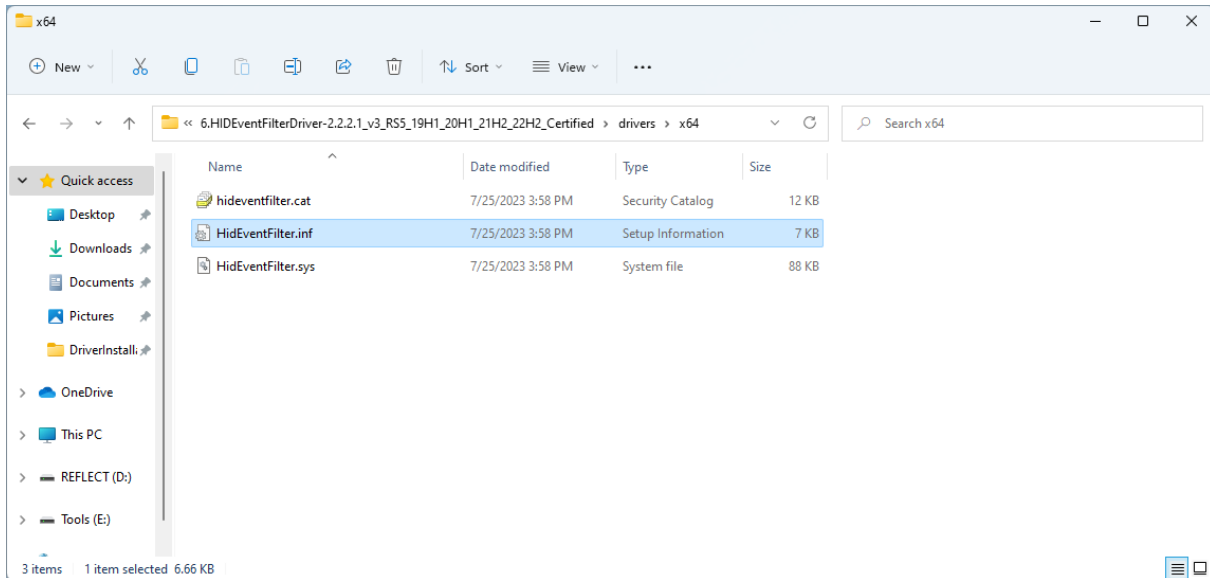


6.2 Right-Click on HidEventFilter.inf and Install

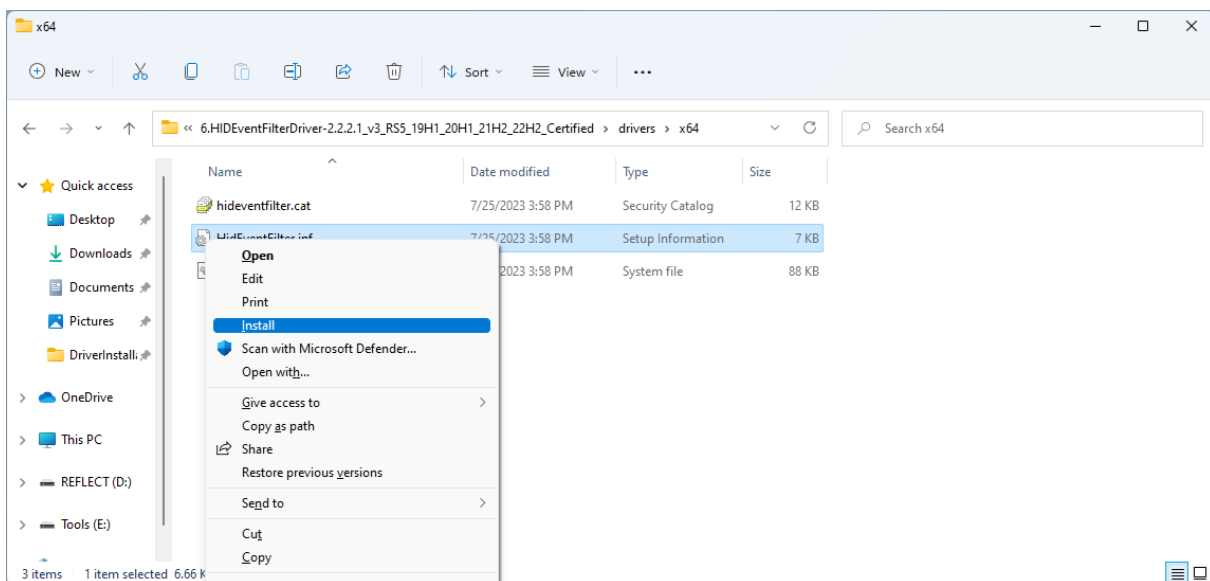


7. Audio


7.1 Enter 7.Audio > 1 Intel ISST-10.29.00.7919-ADL > Drivers folder

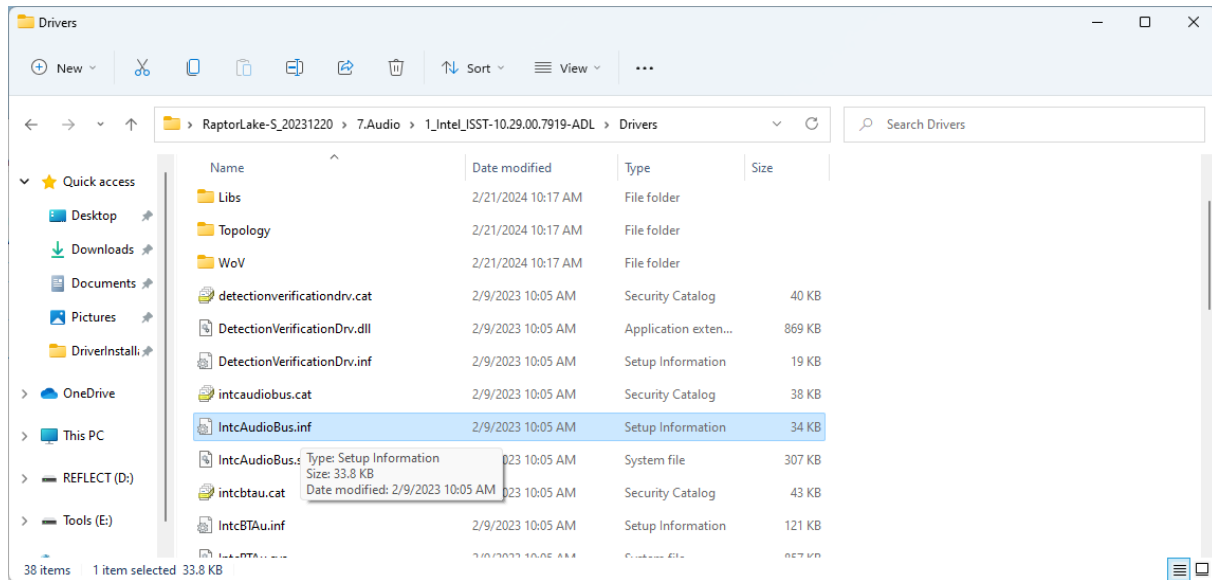


7.2 Right-Click on IntcAudioBus.inf and Install

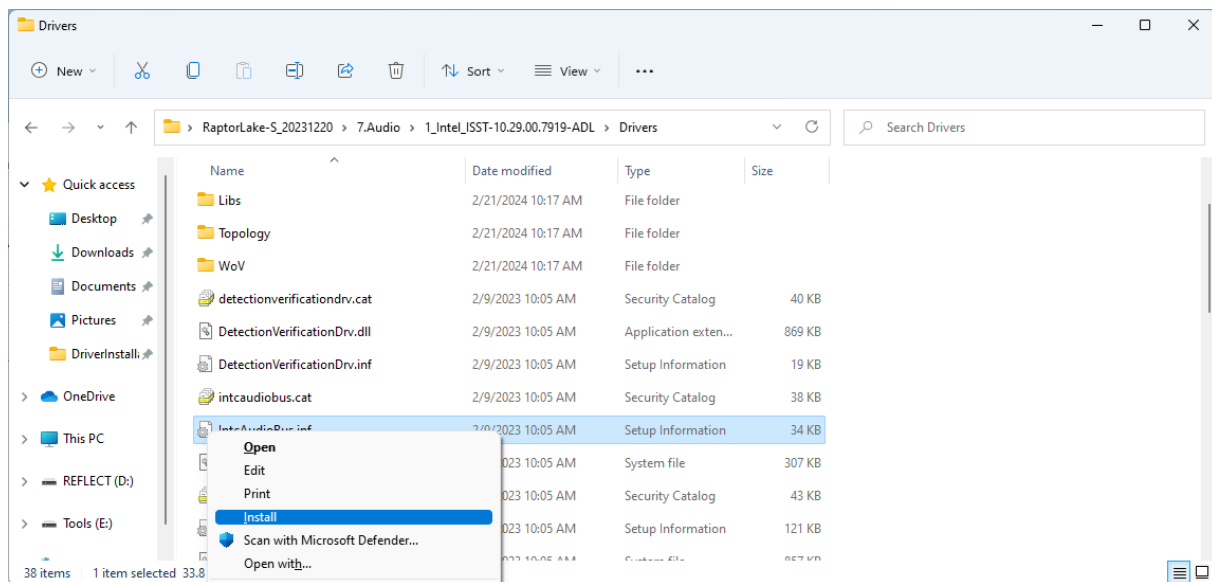


7.3 Right-Click on IntcOED.inf and Install

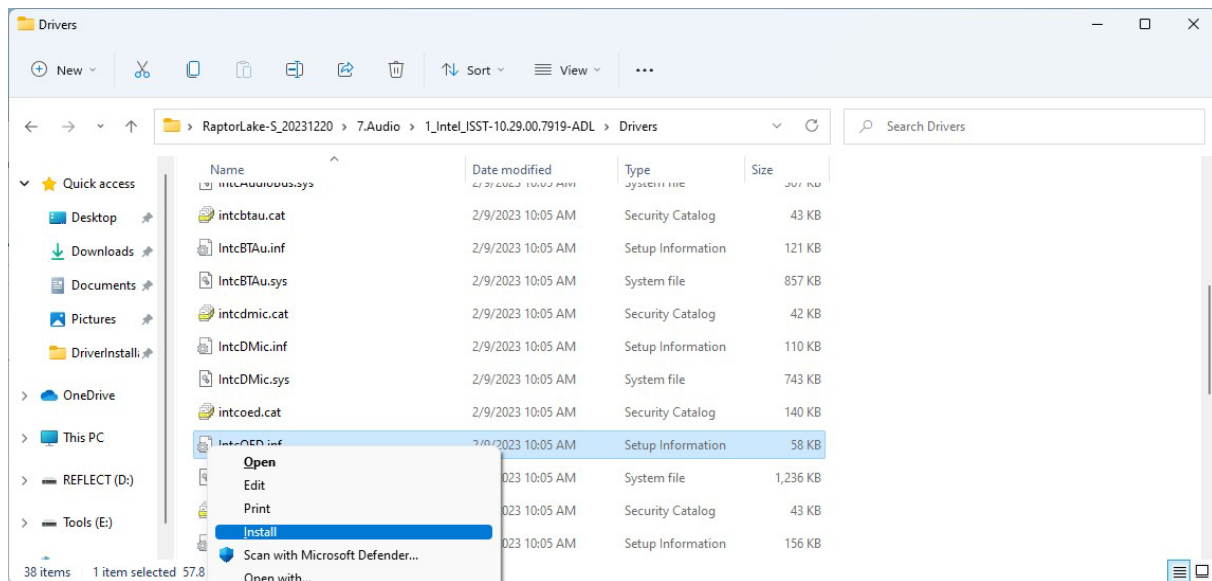

7.4 Enter 7.Audio > 2.9066_FF00_PG476_Win10_RS4_RS5_19H1_20H1_Win7_WHQL folder

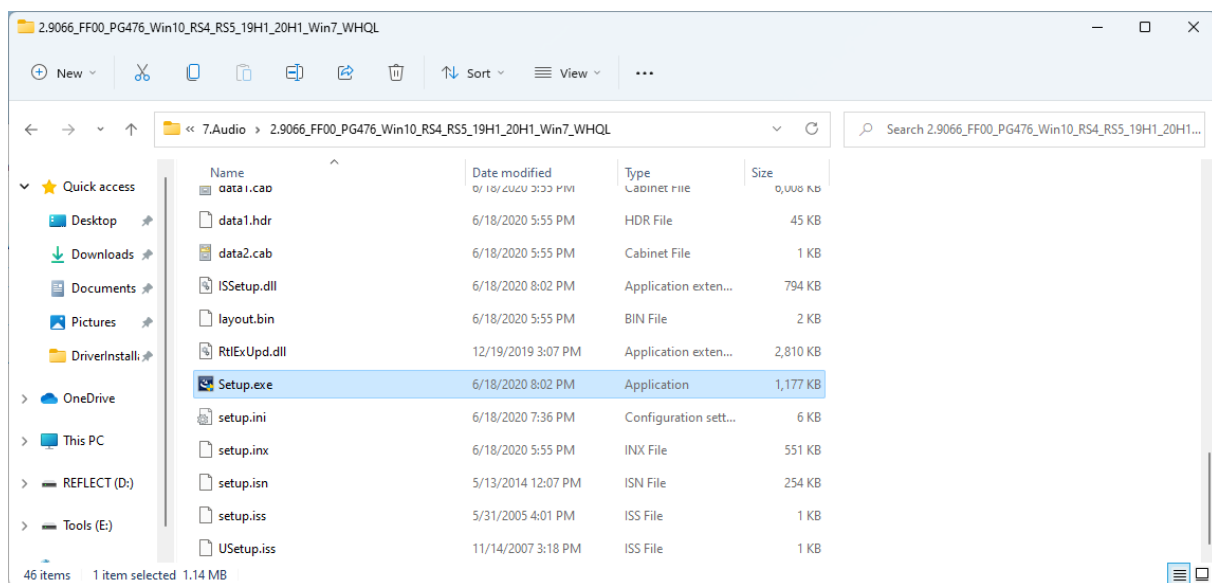


7.5 Execute Setup.exe

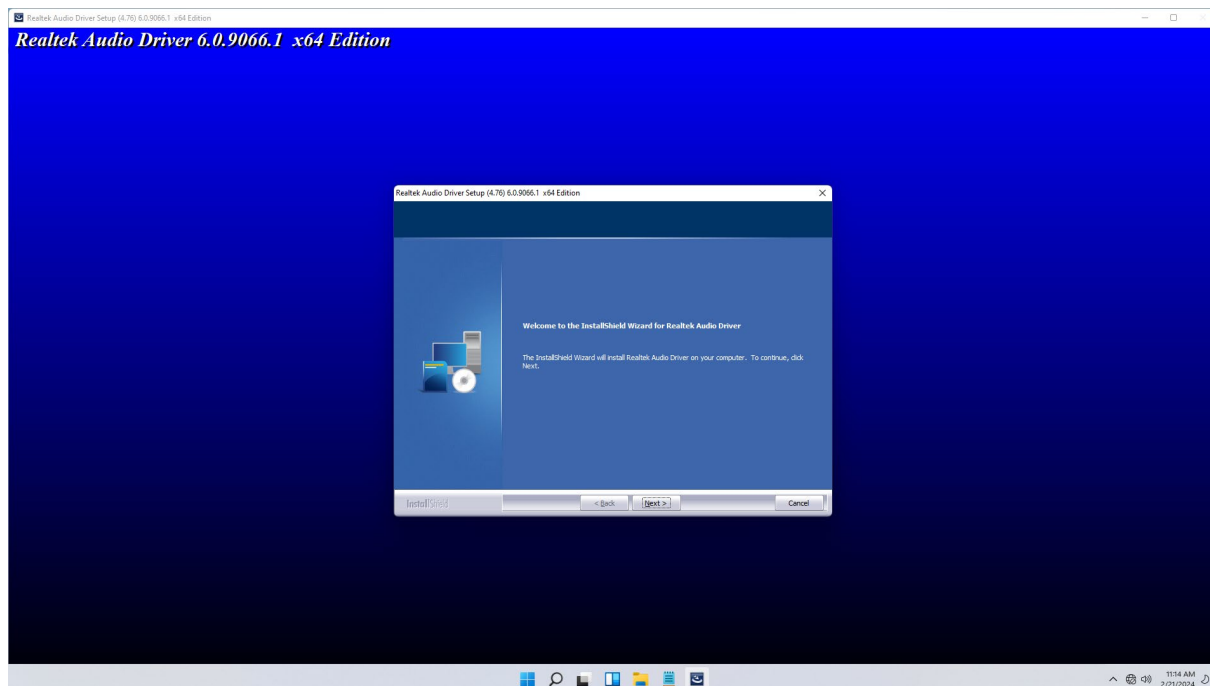


7.6 Restart Windows to apply driver changes

8. LAN

8.1 Enter 8.LAN driver > Release 28.2.1 folder

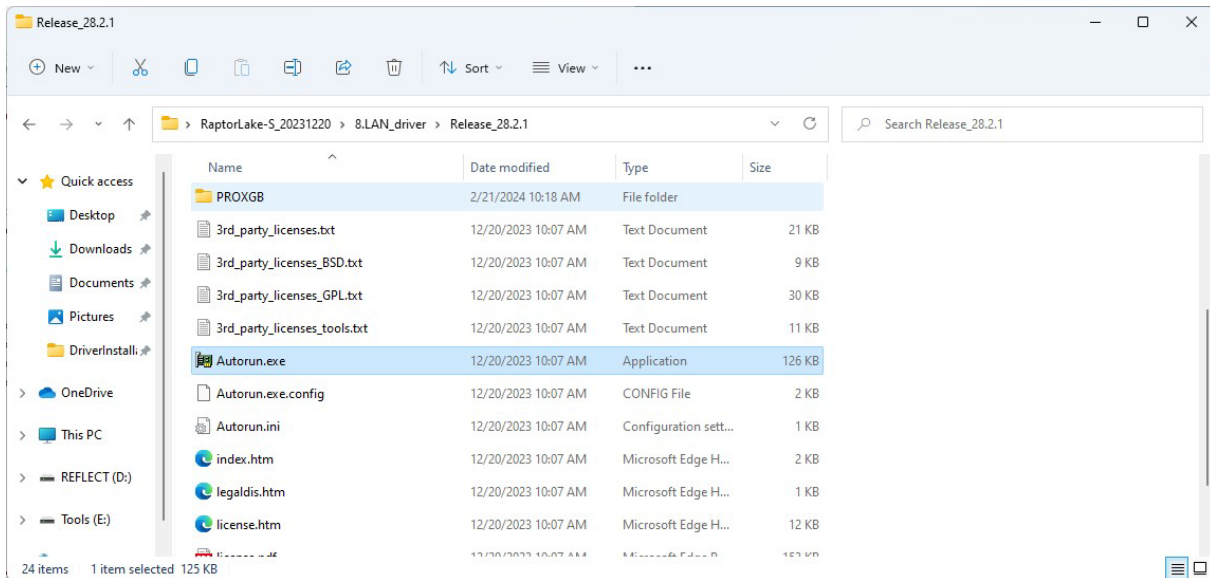

8.2 Execute Autorun.exe

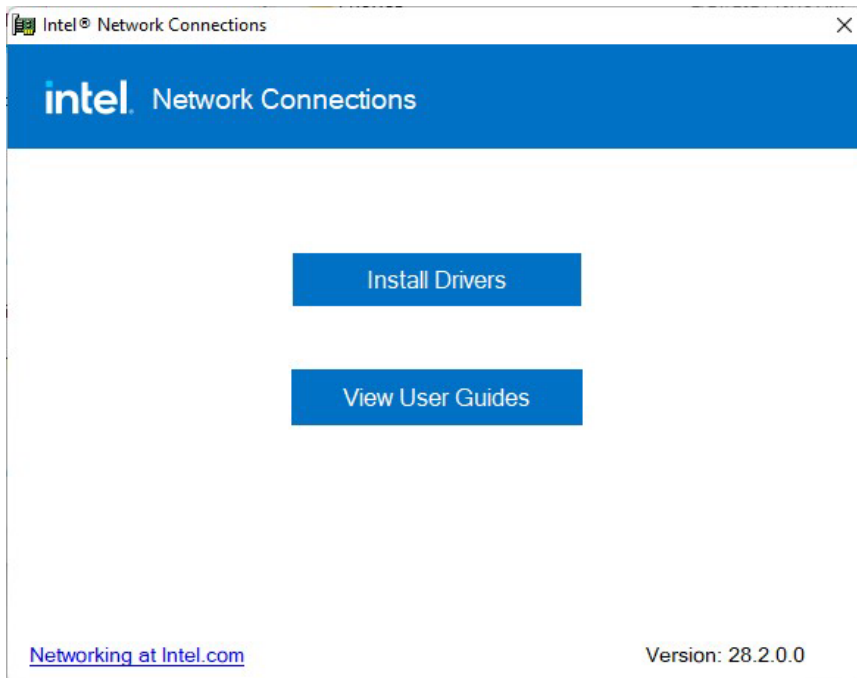

8.3 Restart Windows to apply driver changes