

### Intelli-Time® Alarm Clock model 13019W2



## CONTENTS

|                              |   |                                   |   |
|------------------------------|---|-----------------------------------|---|
| Unpacking Instructions ..... | 2 | Troubleshooting .....             | 5 |
| Package Contents .....       | 2 | Care & Maintenance .....          | 6 |
| Product Registration .....   | 2 | Replace Intelli-Time® Battery ... | 6 |
| Features & Benefits.....     | 3 | Specifications.....               | 6 |
| Clock Setup .....            | 4 | FCC Information .....             | 6 |
| Intelli-Time® Clock .....    | 4 | Customer Support .....            | 7 |
| Set the Time & Date .....    | 4 | Warranty.....                     | 7 |
| Using the Alarm Clock.....   | 5 |                                   |   |

**Questions?** Contact Customer Support at  
(877) 221-1252 or visit [www.AcuRite.com](http://www.AcuRite.com).

**SAVE THIS MANUAL FOR FUTURE REFERENCE.**



Congratulations on your new AcuRite product. To ensure the best possible product performance, please read this manual in its entirety and retain it for future reference.

## Unpacking Instructions

Remove the protective film that is applied to the LCD screen prior to using this product. Locate the tab and peel off to remove.

## Package Contents

1. Alarm clock
2. Instruction Manual

# IMPORTANT

PRODUCT MUST BE REGISTERED  
TO RECEIVE WARRANTY SERVICE

## PRODUCT REGISTRATION

Register online  
to receive 1 year  
warranty protection

[www.AcuRite.com](http://www.AcuRite.com)

GO NOW

SUPPORT

Support Forum


Archived Products

► Register a Product

# Features & Benefits



- |                               |                                                           |                                              |
|-------------------------------|-----------------------------------------------------------|----------------------------------------------|
| <b>1. ALARM ON/OFF Button</b> | <b>6. SNOOZE Button</b>                                   | <b>11. TIME ZONE Switch</b>                  |
| <b>2. ALARM SET Button</b>    | <b>7. "-" Button</b>                                      | <b>12. Dimmer HI/LO Switch</b>               |
| <b>3. "+" Button</b>          | <b>8. TIME SET Button</b>                                 | <b>13. Intelli-Time® Battery Compartment</b> |
| <b>4. ALARM ON Icon</b>       | <b>9. DST ON/OFF Switch</b>                               | <b>14. VOLUME HI/LO Switch</b>               |
| <b>5. PM Indicator</b>        | <b>10. RESET Button</b><br>Full reset to factory defaults |                                              |

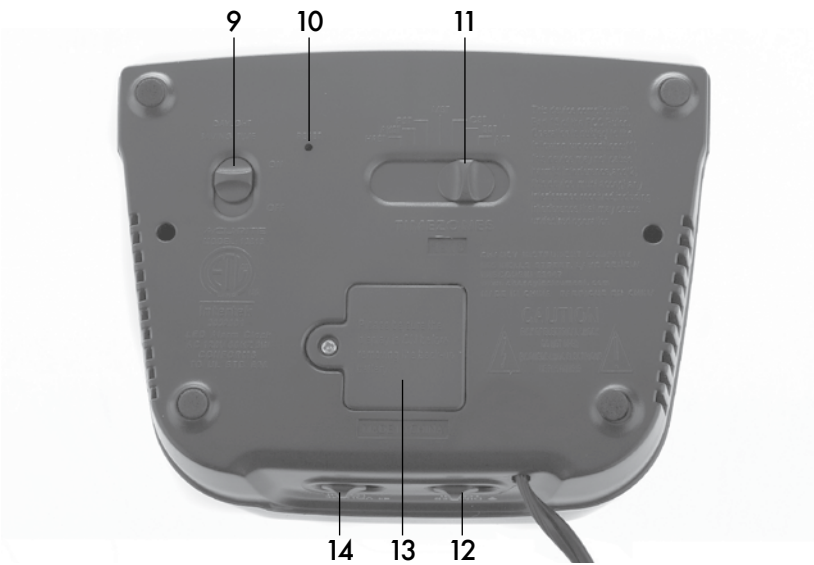

## **Clock Setup**

Plug the power cord into power outlet.

### **Intelli-Time® Clock**

Intelli-Time clock and calendar are pre-programmed to the correct time and date, and update automatically for Daylight Savings Time. All you need to do is select your time zone using the "TIME ZONE" switch.

### **Set the Time & Date**

Choose the correct time zone (HAST AKST PST MST CST EST AST) using the "TIME ZONE" switch on the bottom of the clock.

Choose Daylight Savings Time ON or OFF using the DST switch on the bottom of the clock. If you live in an area that observes Daylight Savings Time, DST should be set to ON, even if it is not currently Daylight Savings Time.

Press and hold the "TIME SET" button for 3 seconds to enter the SET MODE. Once in the SET MODE the preference you are currently in will blink on the clock.

To save your adjustments, press and release the "TIME SET" button to adjust the next preference. The preference order is as follows:

**CLOCK HOUR** (Please note PM Indicator light)

**CLOCK MINUTE**

**CALENDAR YEAR**

**CALENDAR MONTH**

**CALENDAR DATE**

You will automatically exit SET MODE if no buttons are pressed for 30 seconds. Enter SET MODE any time by pressing and holding "TIME SET" button for 3 seconds.

### **Dimmer HI/LO**

Optimize the display brightness for the location with the HI/LO Dimmer switch located on the back of the clock.

### **Volume HI/LO**

Optimize the alarm volume for the location with the Volume HI/LO switch located on the back of the clock.

## Using the Alarm Clock

### Set the Alarm Time

To set alarm time, press the "ALARM SET" button once to review alarm time. Press the "ALARM SET" button again to enter ALARM SET MODE.

To adjust the currently selected (flashing) item, press and release the "+" or "-" buttons (press and HOLD to fast adjust).

To save your adjustments, press and release the "ALARM SET" button to adjust the next preference. The preference set order is as follows:

**ALARM CLOCK HOUR** (Please note PM Indicator light)

**ALARM CLOCK MINUTE**

You will automatically exit ALARM SET MODE if no buttons are pressed for 30 seconds. Enter ALARM SET MODE at any time by pressing the "ALARM SET" button twice.

### Alarm Clock ON or OFF function

To Turn Alarm on: Press the "ALARM ON/OFF" button until the ALARM ON icon appears on the screen.

To Turn Alarm off: Press the "ALARM ON/OFF" button until the ALARM ON icon disappears from the screen.

### Alarm Clock SNOOZE function

When the alarm is sounding, activate the 9 minute SNOOZE function by pressing the SNOOZE button on the top of the alarm clock. SNOOZE function remains active until ALARM ON/OFF button is pressed.

## Troubleshooting

**Clock is too dark,  
hard to read or  
doesn't work**

- Reset the unit by pressing the reset button located on the bottom of the clock. This will reset the alarm to the original factory settings. Time and date will need to be entered after a reset.

**If your AcuRite product does not operate properly after trying the troubleshooting steps, visit [www.AcuRite.com](http://www.AcuRite.com) or call (877) 221-1252 for assistance.**

# Care & Maintenance


## Clock Care

Clean with a soft, damp cloth. Do not use caustic cleaners or abrasives. Keep away from dust, dirt and moisture. Clean ventilation ports regularly with a gentle puff of air.

## Replace Intelli-Time Clock Battery

Intelli-Time technology is powered by a pre-installed coin-cell battery that stores the time and date settings. The battery has a shelf life of several years. To replace the Intelli-Time battery:

1. Locate the coin cell battery compartment door on the back of the display unit. Unscrew and remove the compartment cover.
2. Insert 1 x CR2032 coin cell battery into the battery compartment, as shown. Install battery with "+" positive terminal facing OUT.
3. Screw in the battery cover.

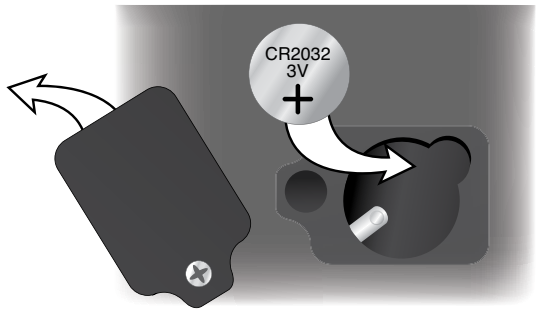

**WARNING: THIS PRODUCT CONTAINS A BUTTON-CELL BATTERY. IF SWALLOWED, IT COULD CAUSE SEVERE INJURY OR DEATH IN JUST 2 HOURS. SEEK MEDICAL ATTENTION IMMEDIATELY IF INGESTED.**



## Specifications

|              |                      |
|--------------|----------------------|
| <b>POWER</b> | AC power cord (120V) |
|--------------|----------------------|

## FCC Information

This device complies with part 15 of FCC rules. Operation is subject to the following two conditions:

- 1- This device may NOT cause harmful interference, and
- 2- This device must accept any interference received, including interference that may cause undesired operation.

**WARNING:** Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

**NOTE:** This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, There is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and the receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

**NOTE:** The manufacturer is not responsible for any radio or TV interference caused by unauthorized modifications to this equipment. Such modifications could void the user authority to operate the equipment.

This device complies with Industry Canada licence-exempt RSS standard(s).

Operation is subject to the following two conditions:

- (1) This device may not cause interference, and
- (2) This device must accept any interference received, including interference that may cause undesired operation of the device.

## Customer Support

AcuRite customer support is committed to providing you with best-in-class service. **For assistance**, please have the model number of this product available and contact us in any of the following ways:



(877) 221-1252



info@chaney-inst.com

24/7 support at [www.AcuRite.com](http://www.AcuRite.com)

- Installation Videos
- Register your Product
- Instruction Manuals
- Support User Forum
- Replacement Parts
- Submit Feedback & Ideas

## IMPORTANT

PRODUCT MUST BE REGISTERED  
TO RECEIVE WARRANTY SERVICE

### PRODUCT REGISTRATION

Register online  
to receive 1 year  
warranty protection

[www.AcuRite.com](http://www.AcuRite.com)

► NOW

SUPPORT

Support Forum

Archived Products

► Register a Product

## Limited One Year Warranty

At AcuRite, we proudly uphold our commitment to quality technology. Chaney Instrument Co. warrants that all products it manufactures to be of good material and workmanship, and to be free of defects when properly installed and operated for a period of one year from the date of purchase.

We recommend that you visit us at [www.AcuRite.com](http://www.AcuRite.com) for the fastest way to register your product. However, product registration does not eliminate the need to retain your original proof of purchase in order to obtain warranty benefits.

Chaney Instrument Co. warrants that all products it manufactures to be of good material and workmanship, and to be free of defects when properly installed and operated for a period of one year from the date of purchase. Remedy for breach of this warranty is limited to repair or replacement of the defective item(s). Any product which, under normal use and service, is proven to breach the warranty contained herein within ONE YEAR from date of sale will, upon examination by Chaney, and at its sole option, be repaired or replaced by Chaney. Transportation costs and charges for returned goods shall be paid for by the purchaser. Chaney hereby disclaims all responsibility for such transportation costs and charges. This

warranty will not be breached, and Chaney will give no credit for products it manufactures which have received normal wear and tear, been damaged (including by acts of nature), tampered, abused, improperly installed, damaged in shipping, or repaired or altered by others than authorized representatives of Chaney.

The above-described warranty is expressly in lieu of all other warranties, express or implied, and all other warranties are hereby expressly disclaimed, including without limitation the implied warranty of merchantability and the implied warranty of fitness for a particular purpose. Chaney expressly disclaims all liability for special, consequential or incidental damages, whether arising in tort or by contract from any breach of this warranty. Some states do not allow the exclusion or limitation of incidental or consequential damages, so the above limitation or exclusion may not apply to you. Chaney further disclaims all liability from personal injury relating to its products to the extent permitted by law. By acceptance of any of Chaney's products, the purchaser assumes all liability for the consequences arising from their use or misuse. No person, firm or corporation is authorized to assume for Chaney any other liability in connection with the sale of its products. Furthermore, no person, firm or corporation is authorized to modify or waive the terms of this paragraph, and the preceding paragraph, unless done in writing and signed by a duly authorized agent of Chaney. This warranty gives you specific legal rights, and you may also have other rights which vary from state to state.

For in-warranty claims: Chaney Instrument Co.  
965 Wells St., Lake Geneva, WI 53147

# ACURITE®



Weather  
Stations



Temperature  
& Humidity



Weather  
Alert Radio



Kitchen  
Thermometers  
& Timers



Clocks

*It's more than accurate, it's ACURITE®.*

AcuRite offers an extensive assortment of precision instruments,  
designed to provide you with information you can depend on to  
Plan your day with confidence™.

**[www.AcuRite.com](http://www.AcuRite.com)**

©Chaney Instrument Co. All rights reserved. AcuRite is a registered trademark of the Chaney Instrument Co., Lake Geneva, WI 53147. All other trademarks and copyrights are the property of their respective owners. AcuRite uses patented technology. Visit [www.AcuRite.com/patents](http://www.AcuRite.com/patents) for details.