

BaByliss®

Air Wand

QUICK START GUIDE



HOW TO ATTACH THE ACCESSORIES

- With the hooks on the rear of the attachment located at the top, position the attachment over the air outlet. At a slight angle, with the bottom of the attachment touching the appliance, gently push the top of the attachment on to the handle until it clicks into place.
- To remove an accessory, press and hold the release button on top and gently pull the attachment away from the handle.



HOW TO ACTIVATE ULTRA-CARE MODE

To activate the Ultra-Care Mode press and hold down the temperature setting button for 1-2 seconds until the temperature LED lights alternate between red and blue to indicate the airflow is cycling between a hot and cool airflow.

To turn off the Ultra-Care Mode function, press the temperature button once to return to your chosen heat setting.

CAUTION: Please be careful as the attachments and the air outlet surround will become hot after use. We suggest to run the cool setting to help cool the area and attachments before changing.



HOW TO ACTIVATE MEMORY FUNCTION

The memory feature stores your preferred temperature setting for ease of use and consistent results. The memory feature is automatically activated during use to store your preferred temperature setting.

Once the desired temperature setting has been selected, the memory function will store the selected temperature for future use. When turning the appliance on next, the appliance will automatically select the temperature stored.



HOW TO CLEAN THE FILTER

The removable magnetic inlet filter makes cleaning easy and therefore optimises the dryer's airflow for fast drying performance. Ensure the appliance is switched off, unplugged and cool. Using a soft brush, clean any hair and other debris from the filter.