

ENGINEERING
TOMORROW



Application Guide

VACON® NXP DCGuard™



drives.danfoss.com

VACON®

Contents

1	Introduction	6
1.1	Purpose of this Application Guide	6
1.2	Manual and Software Version	6
1.3	Additional Resources	6
1.4	Parameter Table Reading Guide	6
1.5	Application Functionality	7
1.6	Application Requirements	7
1.7	System Integrator Responsibilities	8
2	Control I/O	9
2.1	Control I/O Configuration	9
3	Monitoring Values	11
3.1	Monitoring 1	11
3.2	Monitoring 2	11
3.3	Fieldbus	12
4	Parameter Lists	13
4.1	Basic Parameters	13
4.2	Input Signals	13
4.2.1	Digital Inputs	13
4.2.2	Options	14
4.3	Output Signals	14
4.3.1	Digital Outputs	14
4.3.2	Analog Output 1	14
4.3.3	Analog Output 2	15
4.3.4	Analog Output 3	15
4.3.5	Supervision Limit	16
4.4	Limit Settings	16
4.4.1	Current Limit	16
4.5	Drive Control Parameters	17
4.5.1	Identification	17
4.6	Master/Follower	17
4.7	Fieldbus Parameters	17
4.8	Protections	18
4.8.1	General	19
4.8.2	U Phase Over Load Protection	19
4.8.3	V Phase Over Load Protection	19
4.8.4	W Phase Over Load Protection	20
4.8.5	U Phase Current Protection	20

4.8.6	V Phase Current Protection	20
4.8.7	W Phase Current Protection	21
4.9	Keypad Control	21
4.10	System Menu (Control Keypad: Menu M6)	21
4.11	Expander Boards (Control Keypad: Menu M7)	21
5	Monitoring Value Descriptions	22
5.1	Monitoring 1 Values	22
5.2	Monitoring 2 Values	24
5.3	Fieldbus Monitoring Values	29
6	Parameter Descriptions	32
6.1	Basic Parameters	32
6.2	Input Signals	33
6.2.1	Digital Inputs	33
6.2.2	Options	36
6.3	Output Signals	36
6.3.1	Digital Outputs	36
6.3.2	Analog Outputs	38
6.3.2.1	Parameter Set-up Examples	38
6.3.2.2	Analog Output 1	39
6.3.2.3	Analog Output 2	42
6.3.2.4	Analog Output 3	43
6.3.3	Supervision Limit	45
6.4	Limit Settings	45
6.4.1	Current Limit	45
6.5	Drive Control Parameters	46
6.5.6	Identification	47
6.6	Master/Follower	48
6.7	Fieldbus Parameters	48
6.8	Protections	51
6.8.4	General	52
6.8.5	Over Load Protection	53
6.8.5.1	Function Description	53
6.8.5.2	U Phase Over Load Protection	54
6.8.5.3	V Phase Over Load Protection	55
6.8.5.4	W Phase Over Load Protection	56
6.8.6	U Phase Current Protection	56
6.8.7	V Phase Current Protection	57
6.8.8	W Phase Current Protection	58
6.9	Keypad Control	58
6.10	"Terminal to Function" (TTF) Programming Principle	59

6.10.1	Defining an Input/Output for a Certain Function on Keypad	60
6.10.2	Defining a Terminal for a Certain Function with VACON® NCDrive	60
6.10.3	Defining Unused Inputs/Outputs	61
6.11	Fieldbus Control In Detail	61
6.11.1	Fieldbus Control Word (Standard)	62
6.11.2	Fieldbus Control Word (DCGuard Profile 1)	62
6.11.3	Fieldbus Status Word	63
6.11.4	Application Status Word	64
7	Fault Tracing	66
7.1	Troubleshooting Guidelines	66
7.2	Faults and Alarms	67

1 Introduction

1.1 Purpose of this Application Guide

This Application Guide provides information for configuring the system, controlling the AC drive, accessing parameters, programming, and troubleshooting of the AC drive. It is intended for use by qualified personnel. To use the drive safely and professionally, read and follow the instructions. Pay particular attention to the safety instructions and general warnings that are provided in this manual and other documentation delivered with the drive.

The VACON® NXP DCGuard™ application software and this application manual are made according to the same guidelines as other VACON® NXP applications, where the NXP inverter is used to control a motor. The functionality of the DCGuard is fundamentally different from motor control, although the hardware and system software is the same.

1.2 Manual and Software Version

This manual is regularly reviewed and updated. All suggestions for improvement are welcome.

The original language of this manual is English.

Table 1: Manual and Software Version

Version	Release date	Remarks	Software version
A	04.12.2018	First release	ADFIF102V039

1.3 Additional Resources

Other resources are available to understand advanced AC drive functions, installation, operation, and options.

- The VACON® NXP DCGuard™ design guide provides technical information to understand the capabilities of the VACON® NXP DCGuard™ application.
- The VACON® NXP DCGuard™ operating guide provides information about the installation and operation of the VACON® NXP DCGuard™ application.
- VACON® NXP Common DC Bus and VACON® NXP Liquid-cooled Common DC Bus user manuals provide detailed information for the installation, commissioning, and operation of the AC drive modules.
- The operating and installation guides for VACON® options give detailed information about specific drive options.

Supplementary publications and manuals are available from Danfoss. See www.danfoss.com for listings.

1.4 Parameter Table Reading Guide

This manual includes a large quantity of parameter tables. These instructions tell you how to read the tables.

A	B	C	D	E	F	G	H
Index	Parameter	Min	Max	Unit	Default	ID	Description

e30bg858.10

A The location of the parameter in the menu, that is, the parameter number.	B The name of the parameter.
C The minimum value of the parameter.	D The maximum value of the parameter.
E The unit of the value of the parameter. The unit shows if it is available.	F The value that was set in the factory.
G The ID number of the parameter.	H A short description of the values of the parameter and/or its function.

Illustration 1: Parameter Table Reading Guide


1.5 Application Functionality

VACON® NXP DCGuard™ is a fast DC current cutter device that detects and cuts off an outgoing short-circuit current. The main function is to isolate the faulty DC grid from the healthy DC grid, before that fault affects the healthy DC grid.

Two inverter units in a DCGuard peer-to-peer topology are required to be able to cut off short-circuit current both ways.

VACON® NXP DCGuard™ consist of VACON® NXP inverter units and application software ADFIF102. To ensure the correct functionality and safety level, always use the following components together with the DCGuard in a peer-to-peer system:

- An upstream mechanical disconnecter if safe disconnection is required.
- Type aR supply fuses in each DC supply line (see the VACON® NXP DCGuard™ design guide for instructions).
- A dU/dt filter (a standard VACON® dU/dt filter can be used).

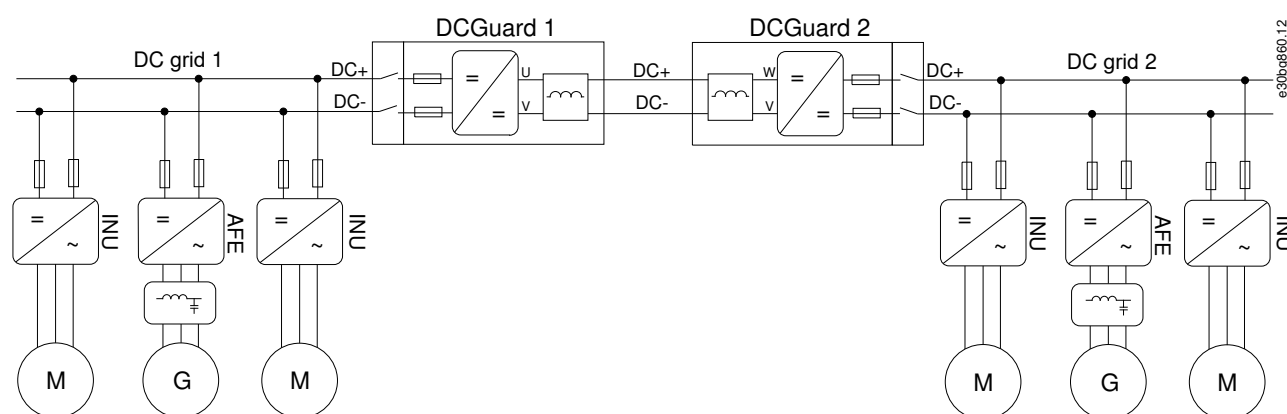

e30bg860.12

Illustration 2: VACON® NXP DCGuard™ Peer-to-Peer Topology

1.6 Application Requirements

The VACON® NXP DCGuard™ application requires:

- NXP3 control board VB761 revision D or newer.
- System software version NXP00002V193 or newer.

1.7 System Integrator Responsibilities

The VACON® NXP DCGuard™ is developed to be used as a component in a common-DC system. System design and control must be done by the system integrator.

The VACON® NXP DCGuard™ peer-to-peer system is made of two independent DCGuard units, although they operate as a pair. It is the responsibility of the system integrator to implement the two DCGuard units in to the system, to ensure correct functionality, and to ensure correct safety level.

Especially consider the following when designing the system:

- A fault in one of the two DCGuard units must lead to the opening of the other DCGuard unit.
- To ensure safe disconnection of the VACON® NXP DCGuard™ and the bus-tie cables, a mechanical disconnecter is required in front of each DCGuard.
- The mechanical disconnecter in front of each DCGuard unit must only be closed when the voltage level on both sides of the mechanical disconnecter is within the limits of the mechanical disconnectors closing capacity. Meaning that the inrush current is within the mechanical disconnectors closing capacity.
- The mechanical disconnecter in front of each DCGuard unit must only be opened when the conducted current is less than the maximum breaking capability of the mechanical disconnecter.
- Closing a DCGuard unit must only be possible when the other side of the system is ready to be powered up.
- VACON® NXP liquid-cooled inverters do not control or monitor the cooling liquid flow through their own cooling elements. The system integrator must therefore take responsibility of implementing sufficient control and monitoring of the cooling liquid circuit.
- If the active control place for the DCGuard unit is keypad, make sure that there is a possibility to stop the DCGuard also in case the keypad is removed from the drive. In case the parameter *Keypad/PC fault mode* (ID 1329) is set to 0/*No response* or 1/*Warning*, it must be ensured on system level that there is the possibility for local control. This can be done, for example, by forcing to I/O or fieldbus control by a digital input.

2 Control I/O

2.1 Control I/O Configuration

The figure shows the default I/O configuration for the VACON® NXP DCGuard™ application and a basic description of the terminals and signals of the I/O board.

For more information on control terminals, see the VACON® NXP DCGuard™ application guide.

Standard I/O board			
Terminal	Signal	Description	
1	+10Vref	Reference voltage output	Voltage for potentiometer, etc.
2	AI1+	Analog input 1 Range 0-10 V, $R_i = 200 \Omega$ Range 0-20 mA $R_i = 250 \Omega$	Analog input 1 Input range selected by jumpers Default range: Voltage 0-10 V
3	AI1-	I/O Ground	Ground for reference and controls
4	AI2+	Analog input 2 Range 0-10 V, $R_i = 200 \Omega$ Range 0-20 mA $R_i = 250 \Omega$	Analog input 2 Input range selected by jumpers Default range: Current 0-20 mA
5	AI2-		
6	+24V	Control voltage output	Voltage for switches, etc. max 0.1 A
7	GND	I/O ground	Ground for reference and controls
8	DIN1	Start Request (Close Request) Programmable G2.2	Contact closed = Start Request (Contact closed = Close Request)
9	DIN2	Programmable G2.2	No function defined at default
10	DIN3	Programmable G2.2	No function defined at default
11	CMA	Common for DIN1-DIN3	Connect to GND or +24 V
12	+24V	Control voltage output	Voltage for switches (see #6)
13	GND	I/O ground	Ground for reference and controls
14	DIN4	Programmable G2.2	No function defined at default
15	DIN5	Programmable G2.2	No function defined at default
16	DIN6	Programmable G2.2	No function defined at default
17	CMB	Common for DIN4-DIN6	Connect to GND or +24 V
18	AO1+	Analog output 1 Programmable G2.3	Output range selected by jumpers Range 0-20 mA, R_L max. 500 Ω Range 0-10 V, $R_L > 1 \text{ k}\Omega$
19	AO1-		
20	DO1	Digital output Programmable G2.3	Programmable Open collector, $I \leq 50 \text{ mA}$, $U \leq 48 \text{ V DC}$
OPTA2			
21	RO1	Relay output 1 Programmable G2.3	Switching capacity 24 V DC / 8 A 250 V AC / 8 A 125 V DC / 0.4 A
22	RO1		
23	RO1		
24	RO2	Relay output 2 Programmable G2.3	Switching capacity 24 V DC / 8 A 250 V AC / 8 A 125 V DC / 0.4 A
25	RO2		
26	RO2		

Illustration 3: The Default I/O Configuration for the VACON® NXP DCGuard™ Application

3 Monitoring Values

3.1 Monitoring 1

Table 2: Monitoring 1 Values

Index	Monitoring value	Unit	Form	ID	Description
V1.1.1	DC-Link Amps	A	Varies	3	
V1.1.2	DC-Link Current	%	##	1861	
V1.1.3	DC-Link Voltage	V	#	7	Measured DC-link voltage in Volts, filtered
V1.1.4	Unit Temperature	°C	#	8	Heat sink temperature
V1.1.5	Power kW	kW	Varies	73	
V1.1.6	DC-Link Power	%	##	5	
V1.1.7	Analogue Output 1	%	###	26	
V1.1.8	Analogue Output 2	%	###	31	
V1.1.9	Analogue Output 3	%	###	32	

3.2 Monitoring 2

Table 3: Monitoring 2 Values

Index	Monitoring value	Unit	Form	ID	Description
V1.2.1	DC Voltage	V	#	44	Unfiltered
V1.2.2	U Phase Current	A	Varies	1851	
V1.2.3	V Phase Current	A	Varies	1852	
V1.2.4	W Phase Current	A	Varies	1868	
V1.2.5	U Phase Power	kW	Varies	1871	
V1.2.6	V Phase Power	kW	Varies	1872	
V1.2.7	W Phase Power	kW	Varies	1873	
V1.2.8	Status Word		#	43	
V1.2.9	DIN Status Word 1		#	56	
V1.2.10	DIN Status Word 2		#	57	
V1.2.11	DCGuard Status Word		#	1869	
V1.2.12	DCGuard Control Status		#	1870	
V1.2.13	Data Logger Trigger Word		#	97	

3.3 Fieldbus

Table 4: Fieldbus Values

Index	Monitoring value	Unit	Form	ID	Description
V1.3.1	FB Control Word		#	1160	
V1.3.2	FB Status Word		#	65	
V1.3.3	Last Active Fault		#	37	
V1.3.4	Last Active Warning		#	74	
V1.3.5	Fault Word 1		#	1172	
V1.3.6	Warning Word 1		#	1174	

4 Parameter Lists

4.1 Basic Parameters

Table 5: Basic Parameters

Index	Parameter	Min.	Max.	Unit	Default	ID	Description
P2.1.1	Cabling	0	3		0	1503	0 = Not Selected 1 = UDC+, VDC-, WDC+ 2 = U-DC+, V-DC- 3 = V-DC-, W-DC+

4.2 Input Signals

4.2.1 Digital Inputs

Table 6: Digital Inputs

Index	Parameter	Min.	Max.	Unit	Default	ID	Description
P2.2.1.1	Start Signal 1	0.1	E.10	DigIn	A.1	403	Close command
P2.2.1.2	Run Enable 1	0.1	E.10	DigIn	0.2	407	Interlock for closing command
P2.2.1.3	Run Enable 2	0.1	E.10	DigIn	0.2	1860	Interlock for closing command
P2.2.1.4	Fault Reset	0.1	E.10	DigIn	0.1	414	
P2.2.1.5	External Fault 1	0.1	E.10	DigIn	0.1	405	
P2.2.1.6	External Fault 2	0.1	E.10	DigIn	0.2	406	
P2.2.1.7	Enable U	0.1	E.10	DigIn	0.2	1515	
P2.2.1.8	Enable V	0.1	E.10	DigIn	0.2	1516	
P2.2.1.9	Enable W	0.1	E.10	DigIn	0.2	1517	
P2.2.1.10	Reset U	0.1	E.10	DigIn	0.2	1518	
P2.2.1.11	Reset V	0.1	E.10	DigIn	0.2	1520	
P2.2.1.12	Reset W	0.1	E.10	DigIn	0.2	1519	
P2.2.1.13	Overload U	0.1	E.10	DigIn	0.2	1521	
P2.2.1.14	Overload V	0.1	E.10	DigIn	0.2	1522	
P2.2.1.15	Overload W	0.1	E.10	DigIn	0.2	1523	
P2.2.1.16	I/O Term Control	0.1	E.10	DigIn	0.1	409	Force controlplace to remote I/O
P2.2.1.17	Keypad Control	0.1	E.10	DigIn	0.1	410	Force controlplace to local keypad
P2.2.1.18	Fieldbus Control	0.1	E.10	DigIn	0.1	411	Force controlplace to remote fieldbus

4.2.2 Options

Table 7: Options

Index	Parameter	Min.	Max.	Unit	Default	ID	Description
P2.2.2.1	INV Commands	0	65535			1091	

4.3 Output Signals

4.3.1 Digital Outputs

Table 8: Digital Outputs

Index	Parameter	Min.	Max.	Unit	Default	ID	Description
P2.3.1.1	Ready	0.1	E.10	DiOut	0.1	432	
P2.3.1.2	Run	0.1	E.10	DiOut	0.1	433	DCGuard is closed
P2.3.1.3	Fault	0.1	E.10	DiOut	0.1	434	
P2.3.1.4	Inverted Fault	0.1	E.10	DiOut	0.1	435	
P2.3.1.5	Warning	0.1	E.10	DiOut	0.1	436	
P2.3.1.6	DCGuard Closed	0.1	E.10	DiOut	0.1	445	DCGuard is fully closed
P2.3.1.7	U Cable OK	0.1	E.10	DiOut	0.1	1509	
P2.3.1.8	V Cable OK	0.1	E.10	DiOut	0.1	1510	
P2.3.1.9	W Cable OK	0.1	E.10	DiOut	0.1	1511	
P2.3.1.10	U High Load	0.1	E.10	DiOut	0.1	1512	
P2.3.1.11	V High Load	0.1	E.10	DiOut	0.1	1513	
P2.3.1.12	W High Load	0.1	E.10	DiOut	0.1	1514	
P2.3.1.13	Switch Lock	0.1	E.10	DiOut	0.1	1527	Interlock for mechanical disconnect

4.3.2 Analog Output 1

Table 9: Analog Output 1

Index	Parameter	Min.	Max.	Unit	Default	ID	Description
P2.3.2.1	Analog output 1 signal selection	0.1	E.10		0.1	464	TTF programming ⁽¹⁾
P2.3.2.2	Analog output 1 function	0	20		1	307	0 = Not used (4 mA/2 V) 1 = DCCurrent± (-100%...+100% DC-link current)
P2.3.2.3	Analog output 1 filter time	0.00	10.00	s	1.00	308	0 = No filtering
P2.3.2.4	Analog output 1 inversion	0	1		0	309	0 = Not inverted 1 = Inverted

Index	Parameter	Min.	Max.	Unit	Default	ID	Description
P2.3.2.5	Analog output 1 minimum	0	1		0	310	0 = 0 mA (0%) 1 = 4 mA (20%)
P2.3.2.6	Analog output 1 scale	10	1000	%	100	311	
P2.3.2.7	Analog output 1 offset	-100.00	100.00	%	0.00	375	

¹ See [6.10 "Terminal to Function" \(TTF\) Programming Principle](#).

4.3.3 Analog Output 2

Table 10: Analog Output 2

Index	Parameter	Min.	Max.	Unit	Default	ID	Description
P2.3.3.1	Analog output 2 signal selection	0.1	E.10		0.1	471	TTF programming ⁽¹⁾
P2.3.3.2	Analog output 2 function	0	20		4	472	0 = Not used (4 mA/2 V) 1 = DCCurrent± (-100%...+100% DC-link current)
P2.3.3.3	Analog output 2 filter time	0.00	10.00	s	1.00	473	0 = No filtering
P2.3.3.4	Analog output 2 inversion	0	1		0	474	0 = Not inverted 1 = Inverted
P2.3.3.5	Analog output 2 minimum	0	1		0	475	0 = 0 mA (0%) 1 = 4 mA (20%)
P2.3.3.6	Analog output 2 scale	10	1000	%	100	476	
P2.3.3.7	Analog output 2 offset	-100.00	100.00	%	0.00	477	

¹ See [6.10 "Terminal to Function" \(TTF\) Programming Principle](#).

4.3.4 Analog Output 3

Table 11: Analog Output 3

Index	Parameter	Min.	Max.	Unit	Default	ID	Description
P2.3.4.1	Analog output 3 signal selection	0.1	E.10		0.1	478	TTF programming ⁽¹⁾
P2.3.4.2	Analog output 3 function	0	20		5	479	0 = Not used (4 mA/2 V) 1 = DCCurrent± (-100%...+100% DC-link current)
P2.3.4.3	Analog output 3 filter time	0.00	10.00	s	1.00	480	0 = No filtering

Index	Parameter	Min.	Max.	Unit	Default	ID	Description
P2.3.4.4	Analog output 3 inversion	0	1		0	481	0 = Not inverted 1 = Inverted
P2.3.4.5	Analog output 3 minimum	0	1		0	482	0 = 0 mA (0%) 1 = 4 mA (20%)
P2.3.4.6	Analog output 3 scale	10	1000	%	100	483	
P2.3.4.7	Analog output 3 offset	-100.00	100.00	%	0.00	484	

¹ See [6.10 "Terminal to Function" \(TTF\) Programming Principle](#).

4.3.5 Supervision Limit

Table 12: Supervision Limit

Index	Parameter	Min.	Max.	Unit	Default	ID	Description
P2.3.3.1	Switch Lock Current Limit	0	100	%	5%	1862	Limit supervision for P2.3.1.13, ID1527

4.4 Limit Settings

4.4.1 Current Limit

Table 13: Current Limit

Index	Parameter	Min.	Max.	Unit	Default	ID	Description
P2.4.1.1	U Phase Trip Limit	0	300.0	%	150.0	1500	
P2.4.1.2	V Phase Trip Limit	0	300.0	%	150.0	1501	
P2.4.1.3	W Phase Trip Limit	0	300.0	%	150.0	1502	
P2.4.1.4	Fast Reclosing	0	1		0	1859	
P2.4.1.5	Prediction Gain	1	1000	%	100.0	673	
P2.4.1.6	SW Trip Response	0	2		1	1874	0 = No Action 1 = Warning information 2 = Fault 3 = Warning, keep control word

4.5 Drive Control Parameters

Table 14: Drive Control Parameters

Index	Parameter	Min.	Max.	Unit	Default	ID	Description
P2.5.1	Switching frequency	1.0	10.0	kHz	5.0	601	Controlled voltage ramp up switching frequency
P2.5.2	Pulse Ratio	0.00	50.00		15.00	606	
P2.5.3	Voltage Rise Time	0	25000	ms	200	1541	
P2.5.4	Control Options 1	0	65535		0	1707	
P2.5.5	Control Options 2	0	65535		0	1798	

4.5.1 Identification

Table 15: Identification

Index	Parameter	Min.	Max.	Unit	Default	ID	Description
P2.5.6.1	IU Offset	-1000	1000			668	
P2.5.6.2	IV Offset	-1000	1000			669	
P2.5.6.3	IW Offset	-1000	1000			670	

4.6 Master/Follower

Table 16: Master/Follower

Index	Parameter	Min.	Max.	Unit	Default	ID	Description
P2.6.1	MF Mode	0	0			1707	0 = Not in use

4.7 Fieldbus Parameters

Table 17: Fieldbus Parameters

Index	Parameter	Min.	Max.	Unit	Default	ID	Description
P2.7.1	FB Actual Selection	0	65535		73	1853	Select monitoring data with parameter ID Default: DC-Link Power [kW]
P2.7.2	GSW ID	0	65535		65	897	Default: FB Status Word
P2.7.3	Fieldbus process data out 1 selection	0	10000		1851	852	Default: U Phase Current
P2.7.4	Fieldbus process data out 2 selection	0	10000		1852	853	Default: V Phase Current
P2.7.5	Fieldbus process data out 3 selection	0	10000		1868	854	Default: W Phase Current
P2.7.6	Fieldbus process data out 4 selection	0	10000		8	855	Default: Unit Temperature
P2.7.7	Fieldbus process data out 5 selection	0	10000		0	856	
P2.7.8	Fieldbus process data out 6 selection	0	10000		0	857	

Index	Parameter	Min.	Max.	Unit	Default	ID	Description
P2.7.9	Fieldbus process data out 7 selection	0	10000		0	858	
P2.7.10	Fieldbus process data out 8 selection	0	10000		0	859	
P2.7.11	Fieldbus process data in 1 selection	0	10000		0	876	
P2.7.12	Fieldbus process data in 2 selection	0	10000		0	877	
P2.7.13	Fieldbus process data in 3 selection	0	10000		0	878	
P2.7.14	Fieldbus process data in 4 selection	0	10000		0	879	
P2.7.15	Fieldbus process data in 5 selection	0	10000		0	880	
P2.7.16	Fieldbus process data in 6 selection	0	10000		0	881	
P2.7.17	Fieldbus process data in 7 selection	0	10000		0	882	
P2.7.18	Fieldbus process data in 8 selection	0	10000		0	883	
P2.7.19	State Machine	0	2		0	896	0 = Basic 1 = Standard (bypass) 2 = DCGuard 1 (bypass)

4.8 Protections

Table 18: Protections

Index	Parameter	Min.	Max.	Unit	Default	ID	Description
M2.8.1	General						See 4.8.1 General
M2.8.2	U Phase Over Load Protection						See 4.8.2 U Phase Over Load Protection
M2.8.3	V Phase Over Load Protection						See 4.8.3 V Phase Over Load Protection
M2.8.4	W Phase Over Load Protection						See 4.8.4 W Phase Over Load Protection
M2.8.5	U Phase Current protection						See 4.8.5 U Phase Current Protection
M2.8.6	V Phase Current protection						See 4.8.6 V Phase Current Protection
M2.8.7	W Phase Current protection						See 4.8.7 W Phase Current Protection
P2.8.8	Reset Data Logger	0	1		0	1857	0 = No 1 = Yes
P2.8.9	Fault Simulation	0	65535		0	1569	
P2.8.10	Disable Stop Lock	0	1		0	1086	0 = No 1 = Yes

4.8.1 General

Table 19: General

Index	Parameter	Min.	Max.	Unit	Default	ID	Description
P2.8.1.1	Earth Fault Current	0.0	510	%	50	1333	
P2.8.1.2	Vdc Trip Limit	0	1600	V DC	1500	1858	
P2.8.1.3	FB Fault Slot D Response	0	3		2	733	0 = No response 1 = Warning 2 = Fault 3 = Warning, keep control word
P2.8.1.4	KP PC Fault Mode	0	3		0	1329	0 = No response 1 = Warning 2 = Fault 3 = Warning, keep control word

4.8.2 U Phase Over Load Protection

Table 20: U Phase Over Load Protection

Index	Parameter	Min.	Max.	Unit	Default	ID	Description
P2.8.2.1	U Over Load Response	0	2		2	1524	0 = No response 1 = Warning 2 = Fault
P2.8.2.2	Minimum Input	0.0	300.0	%	101.0	1504	
P2.8.2.3	Maximum Input	0.0	300.0	%	130.0	1505	
P2.8.2.4	Maximum Step	0.0	10000		20	1506	

4.8.3 V Phase Over Load Protection

Table 21: V Phase Over Load Protection

Index	Parameter	Min.	Max.	Unit	Default	ID	Description
P2.8.3.1	V Over Load Response	0	2		2	1525	0 = No response 1 = Warning 2 = Fault
P2.8.3.2	Minimum Input	0.0	300.0	%	101.0	1531	
P2.8.3.3	Maximum Input	0.0	300.0	%	130.0	1532	

Index	Parameter	Min.	Max.	Unit	Default	ID	Description
P2.8.3.4	Maximum Step	0.0	10000		20	1533	

4.8.4 W Phase Over Load Protection

Table 22: W Phase Over Load Protection

Index	Parameter	Min.	Max.	Unit	Default	ID	Description
P2.8.4.1	W Over Load Response	0	2		2	1526	0 = No response 1 = Warning 2 = Fault
P2.8.4.2	Minimum Input	0.0	300.0	%	101.0	1534	
P2.8.4.3	Maximum Input	0.0	300.0	%	130.0	1535	
P2.8.4.4	Maximum Step	0.0	10000		20	1536	

4.8.5 U Phase Current Protection

Table 23: U Phase Current Protection

Index	Parameter	Min.	Max.	Unit	Default	ID	Description
P2.8.5.1	U High Current Response	0	2		0	1550	0 = No response 1 = Warning 2 = Fault
P2.8.5.2	U Trip Limit	0.0	400.0	%	105.0	1551	
P2.8.5.3	U Trip Delay	0.0	60.0	s	1.00	1552	

4.8.6 V Phase Current Protection

Table 24: V Phase Current Protection

Index	Parameter	Min.	Max.	Unit	Default	ID	Description
P2.8.6.1	V High Current Response	0	2		0	1553	0 = No response 1 = Warning 2 = Fault
P2.8.6.2	V Trip Limit	0.0	400.0	%	105.0	1554	
P2.8.6.3	V Trip Delay	0.0	60.0	s	1.00	1555	

4.8.7 W Phase Current Protection

Table 25: W Phase Current Protection

Index	Parameter	Min.	Max.	Unit	Default	ID	Description
P2.8.7.1	W High Current Response	0	2		0	1556	0 = No response 1 = Warning 2 = Fault
P2.8.7.2	W Trip Limit	0.0	400.0	%	105.0	1558	
P2.8.7.3	W Trip Delay	0.0	60.0	s	1.00	1559	

4.9 Keypad Control

Table 26: Keypad Control

Index	Parameter	Min.	Max.	Unit	Default	ID	Description
P3.1	Control place	0	2		2	1403	0 = Fieldbus 1 = I/O terminal 2 = Keypad
P3.2	License Key	0	65535		0	1995	
P3.3	Enable KP Close	0	1		0	1863	0 = Disable 1 = Enable
P3.4	Enable KP Open	0	1		0	1864	0 = Disable 1 = Enable

4.10 System Menu (Control Keypad: Menu M6)

For parameters and functions related to the general use of the AC drive, such as application and language selection, customised parameter sets or information about the hardware and software, see the product's User Manual.

4.11 Expander Boards (Control Keypad: Menu M7)

The M7 menu shows the expander and option boards attached to the control board and board related information. For more information, see the product's User Manual.

5 Monitoring Value Descriptions

5.1 Monitoring 1 Values

5.1.1 (ID 3) DC-Link Amps

Location in the menu: **V1.1.1**

This monitoring value shows the measured DC-link current in amperes. The accuracy of the shown current value depends on the nominal current of the drive.

Table 27: Accuracy of the Monitoring Value

Nominal voltage	Drive rating	Accuracy of monitoring value
380–500 V AC	NX0003–NX0007	0.01 A
	NX0009–NX0300	0.1 A
	NX0385–NX2643	1 A
525–690 V AC	NX0004–NX0013	0.01 A
	NX0018–NX0261	0.1 A
	NX0325–NX1500	1 A

5.1.2 (ID 1861) DC-Link Current

Location in the menu: **V1.1.2**

This monitoring value shows the calculated DC-link current in %.

- *DC-Link Current* > 0: Current is flowing from the DC-link side to the motor phase side.
- *DC-Link Current* < 0: Current is flowing from the motor phase side to the DC-link side.

The definition for 100% current:

- Air-cooled drives: 100% current = I_L
- Liquid-cooled drives: 100% current = I_{TH}

5.1.3 (ID 1108) DC-Link Voltage

Location in the menu: **V1.1.3**

This monitoring value shows the measured DC-link voltage in V DC.

5.1.4 (ID 8) Unit Temperature

Location in the menu: **V1.1.4**

This monitoring value shows the measured heat sink temperature of the drive.

5.1.5 (ID 73) Power kW

Location in the menu: **V1.1.5**

This monitoring value shows the calculated value of the power flow in kW. The accuracy of the shown power value depends on the nominal current of the drive.

Table 28: Accuracy of the Monitoring Value

Nominal voltage	Drive rating	Accuracy of monitoring value
380–500 V AC	NX0003	0.01 kW
	NX0004–NX0205	0.1 kW
	NX0261–NX2643	1 kW
525–690 V AC	NX0004–NX0005	0.01 kW
	NX0007–NX0170	0.1 kW
	NX0208–NX1500	1 kW

5.1.6 (ID 5) DC-Link Power

Location in the menu: **V1.1.6**

This monitoring value shows the calculated power in % of the nominal power. The value shows 100% when at unit nominal current and at nominal DC-link voltage.

The definition for nominal DC-link voltage:

- 500 V units: 675 V (1.35×500 V)
- 690 V units: 931 V (1.35×690 V)

5.1.7 (ID 26) Analog Output 1

Location in the menu: **V1.1.7**

This monitoring value shows the status of the *Analog output 1* in %.

- 0% = 0 mA / 0 V
- 100% = 20 mA / 10 V

5.1.8 (ID 31) Analog Output 2

Location in the menu: **V1.1.8**

This monitoring value shows the status of the *Analog output 2* in %.

- 0% = 0 mA / 0 V
- 100% = 20 mA / 10 V

5.1.9 (ID 32) Analog Output 3

Location in the menu: **V1.1.9**

This monitoring value shows the status of the *Analog output 3* in %.

- 0% = 0 mA / 0 V
- 100% = 20 mA / 10 V

5.2 Monitoring 2 Values

5.2.1 (ID 44) DC Voltage

Location in the menu: **V1.2.1**

This monitoring value shows the unfiltered DC-link voltage in V.

5.2.2 (ID 1851) U Phase Current

Location in the menu: **V1.2.2**

This monitoring value shows the measured U phase current in amperes. The accuracy of the shown current value depends on the nominal current of the drive.

Table 29: Accuracy of the Monitoring Value

Nominal voltage	Drive rating	Accuracy of monitoring value
380–500 V AC	NX0003–NX0007	0.01 A
	NX0009–NX0300	0.1 A
	NX0385–NX2643	1 A
525–690 V AC	NX0004–NX0013	0.01 A
	NX0018–NX0261	0.1 A
	NX0325–NX1500	1 A

5.2.3 (ID 1852) V Phase Current

Location in the menu: **V1.2.3**

This monitoring value shows the measured V phase current in amperes. The accuracy of the shown current value depends on the nominal current of the drive.

See [5.2.2 \(ID 1851\) U Phase Current](#).

5.2.4 (ID 1853) W Phase Current

Location in the menu: **V1.2.4**

This monitoring value shows the measured W phase current in amperes. The accuracy of the shown current value depends on the nominal current of the drive.

See [5.2.2 \(ID 1851\) U Phase Current](#).

5.2.5 (ID 1871) U Phase Power

Location in the menu: **V1.2.5**

This monitoring value shows the value of the power flow in phase U. The accuracy of the shown power value depends on the nominal current of the drive.

Table 30: Accuracy of the Monitoring Value

Nominal voltage	Drive rating	Accuracy of monitoring value
380–500 V AC	NX0003–NX0007	0.01 kW
	NX0009–NX0300	0.1 kW
	NX0385–NX2643	1 kW
525–690 V AC	NX0004–NX0013	0.01 kW
	NX0018–NX0261	0.1 kW
	NX0325–NX1500	1 kW

5.2.6 (ID 1872) V Phase Power

Location in the menu: **V1.2.6**

This monitoring value shows the value of the power flow in phase V. The accuracy of the shown power value depends on the nominal current of the drive.

See [5.2.5 \(ID 1871\) U Phase Power](#).

5.2.7 (ID 1873) W Phase Power

Location in the menu: **V1.2.7**

This monitoring value shows the value of the power flow in phase W. The accuracy of the shown power value depends on the nominal current of the drive.

See [5.2.5 \(ID 1871\) U Phase Power](#).

5.2.8 (ID 43) Status Word

Location in the menu: **V1.2.8**

This monitoring value shows the bit-coded status of the AC drive. The application status word combines different drive status values to one data word.

See [6.11 Fieldbus Control In Detail](#).

Table 31: Status Word Description

Bit	False	True
b0		
b1	Not in ready state	Ready

Bit	False	True
b2	Not running (open)	Running (closed)
b3	No fault	Fault
b4		
b5		
b6	Run disabled (close disabled)	Run enabled (close enabled)
b7	No warning	Warning
b8		
b9		
b10		
b11		
b12	No run request (no close request)	Run request (close request)
b13		
b14	DCGuard open	DCGuard closed
b15		

5.2.9 (ID 56) DIN Status 1

Location in the menu: **V1.2.9**

This monitoring value shows the bit-coded status of the digital input signals.

Table 32: Status Word Description

Bit	DIN Status Word 1	DIN Status Word 2
b0	DIN: A.1	DIN: C.5
b1	DIN: A.2	DIN: C.6
b2	DIN: A.3	DIN: D.1
b3	DIN: A.4	DIN: D.2
b4	DIN: A.5	DIN: D.3
b5	DIN: A.6	DIN: D.4
b6	DIN: B.1	DIN: D.5
b7	DIN: B.2	DIN: D.6
b8	DIN: B.3	DIN: E.1
b9	DIN: B.4	DIN: E.2
b10	DIN: B.5	DIN: E.3
b11	DIN: B.6	DIN: E.4
b12	DIN: C.1	DIN: E.5
b13	DIN: C.2	DIN: E.6

Bit	DIN Status Word 1	DIN Status Word 2
b14	DIN: C.3	
b15	DIN: C.4	

5.2.10 (ID 57) DIN Status 2

Location in the menu: **V1.2.10**

This monitoring value shows the bit-coded status of the digital input signals.

See [5.2.9 \(ID 56\) DIN Status 1](#).

5.2.11 (ID 1869) DCGuard Status Word

Location in the menu: **V1.2.11**

This monitoring value shows the bit-coded status of the diagnostic signals for the DCGuard.

Table 33: Status Word Description

Bit	Function	Notes
b0	U phase active	
b1	V phase active	
b2	W phase active	
b3	U phase fault	
b4	V phase fault	
b5	W phase fault	
b6	Cutter active	Reserved for testing purposes
b7	I sum trip	Reserved for testing purposes
b8	F1 masked	Reserved for testing purposes
b9	U phase state	Reserved for testing purposes
b10	V phase state	Reserved for testing purposes
b11	W phase state	Reserved for testing purposes
b12		
b13		
b14		
b15		

5.2.12 (ID 1870) DCGuard Control Status

Location in the menu: **V1.2.12**

This monitoring value shows the bit-coded status of the control commands from the DCGuard application software to the system software.

Table 34: Status Word Description

Bit	Function	Notes
b0	On command U phase	
b1	On command V phase	
b2	On command W phase	
b3	Fault reset U phase	
b4	Fault reset V phase	
b5	Fault reset W phase	
b6	Disable SD start	Reserved for testing purposes
b7	Disable ramp	Reserved for testing purposes
b8	Disable sequence charge	Reserved for testing purposes
b9		
b10		
b11		
b12		
b13		
b14		
b15		

5.2.13 (ID 97) Data Logger Trigger Word

Location in the menu: V1.2.13

This monitoring value shows the bit-coded trigger values of the data logger.

Table 35: Status Word Description

Bit	Function	Notes
b0	Fault status	The data logger is triggered when there is a fault.
b1	Warning status	The data logger is triggered when there is a warning.
b2	Auto-reset warning	The data logger is triggered when there is a fault that has been defined to be automatically reset. This bit can be used to get the first fault situation.
b3	Fault status OR Warning status	B0 or B1 triggering situation has happened.
b4	Fault status OR Auto-reset warning	B0 or B2 triggering situation has happened.
b5		
b6		

Bit	Function	Notes
b7		
b8		
b9		
b10		
b11		
b12		
b13		
b14		
b15		

5.3 Fieldbus Monitoring Values

5.3.1 (ID 1160) Fieldbus Control Word

Location in the menu: **V1.3.1**

This monitoring value shows the bit-coded status of the fieldbus control word. See [6.11 Fieldbus Control In Detail](#).

5.3.2 (ID 65) Fieldbus Status Word

Location in the menu: **V1.3.2**

This monitoring value shows the bit-coded status of the fieldbus status word. See [6.11 Fieldbus Control In Detail](#).

5.3.3 (ID 37) Last Active Fault

Location in the menu: **V1.3.3**

This monitoring value shows the fault code of the latest activated fault that is not reset.

5.3.4 (ID 74) Last Active Alarm

Location in the menu: **V1.3.4**

This monitoring value shows the fault code of the latest activated alarm that is not reset.

5.3.5 (ID 1172) Fault Word 1

Location in the menu: **V1.3.5**

This monitoring value shows the bit-coded status of the *Fault Word 1*.

Table 36: Status Word Description

Bit	False	True
b0		F31 IGBT temperature F41 IGBT temperature
b1		F2 Overvoltage fault
b2		F9 Undervoltage fault
b3		F1 Overcurrent fault
b4		F66 UV phase overcurrent
b5		F73 VW phase overcurrent
b6		F70 UVW phase overcurrent
b7		F63 U phase overcurrent
b8		F64 V phase overcurrent
b9		F65 W phase overcurrent
b10		F83 U phase overload F84 V phase overload F85 W phase overload
b11		F52 Keypad communication fault F52 PC communication fault
b12		F53 Fieldbus communication fault
b13		F59 System bus communication fault ⁽¹⁾
b14		F54 Slot fault
b15		F14 Drive overtemperature

¹ Not used.

5.3.6 (ID 1174) Alarm Word 1

Location in the menu: **V1.3.6**

This monitoring value shows the bit-coded status of the *Alarm Word 1*.

Table 37: Status Word Description

Bit	False	True
b0		
b1		
b2		
b3		

Bit	False	True
b4		
b5		
b6		
b7		
b8		
b9		
b10		F83 U phase overload F84 V phase overload F85 W phase overload
b11		
b12		
b13		
b14		
b15		F14 Drive overtemperature

6 Parameter Descriptions

6.1 Basic Parameters

6.1.1 (ID 1503) Cabling

Location in the menu: **P2.1.1**

Use this parameter to select the cabling type of the DCGuard unit. Select the parameter according to the cabling set-up used in the peer-to-peer installation. The available options are:

- 0 = Not selected
The default setting. Drive operation is disabled.
- 1 = Three cable connection, U = DC+, V = DC-, W = DC+

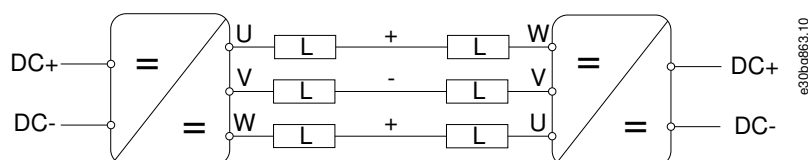


Illustration 4: DCGuard Three Cable Connection

- 2 = Two cable connection, U = DC+, V = DC-, W = not connected

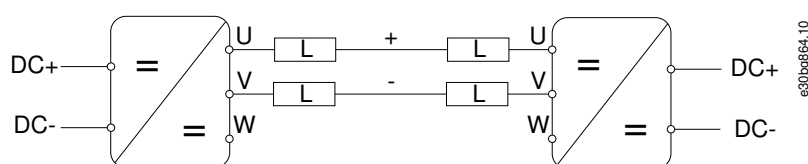


Illustration 5: DCGuard Two Cable Connection with Phases U and V

- 3 = Two cable connection, V = DC-, W = DC+, U = not connected

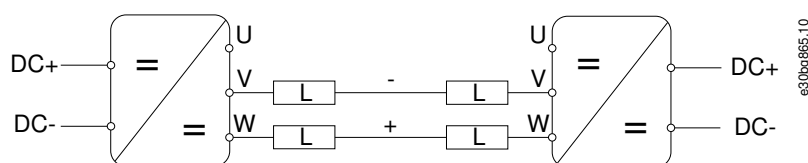


Illustration 6: DCGuard Two Cable Connection with Phases V and W

In a two cable peer-to-peer system, it is recommended to use the following set-up for the DCGuard units:

- DCGuard 1: U = DC+, V = DC-, W = not connected
 - Cabling type 2
- DCGuard 2: V = DC-, W = DC+, U = not connected
 - Cabling type 3

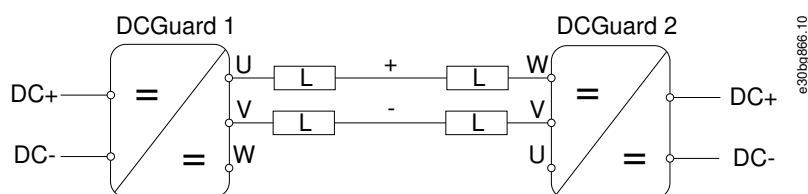


Illustration 7: The Recommended DCGuard Two Cable Connection

6.2 Input Signals

6.2.1 Digital Inputs

6.2.1.1 (ID 403) Start Signal 1

Location in the menu: **P2.2.1**

Use this parameter to select the digital input signal (*Start signal 1*) that starts and stops the drive. This parameter is used to select the input for:

- Switch closed: Run Request signal (Close command)
- Switch open: Stop Request signal (Open command)

6.2.1.2 (ID 407) Run Enable 1

Location in the menu: **P2.2.2**

Use this parameter to select the digital input signal that sets the drive to Ready state.

When the signal is low, the DCGuard loses READY status.

- Switch open: Closing of the DCGuard is disabled. If already closed, also opens the DCGuard.
- Switch closed: Closing of the DCGuard is enabled.

6.2.1.3 (ID 1860) Run Enable 2

Location in the menu: **P2.2.3**

Use this parameter to select the digital input signal that sets the drive to Ready state.

When the signal is low, the DCGuard loses READY status.

- Switch open: Closing of the DCGuard is disabled.
- Switch closed: Closing of the DCGuard is enabled.

6.2.1.4 (ID 414) Fault Reset

Location in the menu: **P2.2.4**

Use this parameter to select the digital input signal that resets all active faults.

CLOSED = Resets all active faults. Rising edge resets the faults.

6.2.1.5 (ID 405) External Fault 1

Location in the menu: **P2.2.5**

Use this parameter to select the digital input signal that activates an external fault.

Switch open: Fault 51 is shown and the motor stopped.

6.2.1.6 (ID 406) External Fault 2

Location in the menu: **P2.2.6**

Use this parameter to select the digital input signal that activates an external fault.

Switch open: Fault 81 is shown and the motor stopped.

6.2.1.7 (ID 1515) Enable U

Location in the menu: **P2.2.7**

Use this parameter to select the digital input signal that enables U phase operation.

The parameter is used for an interlock from the other unit that is operating in bridge mode to stop the current flow.

6.2.1.8 (ID 1516) Enable V

Location in the menu: **P2.2.8**

Use this parameter to select the digital input signal that enables V phase operation.

The parameter is used for an interlock from the other unit that is operating in bridge mode to stop the current flow.

6.2.1.9 (ID 1517) Enable W

Location in the menu: **P2.2.9**

Use this parameter to select the digital input signal that enables W phase operation.

The parameter is used for an interlock from the other unit that is operating in bridge mode to stop the current flow.

6.2.1.10 (ID 1518) Reset U

Location in the menu: **P2.2.10**

Use this parameter to select the digital input signal that resets only the fault for phase U.

6.2.1.11 (ID 1520) Reset V

Location in the menu: **P2.2.11**

Use this parameter to select the digital input signal that resets only the fault for phase V.

6.2.1.12 (ID 1519) Reset W

Location in the menu: **P2.2.12**

Use this parameter to select the digital input signal that resets only the fault for phase W.

6.2.1.13 (ID 1521) Overload U

Location in the menu: **P2.2.13**

Use this parameter to select the digital input signal to indicate overload on this phase from the U phase of an adjacent drive.

6.2.1.14 (ID 1522) Overload V

Location in the menu: **P2.2.14**

Use this parameter to select the digital input signal to indicate overload on this phase from the V phase of an adjacent drive.

6.2.1.15 (ID 1523) Overload W

Location in the menu: **P2.2.15**

Use this parameter to select the digital input signal to indicate overload on this phase from the W phase of an adjacent drive.

6.2.1.16 (ID 409) I/O Terminal Control

Location in the menu: **P2.2.16**

Use this parameter to select the digital input signal that switches the control place and the frequency reference source to I/O terminal (from any control place).

Switch closed: Force control place to I/O terminal.

This input has priority over parameters ID 410 and ID 411.

6.2.1.17 (ID 410) Keypad Control

Location in the menu: **P2.2.17**

Use this parameter to select the digital input signal that switches the control place and the frequency reference source to Keypad (from any control place).

Switch closed: Force control place to keypad.

This input has priority over parameter ID 411 but preceded in priority by ID 409.

6.2.1.18 (ID 411) Fieldbus Control

Location in the menu: **P2.2.18**

Use this parameter to select the digital input signal that switches the control place and the frequency reference source to Fieldbus (from I/O A, I/O B or local control).

Switch closed: Force control place to fieldbus.

This input is preceded in priority by parameters ID409 and ID410.

6.2.2 Options

6.2.2.1 (ID 1091) INV Commands

Location in the menu: **P2.2.2.1**

Use this parameter to select which input signal operation is inverted.

Table 38: Selections for Parameter ID 1091

Selection	Description
B00 (+1)	Invert external fault 1
B01 (+2)	Invert external fault 2

6.3 Output Signals

6.3.1 Digital Outputs

6.3.1.1 (ID 432) Ready

Location in the menu: **P2.3.1.1**

Use this parameter to select a digital output for the *Ready* status.

Ready status: DCGuard is ready to be closed.

6.3.1.2 (ID 433) Run

Location in the menu: **P2.3.1.2**

Use this parameter to select a digital output for the *Run* status.

Run status: The DCGuard is closed.

This signal goes high when the DCGuard is starting to ramp up the output voltage.

6.3.1.3 (ID 434) Fault

Location in the menu: **P2.3.1.3**

Use this parameter to select a digital output for the *Fault* status.

Fault status: The DCGuard is in fault state.

6.3.1.4 (ID 435) Inverted Fault

Location in the menu: **P2.3.1.4**

Use this parameter to select a digital output for the fault inverted status.

Inverted fault status: No active faults.

6.3.1.5 (ID 436) Warning

Location in the menu: **P2.3.1.5**

Use this parameter to select a digital output for the *Warning* status.

Warning status: General warning signal.

6.3.1.6 (ID 445) DCGuard Closed

Location in the menu: **P2.3.1.6**

Use this parameter to select a digital output for the *DCGuard closed* status.

DCGuard closed status: Voltage has been ramped up and the DCGuard is fully closed.

6.3.1.7 (ID 1509) U Cable OK

Location in the menu: **P2.3.1.7**

Use this parameter to select a digital output for the *U cable OK* status.

U cable OK: The U phase is operating and has not reached the overload tripping limit. Can be overloading but has not reached the tripping limit. The signal goes low when the tripping limit is reached.

6.3.1.8 (ID 1510) V Cable OK

Location in the menu: **P2.3.1.8**

Use this parameter to select a digital output for the *V cable OK* status.

V cable OK: The V phase is operating and has not reached the overload tripping limit. Can be overloading but has not reached the tripping limit. The signal goes low when the tripping limit is reached.

6.3.1.9 (ID 1511) W Cable OK

Location in the menu: **P2.3.1.9**

Use this parameter to select a digital output for the *W cable OK* status.

W cable OK: The W phase is operating and has not reached the overload tripping limit. Can be overloading but has not reached the tripping limit. The signal goes low when the tripping limit is reached.

6.3.1.10 (ID 1512) U High Load

Location in the menu: **P2.3.1.10**

Use this parameter to select a digital output for the *U High Load* status.

U High Load: The U phase is loaded more than defined in the minimum overload value P2.8.2.2 Minimum Input.

6.3.1.11 (ID 1513) V High Load

Location in the menu: **P2.3.1.11**

Use this parameter to select a digital output for the *V High Load* status.

V High Load: The V phase is loaded more than defined in the minimum overload value P2.8.3.2 Minimum Input.

6.3.1.12 (ID 1514) W High Load

Location in the menu: **P2.3.1.12**

Use this parameter to select a digital output for the *W High Load* status.

W High Load: The W phase is loaded more than defined in the minimum overload value P2.8.4.2 Minimum Input.

6.3.1.13 (ID 1527) Switch Lock

Location in the menu: **P2.3.1.13**

Use this parameter to select a digital output for the mechanical disconnecter interlocking.

- 0 = DCGuard open **and** DC-link current < Switch Lock Current Limit (ID1862)
- 1 = DCGuard closed **or** DC-link current > Switch Lock Current Limit (ID1862)

6.3.2 Analog Outputs

6.3.2.1 Parameter Set-up Examples

Example:

Parameter set-up for a 0–20 mA analog output signal (to *Analog Output 1*):

- $P2.3.2.1 = \text{AnOUT:A.1}$
- $P2.3.2.2 = 1$ (DCCurrent±)
- $P2.3.2.3 = 1.00 \text{ s}$
- $P2.3.2.4 = 0$ (Not inverted)
- $P2.3.2.5 = 0$ (0 mA)
- $P2.3.2.6 = 50\%$

Example:

Parameter set-up for a 4–20 mA analog output signal (to *Analog Output 1*):

- $P2.3.2.1 = \text{AnOUT:A.1}$
- $P2.3.2.2 = 1$ (DCCurrent±)
- $P2.3.2.3 = 1.00 \text{ s}$
- $P2.3.2.4 = 0$ (Not inverted)
- $P2.3.2.5 = 1$ (4 mA)
- $P2.3.2.6 = 40\%$

6.3.2.2 Analog Output 1

6.3.2.2.1 (ID 464) Analog Output 1 Signal Selection

Location in the menu: **P2.3.2.1**

Use this parameter to connect the analog output signal 1 to the selected analog output.

The signal selection is done with "Terminal to Function" (TTF) programming. See [6.10 "Terminal to Function" \(TTF\) Programming Principle](#).

6.3.2.2.2 (ID 307) Analog Output 1 Function

Location in the menu: **P2.3.2.2**

Location in the menu:

Use this parameter to select the function for the analog output 1 signal.

6.3.2.2.3 (ID 308) Analog Output 1 Filter Time

Location in the menu: **P2.3.2.3**

Use this parameter to set the filtering time of the analog output 1 signal.

Setting this parameter value to 0 deactivates filtering.

First order filtering is used for analog output signals.

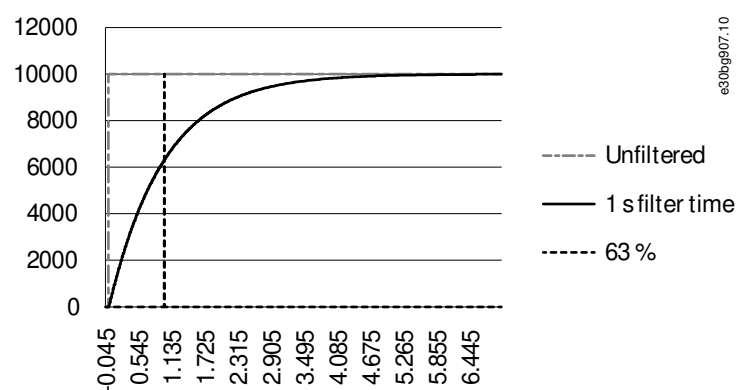


Illustration 8: Analog Output Filtering

6.3.2.2.4 (ID 309) Analog Output 1 Inversion

Location in the menu: **P2.3.2.4**

Use this parameter to invert the analog output 1 signal.

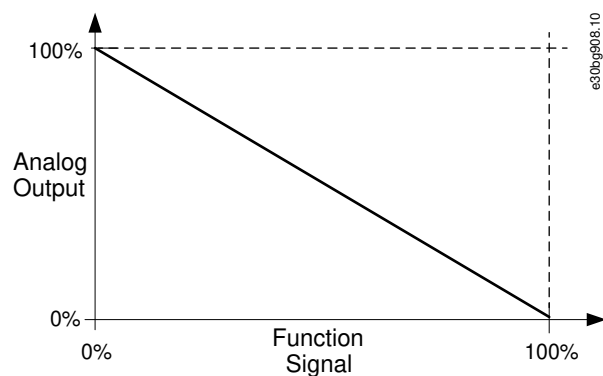


Illustration 9: Analog Output Inverting

6.3.2.2.5 (ID 310) Analog Output 1 Minimum

Location in the menu: **P2.3.2.5**

Use this parameter to set the minimum value of the analog output 1 signal.

The parameter defines the signal minimum to either 0 mA or 4 mA (living zero). Note the difference in analog output scaling in parameter ID 311.

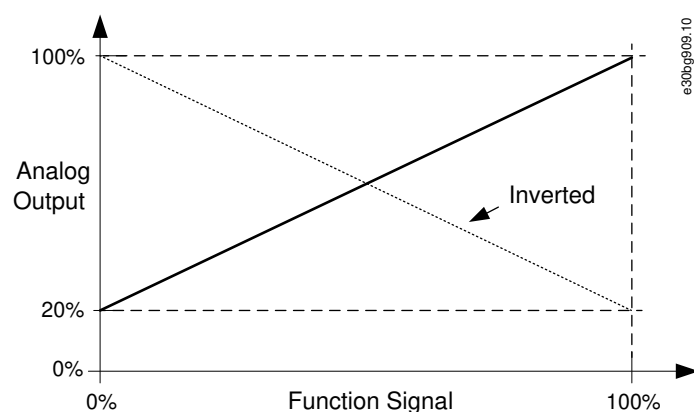


Illustration 10: Analog Output Minimum

6.3.2.2.6 (ID 311) Analog Output 1 Scale

Location in the menu: **P2.3.2.6**

Use this parameter to set the scaling factor for the analog 1 output.

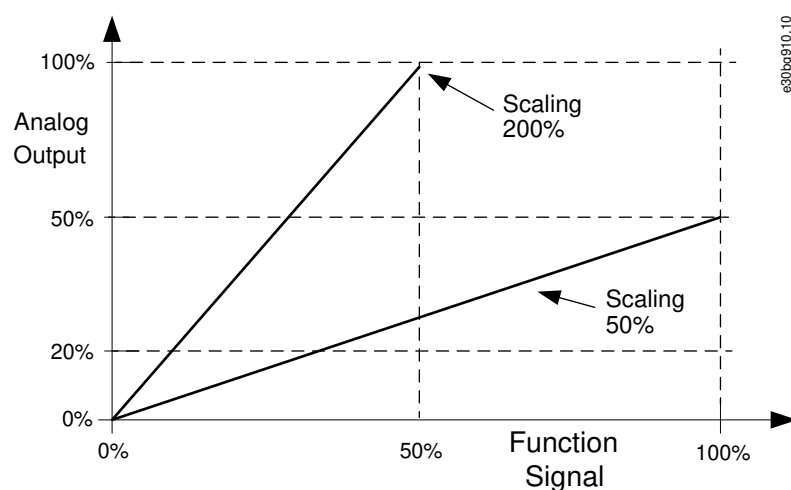


Illustration 11: Analog Output Scaling

6.3.2.2.7 (ID 375) Analog Output 1 Offset

Location in the menu: **P2.3.2.7**

Use this parameter to add offset to the analog output 1.

Add -100.0% to 100.0% to the analog output signal.

In the illustration, the 50% scaling signal has been given 20% offset and the 200% scaling has been given 50% offset.

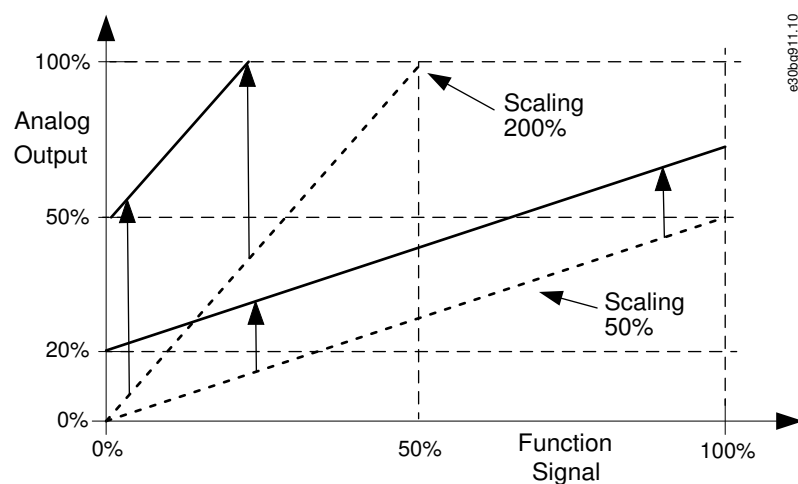


Illustration 12: Analog Output Offset Examples

6.3.2.3 Analog Output 2

6.3.2.3.1 (ID 471) Analog Output 2 Signal Selection

Location in the menu: **P2.3.3.1**

Use this parameter to connect the analog output signal 2 to the selected analog output.

The signal selection is done with "Terminal to Function" (TTF) programming. See [6.10 "Terminal to Function" \(TTF\) Programming Principle](#).

6.3.2.3.2 (ID 472) Analog Output 2 Function

Location in the menu: **P2.3.3.2**

Use this parameter to select the function for the analog output 2 signal.

- 0 = Not used (4 mA/2 V)
- 1 = DCCurrent± (-100%...+100% DC-link current)

6.3.2.3.3 (ID 473) Analog Output 2 Filter Time

Location in the menu: **P2.3.3.3**

Use this parameter to set the filtering time of the analog output 2 signal.

Setting this parameter value to 0 deactivates filtering.

First order filtering is used for analog output signals.

See [6.3.2.2.3 \(ID 308\) Analog Output 1 Filter Time](#).

6.3.2.3.4 (ID 474) Analog Output 2 Inversion

Location in the menu: **P2.3.3.4**

Use this parameter to invert the analog output 2 signal.

See [6.3.2.2.4 \(ID 309\) Analog Output 1 Inversion](#).

6.3.2.3.5 (ID 475) Analog Output 2 Minimum

Location in the menu: **P2.3.3.5**

Use this parameter to set the minimum value of the analog output 2 signal.

The parameter defines the signal minimum to either 0 mA or 4 mA (living zero). Note the difference in analog output scaling in parameter ID476.

See [6.3.2.2.5 \(ID 310\) Analog Output 1 Minimum](#).

6.3.2.3.6 (ID 476) Analog Output 2 Scale

Location in the menu: **P2.3.3.6**

Use this parameter to set the scaling factor for the analog 2 output.

See [6.3.2.2.6 \(ID 311\) Analog Output 1 Scale](#).

6.3.2.3.7 (ID 477) Analog Output 2 Offset

Location in the menu: **P2.3.3.7**

Use this parameter to add offset to the analog output 2.

Add -100.0% to 100.0% to the analog output signal.

See [6.3.2.2.7 \(ID 375\) Analog Output 1 Offset](#).

6.3.2.4 Analog Output 3

6.3.2.4.1 (ID 478) Analog Output 3 Signal Selection

Location in the menu: **P2.3.4.1**

Use this parameter to connect the analog output signal 3 to the selected analog output.

The signal selection is done with "Terminal to Function" (TTF) programming. See [6.10 "Terminal to Function" \(TTF\) Programming Principle](#).

6.3.2.4.2 (ID 479) Analog Output 3 Function

Location in the menu: **P2.3.4.2**

Use this parameter to select the function for the analog output 3 signal.

- 0 = Not used (4 mA/2 V)
- 1 = DCCurrent $\pm$ (-100%...+100% DC-link current)

6.3.2.4.3 (ID 480) Analog Output 3 Filter Time

Location in the menu: **P2.3.4.3**

Use this parameter to set the filtering time of the analog output 3 signal.

Setting this parameter value to 0 deactivates filtering.

First order filtering is used for analog output signals.

See [6.3.2.2.3 \(ID 308\) Analog Output 1 Filter Time](#).

6.3.2.4.4 (ID 481) Analog Output 3 Inversion

Location in the menu: **P2.3.4.4**

Use this parameter to invert the analog output 3 signal.

See [6.3.2.2.4 \(ID 309\) Analog Output 1 Inversion](#).

6.3.2.4.5 (ID 482) Analog Output 3 Minimum

Location in the menu: **P2.3.4.5**

Use this parameter to set the minimum value of the analog output 3 signal.

The parameter defines the signal minimum to either 0 mA or 4 mA (living zero).

Note the difference in analog output scaling in parameter ID 483.

See [6.3.2.2.5 \(ID 310\) Analog Output 1 Minimum](#).

6.3.2.4.6 (ID 483) Analog Output 3 Scale

Location in the menu: **P2.3.4.6**

Use this parameter to set the scaling factor for the analog 3 output.

See [6.3.2.2.6 \(ID 311\) Analog Output 1 Scale](#).

6.3.2.4.7 (ID 484) Analog Output 3 Offset

Location in the menu: **P2.3.4.7**

Use this parameter to add offset to the analog output 3.

Add -100.0% to 100.0% to the analog output signal.

See [6.3.2.2.7 \(ID 375\) Analog Output 1 Offset](#).

6.3.3 Supervision Limit

6.3.3.1 (ID 1862) Switch Lock Current Limit

Location in the menu: **P2.3.5.1**

Use this parameter to set the supervision limit for the parameter *P2.3.1.13 Switch Lock* (ID 1527).

6.4 Limit Settings

6.4.1 Current Limit

6.4.1.1 (ID 1500) U Phase Trip Limit

Location in the menu: **P2.4.1.1**

Use this parameter to set the trip limit for the rapid current cut-off in the U phase. The tripping limit is set in % of the nominal current. The default setting in the peer-to-peer topology is 150%. The trip triggers fault F63.

- Nominal current in air-cooled inverter units = I_L
- Nominal current in liquid-cooled inverter units = I_{TH}

The system software handles the current cut-off functionality. The functionality depends on a sufficient inductance in the output filter. Standard dU/dt filters do not have enough inductance to ensure an exact tripping level.

6.4.1.2 (ID 1501) V Phase Trip Limit

Location in the menu: **P2.4.1.2**

Use this parameter to set the trip limit for the rapid current cut-off in the V phase. The tripping limit is set in % of the nominal current. The default setting in the peer-to-peer topology is 150%. The trip triggers fault F64.

- Nominal current in air-cooled inverter units = I_L
- Nominal current in liquid-cooled inverter units = I_{TH}

The system software handles the current cut-off functionality. The functionality depends on a sufficient inductance in the output filter. Standard dU/dt filters do not have enough inductance to ensure an exact tripping level.

6.4.1.3 (ID 1502) W Phase Trip Limit

Location in the menu: **P2.4.1.3**

Use this parameter to set the trip limit for the rapid current cut-off in the W phase. The tripping limit is set in % of the nominal current. The default setting in the peer-to-peer topology is 150%. The trip triggers fault F65.

- Nominal current in air-cooled inverter units = I_L
- Nominal current in liquid-cooled inverter units = I_{TH}

The system software handles the current cut-off functionality. The functionality depends on a sufficient inductance in the output filter. Standard dU/dt filters do not have enough inductance to ensure an exact tripping level.

6.4.1.4 (ID 1859) Fast Reclosing

Location in the menu: **P2.4.1.4**

Use this parameter to enable the *Fast reclosing* function.

The fast reclosing function is not used in the VACON® DCGuard™ peer-to-peer topology.

6.4.1.5 (ID 673) Prediction Gain

Location in the menu: **P2.4.1.5**

Use this parameter to set the gain for the short circuit current detection.

6.4.1.6 (ID 1874) SW Trip Response

Location in the menu: **P2.4.1.6**

Use this parameter to set the *SW trip response* when the current is above the limit set for the rapid current cut-off (see ID 1500, ID 1501, and ID 1502).

Table 39: Selections for Parameter ID 1874

Selection number	Selection name
0	No action
1	Warning information
2	Fault
3	Warning, keep control word

For selection 2, there is a separate fault code for each phase:

- F63, U phase overcurrent
- F64, V phase overcurrent
- F65, W phase overcurrent

6.5 Drive Control Parameters

6.5.1 (ID 601) Switching Frequency

Location in the menu: **P2.5.1**

Use this parameter to set the *Switching frequency* for the controlled ramp up of the voltage in the DC cables out of the DCGuard. The *Switching frequency* is used only during the charging procedure. The default setting is 5.0 kHz.

6.5.2 (ID 606) Pulse Ratio

Location in the menu: **P2.5.2**

Use this parameter to set the minimum *Pulse ratio* for charging the DC link of the DCGuard peer-to-peer connection. The charging is started with a certain minimum voltage, not from zero voltage.

6.5.3 (ID 1541) Voltage Rise Time

Location in the menu: **P2.5.3**

Use this parameter to set the *Voltage rise time* to full DC-link voltage in the bus tie cables. The recommended *Voltage rise time* is 200–400 ms.

6.5.4 (ID 1707) Control Options 1

Location in the menu: **P2.5.4**

This parameter is reserved for future use.

6.5.5 (ID 1798) Control Options 2

Location in the menu: **P2.5.5**

This parameter is reserved for future use.

6.5.6 Identification

6.5.6.1 (ID 668) IU Offset

Location in the menu: **P2.5.6.1**

Use this parameter to set the offset value for the phase current measurement.

6.5.6.2 (ID 669) IV Offset

Use this parameter to set the offset value for the phase current measurement.

6.5.6.3 (ID 670) IW Offset

Use this parameter to set the offset value for the phase current measurement.

6.6 Master/Follower

6.6.1 (ID 1324) Master/Follower Mode

Location in the menu: **P2.6.1**

This parameter is under development.

6.7 Fieldbus Parameters

6.7.1 (ID 1853) Fieldbus Actual Selection

Location in the menu: **P2.7.1**

Use this parameter to select the signal ID that is used as the actual monitoring value from the drive.

6.7.2 (ID 897) General Status Word ID

Location in the menu: **P2.7.2**

Use this parameter to select which data are sent in the Fieldbus General Status Word. See the user manual for the used fieldbus for details and availability.

6.7.3 (ID 852) Fieldbus Process Data Out 1 Selection

Location in the menu: **P2.7.3**

Use this parameter to select the data that is sent to the fieldbus with the ID number of the parameter or monitor value.

To monitor an item, enter the ID number of the item as the value of this parameter.

6.7.4 (ID 853) Fieldbus Process Data Out 2 Selection

Location in the menu: **P2.7.4**

Use this parameter to select the data that is sent to the fieldbus with the ID number of the parameter or monitor value.

To monitor an item, enter the ID number of the item as the value of this parameter.

6.7.5 (ID 854) Fieldbus Process Data Out 3 Selection

Location in the menu: **P2.7.5**

Use this parameter to select the data that is sent to the fieldbus with the ID number of the parameter or monitor value.

To monitor an item, enter the ID number of the item as the value of this parameter.

6.7.6 (ID 855) Fieldbus Process Data Out 4 Selection

Location in the menu: **P2.7.6**

Use this parameter to select the data that is sent to the fieldbus with the ID number of the parameter or monitor value.

To monitor an item, enter the ID number of the item as the value of this parameter.

6.7.7 (ID 856) Fieldbus Process Data Out 5 Selection

Location in the menu: **P2.7.7**

Use this parameter to select the data that is sent to the fieldbus with the ID number of the parameter or monitor value.

To monitor an item, enter the ID number of the item as the value of this parameter.

6.7.8 (ID 857) Fieldbus Process Data Out 6 Selection

Location in the menu: **P2.7.8**

Use this parameter to select the data that is sent to the fieldbus with the ID number of the parameter or monitor value.

To monitor an item, enter the ID number of the item as the value of this parameter.

6.7.9 (ID 858) Fieldbus Process Data Out 7 Selection

Location in the menu: **P2.7.9**

Use this parameter to select the data that is sent to the fieldbus with the ID number of the parameter or monitor value.

To monitor an item, enter the ID number of the item as the value of this parameter.

6.7.10 (ID 859) Fieldbus Process Data Out 8 Selection

Location in the menu: **P2.7.10**

Use this parameter to select the data that is sent to the fieldbus with the ID number of the parameter or monitor value.

To monitor an item, enter the ID number of the item as the value of this parameter.

6.7.11 (ID 876) Fieldbus Process Data In 1 Selection

Location in the menu: **P2.7.11**

Use this parameter to select a parameter or monitoring value to be controlled from the fieldbus.

To control an item, enter the ID number of the item as the value of this parameter. The monitoring signals that can be controlled from the fieldbus are shadowed.

6.7.12 (ID 877) Fieldbus Process Data In 2 Selection

Location in the menu: **P2.7.12**

Use this parameter to select a parameter or monitoring value to be controlled from the fieldbus.

To control an item, enter the ID number of the item as the value of this parameter. The monitoring signals that can be controlled from the fieldbus are shadowed.

6.7.13 (ID 878) Fieldbus Process Data In 3 Selection

Location in the menu: **P2.7.13**

Use this parameter to select a parameter or monitoring value to be controlled from the fieldbus.

To control an item, enter the ID number of the item as the value of this parameter. The monitoring signals that can be controlled from the fieldbus are shadowed.

6.7.14 (ID 879) Fieldbus Process Data In 4 Selection

Location in the menu: **P2.7.14**

Use this parameter to select a parameter or monitoring value to be controlled from the fieldbus.

To control an item, enter the ID number of the item as the value of this parameter. The monitoring signals that can be controlled from the fieldbus are shadowed.

6.7.15 (ID 880) Fieldbus Process Data In 5 Selection

Location in the menu: **P2.7.15**

Use this parameter to select a parameter or monitoring value to be controlled from the fieldbus.

To control an item, enter the ID number of the item as the value of this parameter. The monitoring signals that can be controlled from the fieldbus are shadowed.

6.7.16 (ID 881) Fieldbus Process Data In 6 Selection

Location in the menu: **P2.7.16**

Use this parameter to select a parameter or monitoring value to be controlled from the fieldbus.

To control an item, enter the ID number of the item as the value of this parameter. The monitoring signals that can be controlled from the fieldbus are shadowed.

6.7.17 (ID 882) Fieldbus Process Data In 7 Selection

Location in the menu: **P2.7.17**

Use this parameter to select a parameter or monitoring value to be controlled from the fieldbus.

To control an item, enter the ID number of the item as the value of this parameter. The monitoring signals that can be controlled from the fieldbus are shadowed.

6.7.18 (ID 883) Fieldbus Process Data In 8 Selection

Location in the menu: **P2.7.18**

Use this parameter to select a parameter or monitoring value to be controlled from the fieldbus.

To control an item, enter the ID number of the item as the value of this parameter. The monitoring signals that can be controlled from the fieldbus are shadowed.

6.7.19 (ID 896) State Machine

Location in the menu: **P2.7.19**

Use this parameter to select the control profile (*State machine*) for the fieldbus control.

Table 40: Selections for Parameter ID 896

Selection number	Selection name	Description
0	Basic	This mode makes the fieldbus control behave as explained in the used fieldbus option board manual.
1	Standard	A simple control word is used in modes where the control word from the fieldbus is used as such. For some fieldbus boards, this mode requires a bypass operation.
2	DCGuard Profile 1	Rising pulse and stop commands.

6.8 Protections

6.8.1 (ID 1857) Reset Data Logger

Location in the menu: **P2.8.8**

Use this parameter to reset the data logger to its default settings. If the settings are changed, it is recommended to reset the settings after initial commissioning.

6.8.2 (ID 1569) Fault Simulation

Location in the menu: **P2.8.9**

Use this parameter to simulate different faults without actually making, for example, an overcurrent situation. In the point of view of the drive interface, the operation is identical to an actual fault situation.

Table 41: Selections for Parameter ID 1569

Selection	Description
B00 (+1)	Simulates overcurrent fault (F1)

Selection	Description
B01 (+2)	Simulates overvoltage fault (F2)
B02 (+4)	Simulates undervoltage fault (F9)
B03 (+8)	Reserved
B04 (+16)	Simulates earth fault (F3)
B05 (+32)	Reserved
B06 (+64)	Reserved
B07 (+128)	Simulates overtemperature alarm (F14)
B08 (+256)	Simulates overtemperature fault (F14) The alarm bit must be active so that the fault comes in the simulation. If the fault bit is left active, the drive goes to a fault state at the alarm limit when the drive temperature rises to the alarm level.

6.8.3 (ID 1086) Disable Stop Lock

Location in the menu: **P2.8.10**

Use this parameter to disable the stop lock and enable the setting of parameters when the drive is in RUN state.

This parameter is only available for internal use by Danfoss personnel.

6.8.4 General

6.8.4.1 (ID 1333) Earth Fault Current Limit

Location in the menu: **P2.8.1.1**

Use this parameter to select the maximum level for the earth current in % of the unit nominal current.

The earth fault protection ensures that the sum of the outgoing phase currents is zero. The overcurrent protection is always working and protects the DCGuard from earth faults with high currents. The functionality is based on the sum of all three output phases.

6.8.4.2 (ID 1858) Vdc Trip Limit

Location in the menu: **P2.8.1.2**

Use this parameter to select the trip limit for the software DC-link voltage trip.

6.8.4.3 (ID 733) Fieldbus Fault Slot D Response

Location in the menu: **P2.8.1.3**

If the active control place is fieldbus, use this parameter to select the response for a fieldbus fault.

Table 42: Selections for Parameter ID 733

Selection number	Selection name
0	No response
1	Warning
2	Fault
3	Warning, keep control word

6.8.4.4 (ID 1329) Keypad/PC Fault Mode

Location in the menu: **P2.8.1.4**

If the active control place is keypad, use this parameter to select the response for the keypad communication fault.

If the active control place is PC (NCDrive), use this parameter to select the response for the PC (NCDrive) communication fault.

If the active control place is keypad, make sure that there is a possibility to stop the DCGuard also in case the keypad is removed from the drive. In case 0/*No response* or 1/*Warning* is selected, it must be ensured on system level that there is the possibility for local control. This can be done, for example, by forcing to I/O or fieldbus control by a digital input.

Table 43: Selections for Parameter ID 1329

Selection number	Selection name
0	No response ⁽¹⁾
1	Warning ⁽¹⁾
2	Fault
3	Warning, keep control word

¹ If selected, it must be ensured on system level that there is the possibility for local control.

6.8.5 Over Load Protection


6.8.5.1 Function Description

The over load protection function protects the DC cables. The function is based on an internal counter. The counter value is increased when the input current is above the *Minimum input* level and decreased when below the value. The increase or decrease occurs every 10 ms.

The over load trip is done when the over load counter value is over 10000.

The parameter *Maximum step* defines the increase when the input reaches the maximum defined input level (*Maximum input*). The minimum and maximum input points also define the slope for the function. For example, if the input current is in the middle of the minimum and maximum input values, the counter increases by half of the value set with *Maximum step* parameter.

The over load counter calculation is done individually for each phase.

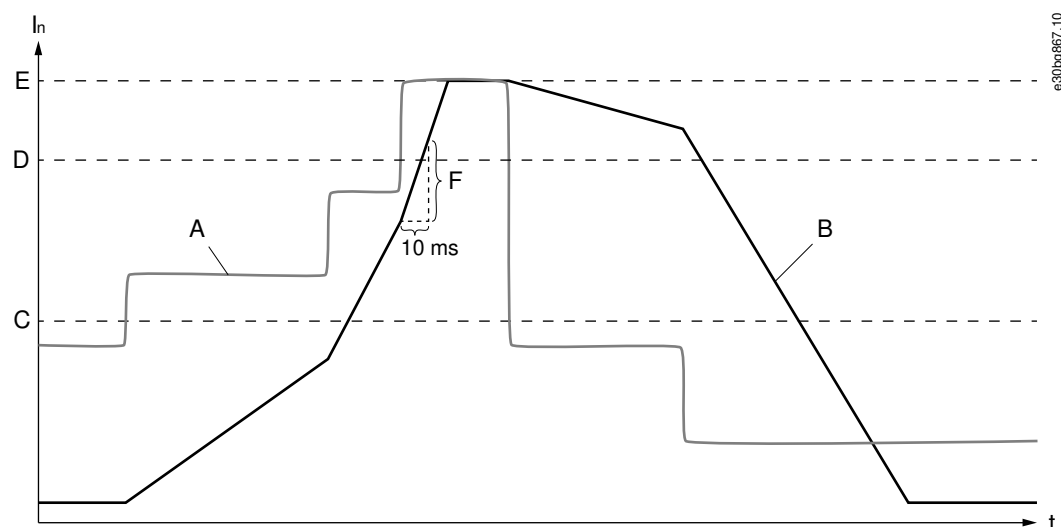

A Motor current in % of the nominal current rating	B Over load counter value
C Minimum input	D Maximum input
E Over load trip level	F Maximum step

Illustration 13: Example of the Internal Counter Value as a Function of the Motor Current

Example:

Parameter example for tripping at 120% after 20 s:

- P2.8.X.1, X Overload Response = 2
- P2.8.X.2, Minimum Input = 101%
- P2.8.X.3, Maximum Input = 120%
- P2.8.X.4, Maximum Step = 5

Tripping time = $10000 / (P2.8.X.4 \times 100) = 10000 / (5 \times 100) = 20 \text{ s}$

6.8.5.2 U Phase Over Load Protection

6.8.5.2.1 (ID 1524) U Over Load Response

Location in the menu: P2.8.2.1

Use this parameter to set the trip response when the over load protection counter is above the tripping limit in phase U.

- 0 = No Action
- 1 = Warning information
- 2 = Fault

Selection 2 gives the fault code F83, U phase over load.

6.8.5.2.2 (ID 1504) Minimum Input U

Location in the menu: **P2.8.2.2**

Use this parameter to set the U phase current level in % of the rated current when the over load counter starts to increase.

6.8.5.2.3 (ID 1505) Maximum Input U

Location in the menu: **P2.8.2.3**

Use this parameter to set the input value level for phase U where the over load counter is increased with the maximum step defined by parameter ID 1506.

6.8.5.2.4 (ID 1506) Maximum Step U

Location in the menu: **P2.8.2.4**

Use this parameter to set the step in the phase U over load counter when the input value is at the maximum input level defined by parameter ID 1505.

6.8.5.3 V Phase Over Load Protection

6.8.5.3.1 (ID 1525) V Over Load Response

Location in the menu: **P2.8.3.1**

Use this parameter to set the trip response when the over load protection counter is above the tripping limit in phase V.

- 0 = No Action
- 1 = Warning information
- 2 = Fault

Selection 2 gives the fault code F84, V phase over load.

6.8.5.3.2 (ID 1531) Minimum Input V

Location in the menu: **P2.8.3.2**

Use this parameter to set the V phase current level in % of the rated current when the over load counter starts to increase.

6.8.5.3.3 (ID 1532) Maximum Input V

Location in the menu: **P2.8.3.3**

Use this parameter to set the input value level for phase V where the over load counter is increased with the maximum step defined by parameter ID 1533.

6.8.5.3.4 (ID 1533) Maximum Step V

Location in the menu: **P2.8.3.4**

Use this parameter to set the step in the phase V over load counter when the input value is at the maximum input level defined by parameter ID 1532.

6.8.5.4 W Phase Over Load Protection

6.8.5.4.1 (ID 1526) W Over Load Response

Location in the menu: **P2.8.4.1**

Use this parameter to set the trip response when the over load protection counter is above the tripping limit in phase W.

- 0 = No Action
- 1 = Warning information
- 2 = Fault

Selection 2 gives the fault code F85, W phase over load.

6.8.5.4.2 (ID 1534) Minimum Input W

Location in the menu: **P2.8.4.2**

Use this parameter to set the W phase current level in % of the rated current when the over load counter starts to increase.

6.8.5.4.3 (ID 1535) Maximum Input W

Location in the menu: **P2.8.4.3**

Use this parameter to set the input value level for phase W where the over load counter is increased with the maximum step defined by parameter ID 1536.

6.8.5.4.4 (ID 1536) Maximum Step W

Location in the menu: **P2.8.4.4**

Use this parameter to set the step in the phase W over load counter when the input value is at the maximum input level defined by parameter ID 1535.

6.8.6 U Phase Current Protection

6.8.6.1 (ID 1550) U High Current Response

Location in the menu: **P2.8.5.1**

Use this parameter to set the trip response when the current is above the set limit in phase U for the time set for the high current cut-off.

- 0 = No Action
- 1 = Warning information
- 2 = Fault

Selection 2 gives the fault code F86, U high current.

6.8.6.2 (ID 1551) U Trip Limit

Location in the menu: **P2.8.5.2**

Use this parameter to set the trip limit for the high current cut-off in the U phase. The tripping limit is set in % of the nominal current. The trip triggers fault F86.

- Nominal current in air-cooled inverter units = I_L
- Nominal current in liquid-cooled inverter units = I_{TH}

The application software handles the current cut-off functionality at the 10 ms level.

6.8.6.3 (ID 1552) U Trip Delay

Location in the menu: **P2.8.5.3**

Use this parameter to set the trip delay for the high current cut-off in the U phase.

6.8.7 V Phase Current Protection

6.8.7.1 (ID 1553) V High Current Response

Location in the menu: **P2.8.6.1**

Use this parameter to set the trip response when the current is above the set limit in phase V for the time set for the high current cut-off.

- 0 = No Action
- 1 = Warning information
- 2 = Fault

Selection 2 gives the fault code F87, V high current.

6.8.7.2 (ID 1554) V Trip Limit

Location in the menu: **P2.8.6.2**

Use this parameter to set the trip limit for the high current cut-off in the V phase. The tripping limit is set in % of the nominal current. The trip triggers fault F87.

- Nominal current in air-cooled inverter units = I_L
- Nominal current in liquid-cooled inverter units = I_{TH}

The application software handles the current cut-off functionality at the 10 ms level.

6.8.7.3 (ID 1555) V Trip Delay

Location in the menu: **P2.8.6.3**

Use this parameter to set the trip delay for the high current cut-off in the V phase.

6.8.8 W Phase Current Protection

6.8.8.1 (ID 1556) W High Current Response

Location in the menu: **P2.8.7.1**

Use this parameter to set the trip response when the current is above the set limit in phase W for the time set for the high current cut-off.

- 0 = No Action
- 1 = Warning information
- 2 = Fault

Selection 2 gives the fault code F88, W high current.

6.8.8.2 (ID 1558) W Trip Limit

Location in the menu: **P2.8.7.2**

Use this parameter to set the trip limit for the high current cut-off in the W phase. The tripping limit is set in % of the nominal current. The trip triggers fault F88.

- Nominal current in air-cooled inverter units = I_L
- Nominal current in liquid-cooled inverter units = I_{TH}

The application software handles the current cut-off functionality at the 10 ms level.

6.8.8.3 (ID 1559) W Trip Delay

Location in the menu: **P2.8.7.3**

Use this parameter to set the trip delay for the high current cut-off in the W phase.

6.9 Keypad Control

6.9.1 (ID 1403) Control Place

Location in the menu: **P3.1**

Use this parameter to select the *Control place*.

Selection	Control place
0	PC control
1	I/O terminal
2	Keypad (default)
3	Fieldbus
4	SystemBus Master (not in use)

6.9.2 (ID 1995) License Key

Location in the menu: **P3.2**

Use this parameter to set the *License key* to activate DCGuard operation.

Enclosure size FR4 can be operated without a *License key*.

6.9.3 (ID 1863) Enable Keypad Close

Location in the menu: **P3.3**

Use this parameter to enable or disable the [Start] button (close) on the keypad.

0 = Disabled (default)

- The green keypad [Start] button (close) is disabled when DCGuard is controlled from I/O or fieldbus.

1 = Enabled

- The green keypad [Start] button (close) is enabled when DCGuard is controlled from I/O or fieldbus.

6.9.4 (ID 1864) Enable Keypad Open

Location in the menu: **P3.4**

Use this parameter to enable or disable the [Stop] button (open) on the keypad.

0 = Disabled (default)

- The red keypad [Stop] button (open) is disabled when DCGuard is controlled from I/O or fieldbus.

1 = Enabled

- The red keypad [Stop] button (open) is enabled when DCGuard is controlled from I/O or fieldbus.

6.10 "Terminal to Function" (TTF) Programming Principle


The programming principle of the input and output signals in the VACON® NXP DCGuard™ application is different compared to the conventional method used in other VACON® NXP applications. In the conventional programming method, Function to Terminal Programming Method (FTT), a certain function is defined for a fixed input or output. The VACON® NXP DCGuard™ application,

however, uses the Terminal to Function Programming method (TTF) in which the programming process is carried out the other way round: Functions appear as parameters which the operator defines a certain input/output for. See the warning in [6.10.2 Defining a Terminal for a Certain Function with VACON® NCDriver](#).

6.10.1 Defining an Input/Output for a Certain Function on Keypad

Context:

Connecting a certain input or output with a certain function (parameter) is done by giving the parameter an appropriate value. The value is formed of the Board slot on the VACON® NXP control board (see the User Manual of the product) and the respective signal number, see [Illustration 14](#).

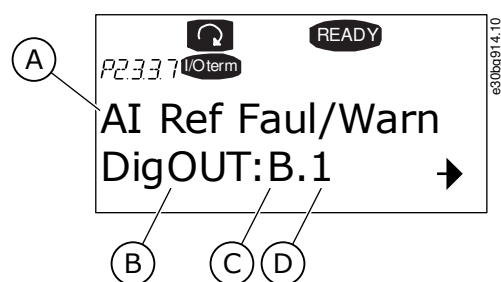

A Function name	B Terminal type
C Slot	D Terminal number

Illustration 14: Defining an Input/Output for a Certain Function on Keypad

6.10.2 Defining a Terminal for a Certain Function with VACON® NCDriver

If using the VACON® NCDriver Programming Tool for parametrizing, the connection between the function and input/output must be established in the same way as with the control panel. Pick the address code from the drop-down menu in the Value column.

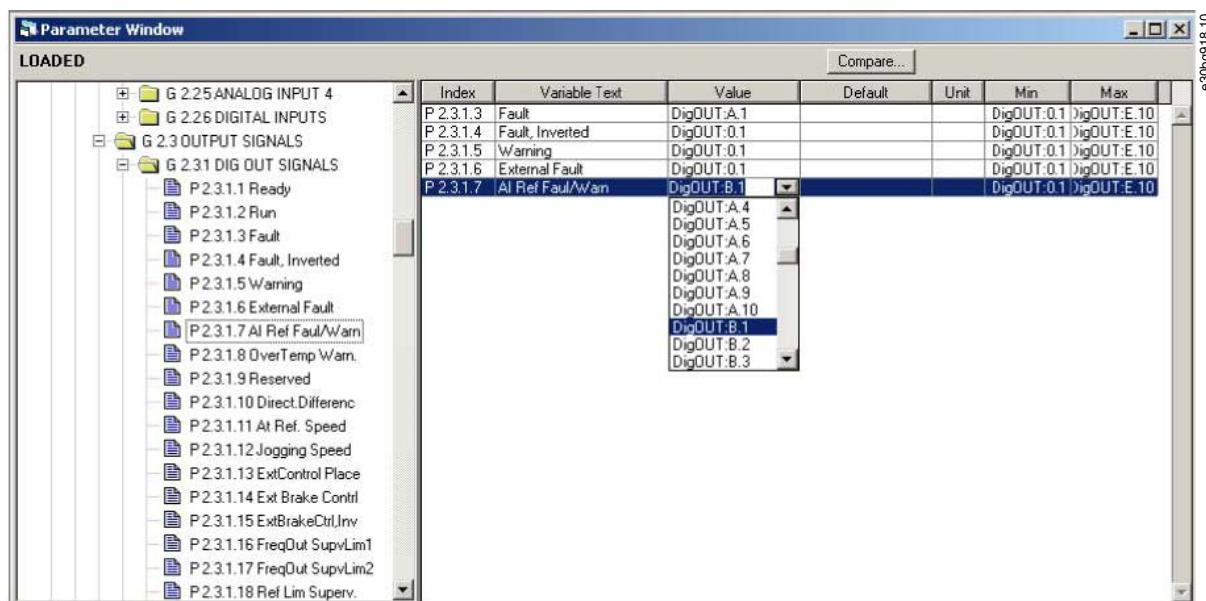


Illustration 15: Screenshot of the VACON® NCDrive Programming Tool; Entering the Address Code

CAUTION

FUNCTION OVERRUNS

Connecting two functions to one and same output in can cause function overruns.

- Do not to connect two functions to one and same output to avoid function overruns and to ensure flawless operation.

NOTICE

The inputs, unlike the outputs, cannot be changed in RUN state.

6.10.3 Defining Unused Inputs/Outputs

All unused inputs and outputs must be given the option slot value 0 and the value 1 also for the terminal number. The value 0.1 is also the default value for most of the functions. However, if, for example, the values of a digital input signal are used for testing purposes only, the option slot value can be set to 0 and the terminal number to any number between 2–10 to place the input to a TRUE state. In other words, the value 1 corresponds to 'open switch' and values 2–10 to 'closed switch'.

For analog inputs, giving the value 1 for the terminal number corresponds to 0% signal level, value 2 corresponds to 20%, value 3 to 30% and so on. Giving value 10 for the terminal number corresponds to 100% signal level.

6.11 Fieldbus Control In Detail

The fieldbus control and status words are bit-coded monitoring values.

The behavior of the fieldbus control word depends on the selected control profile. Do the selection with parameter *State machine* (ID 896). See [6.7.19 \(ID 896\) State Machine](#).

6.11.1 Fieldbus Control Word (Standard)

Table 44: Description of the Fieldbus Control Word with the Standard Profile

Bit	Signal	False	True
B00			
B01			
B02			
B03	Run (close)	Stop request: The drive stops (DCGuard opens).	Start request: Start command to the drive. Rising edge needed for the start (DCGuard closes).
B04			
B05			
B06			
B07	Reset	No significance	Fault acknowledge: The group signal is acknowledged with a positive edge.
B08			
B09			
B10	PLC control	Disable fieldbus control: The drive stops.	Enable fieldbus control: If the control place is fieldbus, the start command is monitored from the fieldbus.
B11	Watchdog ⁽¹⁾	Fieldbus watchdog pulse low	Fieldbus watchdog pulse high
B12	Fieldbus digital input 2 ⁽²⁾		
B13	Fieldbus digital input 3 ⁽²⁾		
B14	Fieldbus digital input 4 ⁽²⁾		
B15			

¹ This pulse is used to monitor the communication between the PLC and the drive. If the pulse is missing, the drive goes to a fault state (Fieldbus communication fault). This bit is also connected to fieldbus status word B15.

² Not used

6.11.2 Fieldbus Control Word (DCGuard Profile 1)

Table 45: Description of the Fieldbus Control Word with the DCGuard Profile 1

Bit	Signal	False	True
B00			
B01	Stop (open)		Stop request: The drive stops (DCGuard opens).

Bit	Signal	False	True
B02			
B03	Run (close)		Start request: Start command to the drive. Rising edge needed for the start (DCGuard closes).
B04			
B05			
B06			
B07	Reset	No significance	Fault acknowledge: The group signal is acknowledged with a positive edge.
B08			
B09			
B10	PLC control	Disable fieldbus control: The drive stops.	Enable fieldbus control: If the control place is fieldbus, the start command is monitored from the fieldbus.
B11	Watchdog ⁽¹⁾	Fieldbus watchdog pulse low	Fieldbus watchdog pulse high
B12	Fieldbus digital input 2 ⁽²⁾		
B13	Fieldbus digital input 3 ⁽²⁾		
B14	Fieldbus digital input 4 ⁽²⁾		
B15			

¹ This pulse is used to monitor the communication between the PLC and the drive. If the pulse is missing, the drive goes to a fault state (Fieldbus communication fault). This bit is also connected to fieldbus status word B15.

² Not used

6.11.3 Fieldbus Status Word

Table 46: Description of the Fieldbus Status Word

Bit	Signal	False	True
B00	Ready on	Drive not ready to switch on Fault active DI: Run enable low	Drive ready to start charging No faults DI: Run enabled

Bit	Signal	False	True
B01	Ready run	Drive not ready to run (DCGuard not ready to close) CW.B0 = FALSE DC is not ready	Drive ready and main contactor is ON (DCGuard is ready to close) CW.B0 = TRUE DC is ready
B02	Running	Drive not running (DCGuard open) The drive is not in run state (modulating)	Drive in run state / modulating (DCGuard open) The drive is in run state and modulating
B03	Fault	No active fault The drive is not in fault state	Fault is active The drive is in fault state
B04	Run enable status	Run Disabled Drive is in stop state (close disabled) DI: Run enable false	Run Enabled Drive can be started (close enabled)
B05	True ⁽¹⁾		
B06	CB control not OK ⁽¹⁾		
B07	Warning	No active warnings: There is no warning or the warning has disappeared.	Warning active: Drive still works, but there is a warning in the service/maintenance parameter. The warning has not been acknowledged.
B08	At reference ⁽¹⁾		
B09	Fieldbus control active	No control requested Control by the automation system is not possible.	Control requested The automation system is controlling.
B10	Above limit ⁽¹⁾		
B11	⁽²⁾		
B12	⁽²⁾		
B13	⁽²⁾		
B14			
B15	Watchdog ⁽³⁾	Fieldbus watchdog feedback low	Fieldbus watchdog feedback high

¹ Not used

² Reserved for future use

³ Fieldbus control word B11 is echoed back to the fieldbus. Can be used to monitor communication status from the drive.

6.11.4 Application Status Word

Table 47: Description of the Application Status Word (ID 43)

Bit	False	True
B00		
B01	Not in ready state DC voltage low, fault active	Ready Drive in ready state, start command can be given.
B02	Not running (open) Drive is not modulating	Running (closed) Drive is modulating
B03	No fault Drive has no active faults.	Fault Drive has active faults.
B04		
B05		
B06	Run disabled (close disabled) Run enable command to motor control is low.	Run enabled (close enabled) Run enable command to motor control is high.
B07	No warning No warning signals active in the drive.	Warning Drive has active warning signals. A warning signal does not stop the operation.
B08	Charging switch open DC voltage level has not reached the closing level or has dropped below the opening level. This information is from drive motor control.	Charging switch closed DC voltage level is above the closing limit and no interlock is active internally.
B09		
B10		
B11		
B12	No run request (no close request) Final run request command has not been given to motor control.	Run request (close request) Final run request command has been given to motor control.
B13		
B14	DCGuard open ⁽¹⁾	DCGuard closed ⁽¹⁾
B15		

¹ Not used

7 Fault Tracing

7.1 Troubleshooting Guidelines

In problem situations it is important to have proper information about the problem. If the problem persists, contact local Danfoss support. Before contacting support, follow the guidelines so that the necessary information for the problem solving is available.

- Install the newest available application and system software versions. The software is continuously developed and the default settings are improved.
- Use the fastest available communication speed (baud rate 57 600) and a 50 ms update interval for signals for the RS232 communication.
- For the CAN communication, use a 1 Mbit communication speed and 7 ms update interval for signals.
- When contacting Danfoss support because of a fault condition, always write down all texts and codes on the keypad display.
- When contacting Danfoss support, send the *.trn, *.par and Service info (*.txt) files with a description of the situation. If an active fault is causing the problem, take also the Datalogger data from the drive.
- The Datalogger settings can be changed to catch the correct situation and it is also possible to make a manual force trig for the Datalogger.
- Before storing the parameter file, upload the parameters from the drive and save them when VACON® NCDriver is in the ONLINE state. If possible, do this while the problem is active.
- It is also helpful to have a single-line diagram from the system in which problem is faced.

Type	Signal Name	Actual	Unit
Value	Status Word	20806	
Value	DC Voltage	592	Vdc
Value	DCG ControlState	7	
Value	DCG StatusWord	3	
Value	U Phase Current	0,1	A
Value	V Phase Current	0	A
Value	W Phase Current	0	A
Value	DC-Link Current	0,7	%

Illustration 16: Recommended Signals for VACON® NCDriver

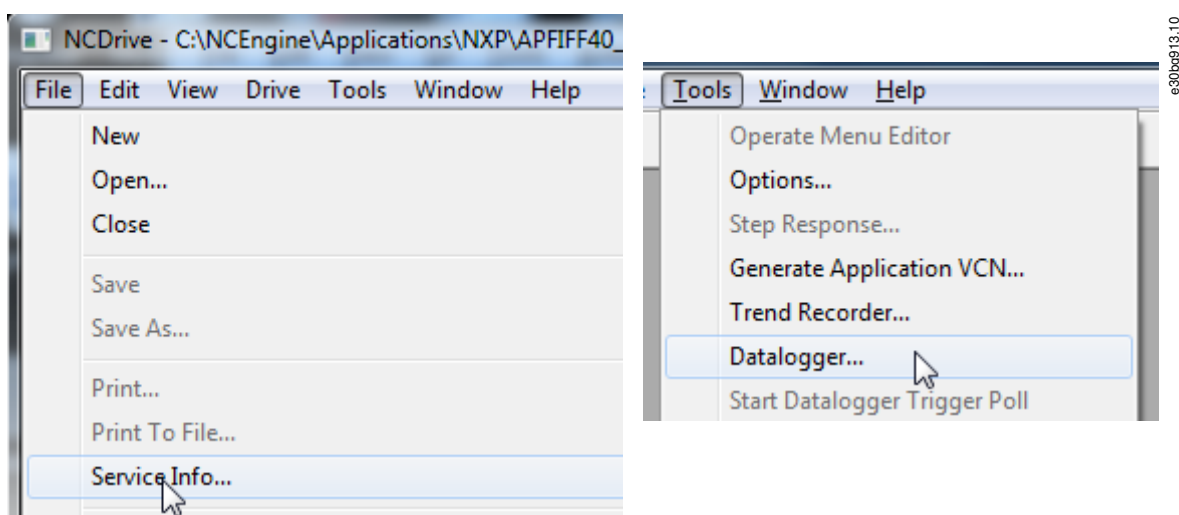


Illustration 17: Service Info Upload and Datalogger Window Opening

7.2 Faults and Alarms

7.2.1 Fault 1 - Overcurrent, S1- Hardware trip

Cause

There is too high a current ($>4 \cdot I_H$) in the motor cable. This has caused the VACON® NXP DCGuard™ instant current cut-off functionality to activate. Its cause can be 1 of the following:

- A sudden heavy load increase
- A short circuit in the motor cables

Troubleshooting

- Do a check of the loading.
- Do a check of the cables and connections.
- Make an identification run.

7.2.2 Fault 2 - Overvoltage, S1 - Hardware trip

Cause

The DC-link voltage is higher than the limits.

- 500 V AC unit DC voltage above 911 V DC
- 690 V AC unit DC voltage above 1200 V DC
- Too short a deceleration time
- High overvoltage spikes in the supply
- Start/Stop sequence too fast

Troubleshooting

- Set the deceleration time longer.
- Activate the overvoltage controller.
- Do a check of the input voltage.

7.2.3 Fault 2 - Overvoltage, S2 - Overvoltage control supervision

Cause

The DC-link voltage has been above 1100 V DC for too long.

- Too short a deceleration time
- High overvoltage spikes in the supply
- Start/Stop sequence too fast

Troubleshooting

- Set the deceleration time longer.
- Activate the overvoltage controller.
- Do a check of the input voltage.

7.2.4 Fault 3 - Earth fault

Cause

The measurement of current tells that the sum of the motor phase currents is not zero. The earth fault limit is set in parameter ID 1333.

- Insulation malfunction in the cables or in the motor.

Troubleshooting

Do a check of the motor cables.

7.2.5 Fault 5 - Charging switch

Cause

The charging switch is open, when the START command is given.

- Operation malfunction
- Defective component

Troubleshooting

- Check the connection of the feedback from the charging relay.
- Reset the fault and start the drive again.
- If the fault shows again, ask instructions from the local distributor.

7.2.6 Fault 7 - Saturation trip

Cause

- Defective component

Troubleshooting

This fault cannot be reset from the control panel.

- Switch off the power.
- DO NOT RESTART THE DRIVE or CONNECT THE POWER!
- If this fault shows at the same time with Fault 1, do a check of the motor cables.
- Contact your local distributor.

7.2.7 Fault 8 - System fault, S1 - Reserved

This fault code is reserved for future use.

Cause

- Disturbance.
- Driver board or IGBT is broken.
- In enclosure size FR9 and larger drives which include no star coupler, the ASIC board is broken.
- In enclosure size FR8 and smaller drives, the control board is broken.
- In enclosure size FR8 and smaller drives, the VACON Bus board is broken, if included in the drive.

Troubleshooting

- Reset the fault and start the drive again.
- If there is star coupler in the unit, check the fiber connections and phase order.

7.2.8 Fault 8 - System fault, S2 - Reserved

This fault code is reserved for future use.

7.2.9 Fault 8 - System fault, S3 - Reserved

This fault code is reserved for future use.

7.2.10 Fault 8 - System fault, S4 - Reserved

This fault code is reserved for future use.

7.2.11 Fault 8 - System fault, S5 - Reserved

This fault code is reserved for future use.

7.2.12 Fault 8 - System fault, S6 - Reserved

This fault code is reserved for future use.

7.2.13 Fault 8 - System fault, S7 - Charging switch**Cause**

- operation malfunction
- defective component

Troubleshooting

- Reset the fault and start the drive again.
- If the fault shows again, ask instructions from the local distributor.

7.2.14 Fault 8 - System fault, S8 - No power to driver card

Cause

- operation malfunction
- defective component

Troubleshooting

- Reset the fault and start the drive again.
- If the fault shows again, ask instructions from the local distributor.

7.2.15 Fault 8 - System fault, S9 - Power unit communication (TX)

Cause

- operation malfunction
- defective component

Troubleshooting

- Reset the fault and start the drive again.
- If the fault shows again, ask instructions from the local distributor.

7.2.16 Fault 8 - System fault, S10 - Power unit communication (Trip)

Cause

- operation malfunction
- defective component

Troubleshooting

- Reset the fault and start the drive again.
- If the fault shows again, ask instructions from the local distributor.

7.2.17 Fault 8 - System fault, S11 - Power unit comm. (Measurement)

Cause

- operation malfunction
- defective component

Troubleshooting

- Reset the fault and start the drive again.
- If the fault shows again, ask instructions from the local distributor.

7.2.18 Fault 8 - System fault, S12 - System bus fault (slot D or E)

Cause

Error in system bus option board (OPTD1 or OPTD2) in slot D or E.

- operation malfunction
- defective component

Troubleshooting

- Reset the fault and start the drive again.
- If the fault shows again, ask instructions from the local distributor.
- Check the cables and connections.

7.2.19 Fault 8 - System fault, S30 - OPTAF: STO channels are different from each other

Cause

The Safe Disable inputs are in different states. It is not allowed according to EN954-1, category 3. This fault occurs when the Safe Disable inputs are in different states for more than 5 s.

Troubleshooting

- Check the S1 switch.
- Check the cabling to the OPTAF board.
- If the fault shows again, ask instructions from the local distributor.

7.2.20 Fault 8 - System fault, S31 - OPTAF: Thermistor short circuit detected

Cause

Thermistor short circuit detected.

Troubleshooting

- Correct the cable connections.
- Check the jumper for the thermistor short circuit supervision, if the thermistor function is not used and the thermistor input is short-circuited.

7.2.21 Fault 8 - System fault, S32 - OPTAF board has been removed

Cause

OPTAF board has been removed. It is not allowed to remove the OPTAF board once the software has recognized it.

Troubleshooting

The system requires a manual acknowledgement using system menu parameter 6.5.5 OPTAF Remove. Ask help from the local distributor.

7.2.22 Fault 8 - System fault, S33 - OPTAF: EEPROM error

Cause

OPTAF board EEPROM error (checksum, not answering and so on).

Troubleshooting

Change the OPTAF board.

7.2.23 Fault 9 - Undervoltage, S1 - DC link too low during run

Cause

The DC-link voltage is lower than the limits.

- Too low a supply voltage
- AC drive internal fault
- A defective input fuse
- The external charge switch is not closed.

Troubleshooting

- If there is a temporary supply voltage break, reset the fault and start the drive again.
- Do a check of the supply voltage. If the supply voltage is sufficient, there is an internal fault.
- Check that the DC charging is functioning properly.
- Ask instructions from the local distributor.

7.2.24 Fault 9 - Undervoltage, S2 - No data from power unit

Cause

The DC-link voltage is lower than the limits.

- Too low a supply voltage
- AC drive internal fault
- a defective input fuse
- the external charge switch is not closed.

Troubleshooting

- If there is a temporary supply voltage break, reset the fault and start the drive again.
- Do a check of the supply voltage. If the supply voltage is sufficient, there is an internal fault.
- Check that the DC charging is functioning properly.
- Ask instructions from the local distributor.

7.2.25 Fault 9 - Undervoltage, S3 - Undervoltage control supervision

Cause

The DC-link voltage is lower than the limits.

- Too low a supply voltage
- AC drive internal fault
- A defective input fuse
- The external charge switch is not closed.

Troubleshooting

- If there is a temporary supply voltage break, reset the fault and start the drive again.
- Do a check of the supply voltage. If the supply voltage is sufficient, there is an internal fault.
- Ask instructions from the local distributor.

7.2.26 Fault 10 - Input line supervision, S1 - Phase supervision diode supply

Cause

The input line phase is missing.

Troubleshooting

Do a check of the supply voltage, the fuses, and supply cable.

7.2.27 Fault 10 - Input Line Supervision, S2 - Phase Supervision Active Front-End

Cause

Line sync fault. AFE is not able to synchronize to line after five trials.

Troubleshooting

- Check that input contactor closes.
- Check all fuses.
- Check that LCL filter is not broken.

7.2.28 Fault 11 - Line Phase Supervision

Cause

The measurement of current tells that there is no current in 1 motor phase or the current in 1 phase is considerably different from the other phases.

Troubleshooting

Do a check of the motor cables.

7.2.29 Fault 13 - AC drive undertemperature

Cause

Too low a temperature in the heat sink of the power unit or in the power board. The heat sink temperature is below -10 °C (14 °F).

Troubleshooting

Add an external heater near the AC drive.

7.2.30 Fault 14 - AC Drive Overtemperature

Cause

Overheating detected in the AC drive.

The heat sink temperature is over 90 °C (194 °F). An overtemperature alarm is issued when the heat sink temperature goes over 85 °C (185 °F).

In 525–690 V, FR6: Heat sink temperature is over 77 °C (170.6 °F). An overtemperature alarm is issued when the heat sink temperature goes over 72 °C (161.6 °F).

Troubleshooting

- Do a check of the actual amount and flow of cooling air.
- Examine the heat sink for dust.
- Do a check of the ambient temperature.
- Make sure that the switching frequency is not too high in relation to the ambient temperature and the motor load.

7.2.31 Fault 22 - EEPROM Checksum Fault

Cause

Parameter save fault.

- Operation malfunction
- defective component

Troubleshooting

If the fault occurs again, ask instructions from the local distributor.

7.2.32 Fault 24 - Counter fault

Cause

Values that showed on the counters are incorrect.

Troubleshooting

Have a critical attitude towards values shown on counters.

7.2.33 Fault 25 - Microprocessor Watchdog Fault

Cause

Start-up of the drive has been prevented. Run request is ON when new application is downloaded to the drive.

Troubleshooting

- Reset the fault and start the drive again.
- If the fault shows again, ask instructions from the local distributor.

7.2.34 Fault 26 - Start-up Prevented

Cause

Start-up of the drive has been prevented. Run request is ON when new application is downloaded to the drive.

Troubleshooting

- If it can be done safely, cancel the prevention of start-up.
- Remove Run request.

7.2.35 Fault 29 - Thermistor fault

Cause

The thermistor input of the option board has detected a too high motor temperature.

- Motor is overheated.
- Thermistor cable is broken.

Troubleshooting

- Do a check of the motor cooling and loading.
- Do a check of the thermistor connection.
- (If thermistor input of the option board is not in use it has to be short-circuited).

7.2.36 Fault 31 - IGBT temperature (hardware)

Cause

IGBT Inverter Bridge overtemperature protection has detected too high a short-term overload current.

Troubleshooting

- Do a check of the loading.
- Do a check of the motor frame size.
- Make an identification run.

7.2.37 Fault 32 - Fan cooling

Cause

Cooling fan of the AC drive does not start, when ON command is given.

Troubleshooting

Ask instructions from the local distributor.

7.2.38 Fault 36 - Control unit

Cause

- The software needs newer version of the control unit.
- The control board version is incompatible with the software.
- The software version is incorrect.

Troubleshooting

- Change the control unit.
- Change the control board to the latest version.
- Check that the correct software is loaded to the control board.

7.2.39 Fault 37 - Device changed (same type), S1 - Control board

Cause

A new option board has replaced the old one in the same slot. The parameters are available in the drive.

Troubleshooting

Reset the fault. The device is ready for use. The drive starts to use the old parameter settings.

7.2.40 Fault 38 - Device added (same type), S1 - Control board

Cause

The option board was added. The same option board has been used in the same slot before. The parameters are available in the drive.

Troubleshooting

Reset the fault. The device is ready for use. The drive starts to use the old parameter settings.

7.2.41 Fault 39 - Device removed

Cause

An option board was removed from the slot.

Troubleshooting

The device is not available. Reset the fault.

7.2.42 Fault 40 - Device unknown, S1 - Unknown device

Cause

An unknown or mismatching device was connected (the power unit or option board).

Troubleshooting

Ask instructions from the local distributor.

7.2.43 Fault 40 - Device unknown, S2 - StarCoupler: power sub units are not identical

Cause

An unknown or mismatching device was connected (the power unit or option board).

Troubleshooting

Ask instructions from the local distributor.

7.2.44 Fault 41 - IGBT Temperature

Cause

IGBT Inverter Bridge overtemperature protection has detected too high a short-term overload current.

Troubleshooting

- Do a check of the loading.

7.2.45 Fault 44 - Device changed (different type), S1 - Control board

Cause

- Option board or power unit changed.
- New device of different type or different power rating.

Troubleshooting

- Reset.
- If option board was changed, set the option board parameters again.
- If power unit was changed, set AC drive parameters again.

7.2.46 Fault 45 - Device added (different type), S1 - Control board

Cause

Option board of different type added.

Troubleshooting

- Reset.
- Set the power unit parameters again.

7.2.47 Fault 50 - Analogue input $I_{in} < 4$ mA (sel. signal range 4 to 20 mA)

Cause

Current at the analog input is < 4 mA.

- Control cable is broken or loose
- signal source has failed.

Troubleshooting

Do a check of the current loop circuitry.

7.2.48 Fault 51 - External fault

Cause

Digital input fault.

Digital input has been programmed as external fault input and this input is active.

Troubleshooting

Remove fault situation on external device.

7.2.49 Fault 52 - Keypad communication fault

Cause

The connection between the control panel (or NCDrive) and the drive is defective.

Troubleshooting

Do a check of the control panel connection and the control panel cable.

7.2.50 Fault 53 - Fieldbus fault

Cause

The data connection between the fieldbus master and the fieldbus board is defective.

Troubleshooting

- Do a check of the installation and fieldbus master.
- If the installation is correct, ask instructions from the local distributor.

7.2.51 Fault 54 - Slot fault**Cause**

Defective option board or slot.

Troubleshooting

- Do a check of the board and slot.
- Ask instructions from the local distributor.

7.2.52 Fault 56 - Measured Temperature**Cause**

Shows temperature measurement fault for option board OPTBH or OPTB8.

- Temperature exceeded set limit.
- Sensor disconnected.
- Short circuit.

Troubleshooting

Find the cause of temperature rise.

7.2.53 Fault 59 - Follower communication**Cause**

SystemBus or CAN communication is broken between Master and Follower.

Troubleshooting

- Do a check of the option board parameters.
- Do a check of the optical fiber cable or CAN cable.

7.2.54 Fault 60 - Cooling**Cause**

External cooling has failed.

Normally this fault comes from the heat exchanger unit.

Troubleshooting

Do a check of the reason for the failure on the external system.

7.2.55 Fault 62 - Run disable

Cause

Run enable signal is low.

Troubleshooting

Do a check of the reason for the Run enable signal.

7.2.56 Fault 63 - U Phase Overcurrent

Cause

Phase U has experienced an overcurrent trip. The VACON® NXP DCGuard™ rapid current cut-off functionality activated the fault.

The current in phase U has exceeded the limit set with parameter *U phase trip limit* (ID 1500).

Troubleshooting

- Do a check of the loading.
- Do a check of the cables and connections.
- Make an identification run.

7.2.57 Fault 64 - V Phase Overcurrent

Cause

Phase V has experienced an overcurrent trip. The VACON® NXP DCGuard™ rapid current cut-off functionality activated the fault.

The current in phase V has exceeded the limit set with parameter *V phase trip limit* (ID 1501).

Troubleshooting

- Do a check of the loading.
- Do a check of the cables and connections.
- Make an identification run.

7.2.58 Fault 65 - W Phase Overcurrent

Cause

Phase W has experienced an overcurrent trip. The VACON® NXP DCGuard™ rapid current cut-off functionality activated the fault.

The current in phase W has exceeded the limit set with parameter *W phase trip limit* (ID 1502).

Troubleshooting

- Do a check of the loading.
- Do a check of the cables and connections.
- Make an identification run.

7.2.59 Fault 66 - UW Phase Overcurrent**Cause**

The VACON® NXP DCGuard™ peer-to-peer 2-cable system has experienced an overcurrent trip.

Troubleshooting

- Do a check of the loading.
- Do a check of the cables and connections.
- Make an identification run.

7.2.60 Fault 67 - F1 U Phase**Cause**

Phase U has experienced an overcurrent trip.

Troubleshooting

- Do a check of the loading.
- Do a check of the cables and connections.
- Make an identification run.

7.2.61 Fault 68 - F1 V Phase**Cause**

Phase V has experienced an overcurrent trip.

Troubleshooting

- Do a check of the loading.
- Do a check of the cables and connections.
- Make an identification run.

7.2.62 Fault 69 - F1 W Phase**Cause**

Phase W has experienced an overcurrent trip.

Troubleshooting

- Do a check of the loading.
- Do a check of the cables and connections.
- Make an identification run.

7.2.63 Fault 70 - UVW Overcurrent**Cause**

The VACON® NXP DCGuard™ peer-to-peer 3-cable system has experienced an overcurrent trip.

Troubleshooting

- Do a check of the loading.
- Do a check of the cables and connections.
- Make an identification run.

7.2.64 Fault 72 - License**Cause**

VACON® NXP DCGuard™ operation is not activated.

Troubleshooting

- Set the license key with parameter ID 1995.

7.2.65 Fault 73 - VW Overcurrent**Cause**

The VACON® NXP DCGuard™ peer-to-peer 2-cable system has experienced an overcurrent trip.

Troubleshooting

- Do a check of the loading.
- Do a check of the cables and connections.
- Make an identification run.

7.2.66 Fault 81 - External Fault 2**Cause**

Digital input fault.

Digital input has been programmed as external fault 2 input and this input is active.

Troubleshooting

Remove fault situation on external device.

7.2.67 Fault 83 - U Phase Overload

Cause

Phase U has experienced an overload trip. The VACON® NXP DCGuard™ overload protection functionality activated the fault.

The overload counter for phase U has reached the trip level. See [6.8.5.1 Function Description](#) for details.

Troubleshooting

- Do a check of the loading.
- Do a check of the cables and connections.
- Make an identification run.

7.2.68 Fault 84 - V Phase Overload

Cause

Phase V has experienced an overload trip. The VACON® NXP DCGuard™ overload protection functionality activated the fault.

The overload counter for phase V has reached the trip level. See [6.8.5.1 Function Description](#) for details.

Troubleshooting

- Do a check of the loading.
- Do a check of the cables and connections.
- Make an identification run.

7.2.69 Fault 85 - W Phase Overload

Cause

Phase W has experienced an overload trip. The VACON® NXP DCGuard™ overload protection functionality activated the fault.

The overload counter for phase W has reached the trip level. See [6.8.5.1 Function Description](#) for details.

Troubleshooting

- Do a check of the loading.
- Do a check of the cables and connections.
- Make an identification run.

7.2.70 Fault 86 - U High Current

Cause

Phase U has experienced a trip due to high current for a too long time. The VACON® NXP DCGuard™ high current cut-off functionality activated the fault.

The current in phase U has exceeded the limit set with parameter *U trip limit* (ID 1551) for the time set with parameter *U trip delay* (ID 1552).

Troubleshooting

- Do a check of the loading.
- Do a check of the cables and connections.
- Make an identification run.

7.2.71 Fault 87 - V High Current

Cause

Phase V has experienced a trip due to high current for a too long time. The VACON® NXP DCGuard™ high current cut-off functionality activated the fault.

The current in phase V has exceeded the limit set with parameter *V trip limit* (ID 1554) for the time set with parameter *V trip delay* (ID 1555).

Troubleshooting

- Do a check of the loading.
- Do a check of the cables and connections.
- Make an identification run.

7.2.72 Fault 88 - W High Current

Cause

Phase W has experienced a trip due to high current for a too long time. The VACON® NXP DCGuard™ high current cut-off functionality activated the fault.

The current in phase W has exceeded the limit set with parameter *W trip limit* (ID 1558) for the time set with parameter *W trip delay* (ID 1559).

Troubleshooting

- Do a check of the loading.
- Do a check of the cables and connections.
- Make an identification run.

7.2.73 Fault 89 - Software Overvoltage

Cause

The DC-link voltage is higher than the limit set with parameter *Vdc trip limit* (ID 1858).

- Too short a deceleration time
- High overvoltage spikes in the supply
- Start/Stop sequence too fast

Troubleshooting

- Set the deceleration time longer.
- Activate the overvoltage controller.
- Do a check of the input voltage.

Index

A		
Additional resources	6	
Alarm word 1 (ID 1174)	30	
Analog output 1 (ID 26)	23	
Analog output 1 filter time (ID 308)	39	
Analog output 1 function (ID 307)	39	
Analog output 1 inversion (ID 309)	40	
Analog output 1 minimum (ID 310)	40	
Analog output 1 offset (ID 375)	41	
Analog output 1 scale (ID 311)	41	
Analog output 1 signal selection (ID 464)	39	
Analog output 2 (ID 31)	23	
Analog output 2 filter time (ID 473)	42	
Analog output 2 function (ID 472)	42	
Analog output 2 inversion (ID 474)	43	
Analog output 2 minimum (ID 475)	43	
Analog output 2 offset (ID 477)	43	
Analog Output 2 Scale (ID 476)	43	
Analog output 2 signal selection (ID 471)	42	
Analog output 3 (ID 32)	23	
Analog output 3 filter time (ID 480)	44	
Analog output 3 function (ID 479)	43	
Analog output 3 inversion (ID 481)	44	
Analog output 3 minimum (ID 482)	44	
Analog output 3 offset (ID 484)	44	
Analog output 3 scale (ID 483)	44	
Analog output 3 signal selection (ID 478)	43	
Analog outputs	38	
C		
Cabling (ID 1503)	32	
Compatibility	7	
Control I/O	9	
Control options 1 (ID 1707)	47	
Control options 2 (ID 1798)	47	
Control place (ID 1403)	58	
D		
Data logger trigger word (ID 97)	28	
DC voltage (ID 44)	24	
DC-link Amps (ID 3)	22	
DC-link current (ID 1861)	22	
DC-link power (ID 5)	23	
DC-link voltage (ID 1108)	22	
DCGuard closed (ID 445)	37	
DCGuard control status (ID 1870)	27	
DCGuard status word (ID 1869)	27	
DIN status 1 (ID 56)	26	
DIN status 2 (ID 57)	27	
Disable stop lock (ID 1086)	52	
E		
Earth fault current limit (ID 1333)	52	
Enable keypad close (ID 1863)	59	
Enable keypad open (ID 1864)	59	
Enable U (ID 1515)	34	
Enable V (ID 1516)	34	
Enable W (ID 1517)	34	
External fault 1 (ID 405)	34	
External fault 2 (ID 406)	34	
F		
Fast reclosing (ID 1859)	46	
Fault (ID 434)	37	
Fault reset (ID 414)	33	
Fault simulation (ID 1569)	51	
Fault word 1 (ID 1172)	29	
Fieldbus actual selection (ID 1853)	48	
Fieldbus control	61	
Fieldbus control (ID 411)	36	
Fieldbus control word (ID 1160)	29, 62, 62	
Fieldbus fault slot D response (ID 733)	52	
Fieldbus process data in 1 selection (ID 876)	49	
Fieldbus process data in 1 selection (ID 882)	50	
Fieldbus process data in 2 selection (ID 877)	50	
Fieldbus process data in 3 selection (ID 878)	50	
Fieldbus process data in 4 selection (ID 879)	50	
Fieldbus process data in 5 selection (ID 880)	50	
Fieldbus process data in 6 selection (ID 881)	50	
Fieldbus process data in 8 selection (ID 883)	51	
Fieldbus process data out 1 selection (ID 852)	48	
Fieldbus process data out 2 selection (ID 853)	48	
Fieldbus process data out 3 selection (ID 854)	48	
Fieldbus process data out 4 selection (ID 855)	49	
Fieldbus process data out 5 selection (ID 856)	49	
Fieldbus process data out 6 selection (ID 857)	49	

Fieldbus process data out 7 selection (ID 858)	49	Power kW (ID 73)	23
Fieldbus process data out 8 selection (ID 859)	49	Prediction gain (ID 673)	46
Fieldbus status word (ID 65)	29	Pulse ratio (ID 606)	47
Fieldbus status word (ID 68)	63	Purpose of the manual	6
Functional description	7		
G		R	
General status word ID (ID 897)	48	Ready (ID 432)	36
		Requirements	7
I		Reset data logger (ID 1857)	51
I/O configuration	9	Reset U (ID 1518)	34
I/O terminal control (ID 409)	35	Reset V (ID 1520)	35
INV commands (ID 1091)	36	Reset W (ID 1519)	35
Inverted fault (ID 435)	37	Run (ID 433)	36
IU offset (ID 668)	47	Run enable 1 (ID 407)	33
		Run enable 2 (ID 1860)	33
K		S	
Keypad control (ID 410)	35	Software version	6
Keypad/PC fault mode (ID 1329)	53	Start signal 1 (ID 403)	33
		State machine (ID 896)	51
L		Status word (ID 43)	25, 64
Last active alarm (ID 74)	29	SW trip response (ID 1874)	46
Last active fault (ID 37)	29	Switch lock (ID 1527)	38
License key (ID 1995)	59	Switch lock current limit (ID 1862)	45
		Switching frequency (ID 601)	46
M		System integrator responsibilities	8
Manual version	6	T	
Master/follower mode (ID 1324)	48	Troubleshooting	66
Maximum input U (ID 1505)	55	TTF programming	59
Maximum input V (ID 1532)	55		
Maximum input W (ID 1535)	56	U	
Maximum step U (ID 1506)	55	U cable OK (ID 1509)	37
Maximum step V (ID 1533)	56	U high current response (ID 1550)	56
Maximum step W (ID 1536)	56	U high load (ID 1512)	38
Minimum input U (ID 1504)	55	U over load response (ID 1524)	54
Minimum input V (ID 1531)	55	U phase current (ID 1851)	24
Minimum input W (ID 1534)	56	U phase power (ID 1871)	25
		U phase trip limit (ID 1500)	45
O		U trip delay (ID 1552)	57
Over load protection	53	U trip limit (ID 1551)	57
Overload U (ID 1521)	35	Unit temperature (ID 8)	22
Overload V (ID 1522)	35		
Overload W (ID 1523)	35	V	
		V cable OK (ID 1510)	37
P			

V high current response (ID 1553)	57
V high load (ID 1513)	38
V over load response (ID 1525)	55
V phase current (ID 1852)	24
V phase power (ID 1872)	25
V phase trip limit (ID 1501)	45
V trip delay (ID 1555)	58
V trip limit (ID 1554)	57
Vdc trip limit (ID 1858)	52
Voltage rise time (ID 1541)	47

W

W cable OK (ID 1511)	38
W high current response (ID 1556)	58
W high load (ID 1514)	38
W over load response (ID 1526)	56
W phase current (ID 1853)	24
W phase power (ID 1873)	25
W phase trip limit (ID 1502)	45
W trip delay (ID 1559)	58
W trip limit (ID 1558)	58
Warning (ID 436)	37

ENGINEERING
TOMORROW

Danfoss

.....
Danfoss can accept no responsibility for possible errors in catalogues, brochures and other printed material. Danfoss reserves the right to alter its products without notice. This also applies to products already on order provided that such alterations can be made without subsequential changes being necessary in specifications already agreed. All trademarks in this material are property of the respective companies. Danfoss and the Danfoss logotype are trademarks of Danfoss A/S. All rights reserved.
.....

Vacon Ltd
Member of the Danfoss Group
Runsorintie 7
65380 Vaasa
Finland
drives.danfoss.com

