
### VIISAN®

# P4W 4K Wireless Document Camera Quick Start Guide

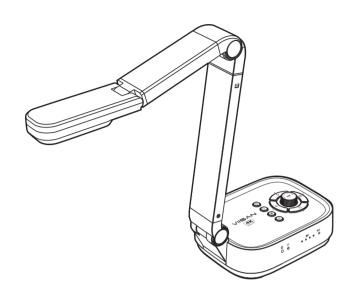

Please read this guide before using the product.

### Step 1. Instructions

Thank you for purchasing the VIISAN product. The P4W is a 4K wireless visualizer for use in digital teaching and distance learning. This quick start guide briefly describes the steps to start using this document camera. If you have any technical or service questions about the product, please E-mail our customer service using info@viisan.com then we will provide you with service and support.

### **Limited Warranty**

This product provides limited warranty continues for one (1) year from the date of purchase.

#### **Warranty Exclusions**

- The following circumstances excluded from warranty coverage:
- Product damage caused by catastrophes, thunder stroke, faulty electric power, and environmental factors.
- Defacing of product labeling (label alterations and falsifying, serial number missing, serial number no longer discernible, serial number invalid). All serial numbers are recorded and tracked for warranty purposes.
- Unauthorized changes of non-parts, modifications or alterations, parts removal in or to the products.
- Damage caused by operator error or operator fails to comply user manual instruction, such as, but not limited to improper storage resulting in product get wet, corrosion, ell off, squeezed or exposed to inadequate temperature/humid environment.
- · Accessories or packing material such as boxes, user manual, etc.

### Safety & Environmental Information

This device complies with part 15 of the FCC rules and CE certification.
Discarded electrical and electronic appliances are recyclable and should separate from household waste. Please actively support in conserving resources and protecting the environment by returning this appliance to the collection centers.

## System Requirements



Intel i3 Processor or Higher
USB Port
At least 4GB RMB (Recommended 8GB)
20GB Available HDD Space
Windows & Chrome Extension

#### Image Sensor 1/3.06", 13 MP CMOS Sensor

Image Sensor 1/3.06", 13 MP CMOS Sensor

TV lines 1100

Step 2. Specifications

Max. Shooting Area 430mm x 320mm (17"x12.6")

Max. HDMI Output Resolution / FPS 3840×2160@30fps (4K, 16:9)

USB Output Resolution / FPS 4192×3104@10fps, 3840x2160@30fps

1920x1080@30fps, 1280x720@30fps

1024x768@30fps, 640x360@30fps

Video Format H.264 / MJPG / YUY2

Focus Auto / Manual

Lamp LED

Microphone

Image Rotation 0° / 90° / 180° / 270° / Flip / Mirror

PTZ Yes
Freeze Yes
Power Frequency 50 / 60 Hz
Wireless Compatibility 802.11a/b/g/n/ac
Wireless Working Frequency 5 GHz / 2.4 GHz

Dual mode AP / Station DHCP (Server / Client)
Microphone Built-in Omnidirectional Microphone
Connectivity USB (Type-C) / HDMI / WiFi

Built-in Omnidirectional Microphone 1kHz(0dB=1V/Pa) Min-45 Nom-42 Max-39 dB

Powered By
USB Type-C (5V / 1A)
Built-in Battery
Protocol
UVC / UAC Compliant
Soupport OS
Windows & Chrome Extension
Dimensions
Extended: 347x115x381 mm

Closed: 242x115x87 mm

Net Weight 1.36Kg NOTE: Specifications are subject to change without notice


Before use, make sure the following items are included in the package. If anything is missing, contact the retailer where you purchased the product.

1. 4K Wireless Document Camera

Step 3. Unpacking

- 2. USB Type-C Cable
- 3. Quick Start Guide
- 4. Warranty Card




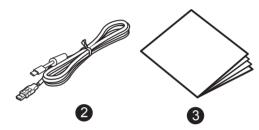




### Step 4. Parts Descriptions

#### **Control Panel** Rotate Selection <del>- (</del>U) (Ÿ) Zoom Selection Lemp Button \* Shuttle Wheel Freeze Button ress a selection button (Rotate Zoom Brightness Focus) then turn the shuttle wheel to adjust the value **(**≡) Resolution Switch Press the shuttle wheel entry the PTZ mode then Brightness Selection Focus Button

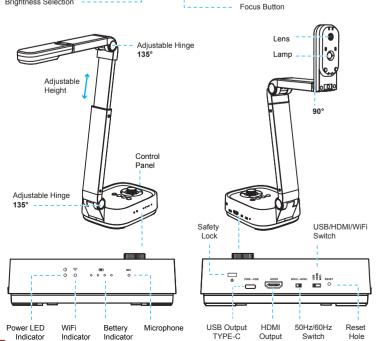


### Step 5. Start Using

- 1.Start by lifting the camera head.
- 2. Press against the base plate of the device.

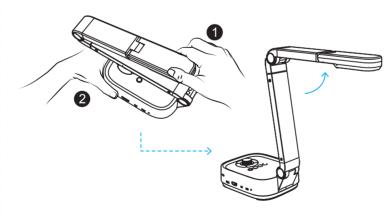

- 3. Place an object to be displayed under the camera.
- 4. Press the power button to turn on the power.
- 5. Adjust the arm to change the height and position for capturing your object.

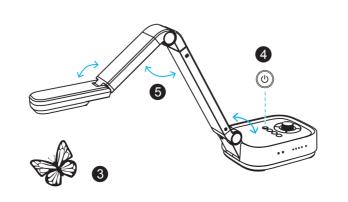


### Step 6. USB & HDMI Connections

1. Switch to the USB connection mode.


**USB Mode Connection** 

Plug the supplied USB type-C cable to the P4W and connect another end into the comptuer's USB port.

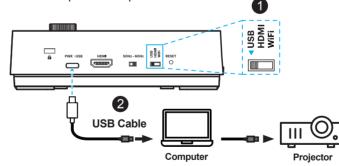

#### **HDMI Mode Connection**

- 1. Switch to the HDMI connection mode.
- Plug the HDMI cable to the P4W device and connect enothet end into a projector, monitor or TV(HDTV).

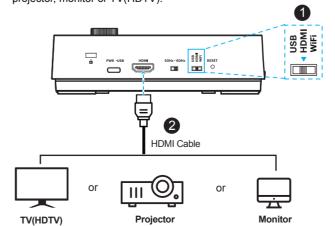


### **Network Connection**

Step 7. Wi-Fi Connection

- 1. Switch to the Wi-Fi mode and the Wi-Fi LED indicator will be emitted Green light with flashing.
- Open the wireless network list on the computer.
- Select the [P4W\_5G\_xxxxxx] in the network list, and input the password for connection (default: 88889999) to start the connection.
- 4. When the connection is successful, the Wi-Fi LED indicator will emit Green light.

#### Log in to the web page

- 1. Open the web browser, and enter the default IP [192.168.100.1] in the address bar.
- 2. Enter the login account [admin] and default password [9999], and click Login.
- After logging to the web page, you can do the live preview and configure the settings on the web page.

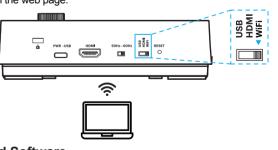

#### **Download Software**

VIISAN P4W is a standard UVC camera, you can use it with a variety of software as long as they recognize the video source coming from a UVC camera. For example, you can use it with third-party video conferencing software like Zoom, Microsoft Teams, or Google Meet. However, to get the full functionality of this 4K document camera, we'd recommend using it with VIISAN VisualCam software and you can download this free software from VIISAN's website at the below link.

https://www.viisan.com/en/download/index.html



VIISAN Technology Co., Ltd. www.viisan.com Customer service: info@viisan.com