



G3

User Guide

support.shotscope.com

Shot Scope



Contents

Inside your box	01
Setting up your Shot Scope G3	02
Before you play for the first time	07
Terms and Conditions	11

Inside your box

Thank you for buying a Shot Scope G3. Before turning on the device, please read our full user guide to ensure the correct set up.

1 x Shot Scope G3

1 x Charging cable



Shot Scope

Setting up your Shot Scope G3

Step 1: Download and install the mobile app

Shot Scope provides both an Android and iOS app, these can be downloaded onto any compatible mobile or tablet.

 
To download or install the Shot Scope app, simply search for Shot Scope on either the App Store or the Google Play Store.



Register

To register an account, open the app and then click on the 'Register' button. Complete all sections and then press the 'Continue' button.

Your password must be at least 6 characters long and include at least one number.

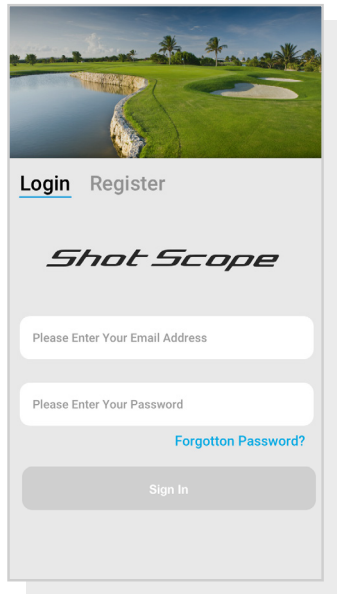A screenshot of the Shot Scope app's registration screen. At the top is a landscape photo of a golf course with a pond. Below the photo are two links: "Login" (underlined) and "Register". The "Shot Scope" logo is centered. There are two input fields: "Please Enter Your Email Address" and "Please Enter Your Password". Below the password field is a link "Forgotton Password?". At the bottom is a "Sign In" button.

Login Register

Shot Scope

Please Enter Your Email Address

Please Enter Your Password

[Forgotton Password?](#)

Sign In

 
App registration screen

Step 2: Complete the tutorial on the app

The first time you enter the Shot Scope app after registering, you will be taken through a tutorial showing you how to use the watch and the app. During this process, you will choose the settings for your watch and sync the watch to ensure it has the latest firmware installed. You must complete this process before using the watch.

Step 3: Connecting to Shot Scope

If you have just completed the tutorial you won't need to connect the watch again. If you do need to connect the watch to the mobile app, turn Bluetooth on in your phone settings, log into your app and then press the 'Connect' button at the top of the screen. The watch screen will then change to show the connection has been made successfully.

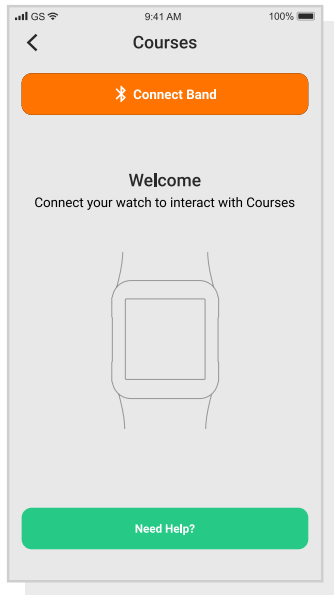


Set up tutorial

Step 4: Check course maps

We suggest that you check the mapping status of any courses you intend to play 48 hours before your tee off time. This is to make sure the course is in the system and has been mapped.

Most courses will be mapped and on the watch, but there could be the occasional new course that isn't on the system or your course may have an update pending.

 To view the list of mapped courses on the Shot Scope system, navigate to the 'Courses' section in the app. This is present on the tab bar of the iOS app and the main menu of the Android app.

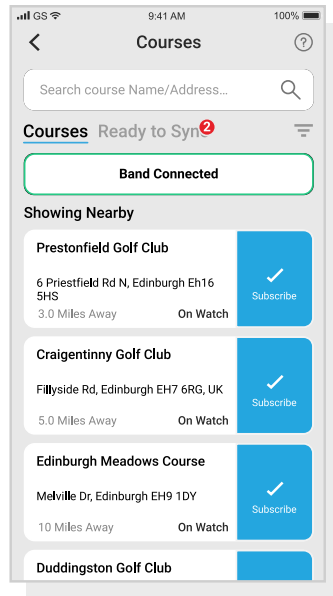

View course maps

Step 5: Searching for, subscribing and adding a course

 
You can search our course database by entering the name of the course or using your location to find nearby courses. Either use the search bar or use the filter at the top right of screen to filter courses by proximity to your current location.

To make sure you always have the most up to date course maps, subscribe to any course that you play a lot to get notifications when the course map has been updated. To subscribe, tap on the course and it will be highlighted blue to confirm this action. If any of the courses you selected are due an update then they will be automatically added to the sync list.

If your course is mapped but not yet on the watch, the course will have an 'add' button beside it, tap this and the course will be automatically added to your sync list.

We may have your course in the database but it has not yet been mapped. In this situation the course will have a 'request' button beside it, tap this to request the course be mapped. This will notify the mapping team who will endeavour to get the course mapped in 48 hours.

If you can't find the name of the course, press the 'Request' button at the bottom of the screen. This will bring up a form that can be filled out and sent to our mapping team. Again, we will aim for this to be mapped in 48 hours.

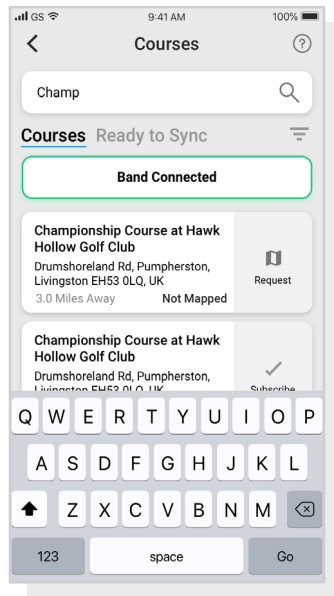


View course maps

Step 6: Syncing

If you have any course maps that need to be uploaded to the watch, or any updates that need to be transferred to the watch you, should see a red notification at the top of the courses screen. If you wish to perform a sync then tap on the 'Ready to Sync' button at the top of the screen.

 On the resulting screen, you will see the list of courses that require a sync. Press the 'Sync All' button near the top of the screen to start the process.

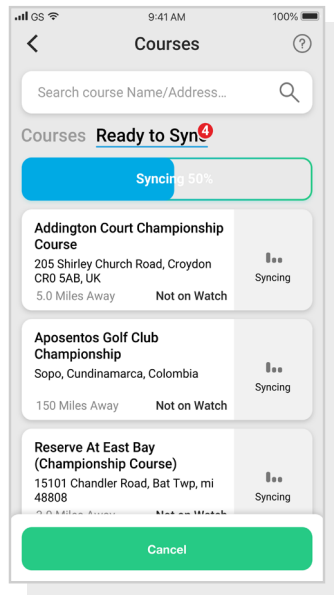


View course maps

Before you play for the first time

Step 1: Charging your Shot Scope G3

Your Shot Scope can be charged from any USB port or USB compliant wall charger. Please use the charger provided with the product.

 Hold the charger with the Shot Scope logo facing the sky, then apply some pressure to the lever and carefully place the 4 prongs into the back of the watch. The watch screen will change to show the charging screen if successfully done.



Clip charger to left of screen and connect USB to power.

Step 2: Getting ready to play

To start a round, firstly switch on the watch by pressing the top left button, then unlock the watch by pressing the bottom left button. Once the watch is unlocked, press the top right button next to the 'tick'. This will confirm the selection of 'Play'.

We suggest that you start a round just prior to arriving at the first tee.



Step 3: Selecting a course

After you have selected play your watch will then search for a GPS fix which should take around 30 seconds, the first time you play this may take a bit longer. The watch will then show a list of available courses, use the bottom left and right buttons to find the correct course and then press the top right button to confirm your selection.



Step 4: During Play

Scrolling between holes

When you finish a hole, the watch will automatically change to the next hole. If you need to manually change the hole the watch is on you can do this by pressing the bottom right button to go forward and the bottom left button to go back.



Button Lock

The button lock feature locks the buttons while in play to avoid pressing accidentally.

The buttons will lock after 15 seconds of inactivity. To unlock, tap the bottom left button.

To view hazards while in play, unlock the screen and the hazards icon will appear, top right.

You can disable the lock screen feature in the settings menu.



Buttons locked screen

Step 4: During Play (cont)

How to access hazards

To view hazards for the hole, click the top right button beside the '!' icon. This will take you to the hazards screen where you can access distances to bunkers and water hazards that are on that hole. The screen will show the first two hazards but you can scroll through all hazards on the hole by pressing the top right and bottom right buttons. To get back to the yardages screen after this procedure, press the top left button beside the back arrow.



Hazard icon (Top Right)



Hazard screen



End round

Ending a round

After playing the 18th hole you will automatically be asked if you want to end the round. Press the top right button to confirm that you wish to end the round. If you don't want to end the round press the bottom right button until you see the 'Continue' option and then press the top right button to confirm this. You can manually end a round at any point by pressing the menu button top left and then scrolling through the options until you reach the 'End Round' option. If you press the top right confirm button the round will end and you will return back to the home screen.

Visit www.shotscope.com/getstarted
for FAQs, tutorial videos and customer support

Shot Scope Technologies Ltd

LIMITED WARRANTY & SAFETY INFORMATION

FOR CONSUMERS PROTECTED BY CONSUMER PROTECTION LAWS OR REGULATIONS IN THEIR COUNTRY OF PURCHASE. THE BENEFITS CONFERRED BY THIS LIMITED WARRANTY ARE IN ADDITION TO ALL RIGHTS CONVEYED BY SUCH CONSUMER PROTECTION LAWS AND REGULATIONS. Shot Scope Technologies Ltd products are warranted to be free from defects in materials, components and workmanship through normal use. The Warranty Period begins on the date of purchase from Shot Scope Technologies Ltd and lasts for a period of (12) months for a new product.

If a defect in material, component or workmanship is discovered within the Warranty Period you must notify Shot Scope Technologies Ltd in writing. In no event shall such notifications be received by Shot Scope Technologies Ltd later than 14 days after the expiration of the Warranty Period. Shot Scope Technologies Ltd will, at its sole option, repair or replace any materials or components that fail in normal use. Such repairs or replacement will be made at no charge to the customer for parts or labour, provided that the customer shall be responsible for any shipping and transportation cost. All returns must be shipped to Shot Scope Technologies Ltd service centre for assessment prior to repair or replacement.

The product is intended to be used only as a performance tracking device for sport and must not be used for any other purpose requiring precise measurement of direction, distance, location or topography. Shot Scope Technologies Ltd makes no warranty as to the accuracy or completeness of map data in this product.

Shot Scope Technologies Ltd retains the exclusive right to repair or replace (with a new or newly-overhauled replacement product) the device or software or offer a full refund of the purchase price at its sole discretion. SUCH REMEDY SHALL BE YOUR SOLE AND EXCLUSIVE REMEDY FOR ANY BREACH OF WARRANTY. Contact support@shotscope.com for a returns form and further instructions. A copy of the original sales receipt, is required as the proof of purchase for warranty services. The customer is responsible for all shipping and transportation costs, for shipping details contact Shot Scope Technologies Ltd.

EXCLUSIONS AND LIMITATIONS

This limited warranty extends only to products purchased from Shot Scope Technologies Ltd or an authorized reseller.

This warranty does not apply to: (i) cosmetic damage such as scratches and dents; (ii) consumable parts, such as batteries, unless product damage has occurred due to a defect in materials, component or workmanship; (iii) damage caused by accident, abuse, water, flood, fire, or other acts of nature or external

causes; (iv) damage caused by service performed by anyone who is not an authorized service provider of Shot Scope Technologies Ltd; (v) damage to a product that has been modified or altered without written permission of Shot Scope Technologies Ltd; or (vi) damage to a product that has been not been charged or powered in accordance with the charging and powering instructions provided by Shot Scope Technologies Ltd; (vii) the product is supplied or licensed for beta, evaluation, testing or demonstration purposes for which Shot Scope Technologies Ltd does not charge a purchase price.

To the maximum extent permitted by applicable law.

All software and services provided by Shot Scope Technologies Ltd, including factory loaded software is provided "AS IS" without warranty of any kind. Without limiting the foregoing, Shot Scope Technologies Ltd does not warrant that the operation of the product, software or services will be error free. Shot Scope Technologies Ltd does not warrant that any equipment, system or network that the product software or services are used in conjunction with will be error free.

TO THE EXTENT NOT PROHIBITED BY APPLICABLE LAW

ALL IMPLIED WARRANTIES AND CONDITIONS OF MERCHANTABILITY, SATISFACTORY QUALITY OR FITNESS FOR A PARTICULAR PURPOSE ARE LIMITED TO THE DURATION OF THE WARRANTY PERIOD. ALL OTHER EXPRESS OR IMPLIED CONDITIONS, REPRESENTATIONS AND WARRANTIES, INCLUDING BUT NOT LIMITED TO ANY IMPLIED WARRANTY OF NON-INFRINGEMENT ARE DISCLAIMED.

To the extent not prohibited by applicable law, in no event will Shot Scope Technologies Ltd be liable for: (i) lost or erased data in connection with repair or replacement of a device; (ii) loss of revenue or profit; (iii) loss of the ability to use third party products or services; (iv) or for special, indirect, consequential, incidental or punitive damages, regardless of the theory of liability (including negligence). In the event where Shot Scope Technologies Ltd has been advised of the possibility of damages. To the extent not prohibited by applicable law, in no event will Shot Scope Technologies Ltd liability exceed the amount paid by you the consumer for the product.

Unless modified in writing by Shot Scope Technologies Ltd this limited warranty is understood to be the complete and exclusive agreement between you and Shot Scope Technologies Ltd. Superseding all prior agreements, oral or written, and all other communications between you and Shot Scope Technologies Ltd. No Shot Scope Technologies Ltd employee, agent or reseller is authorized to make any verbal or written modification, extension or addition to this limited warranty.

ONLINE AUCTION PURCHASES

Products purchased through online auctions are not eligible for warranty coverage. Online auction confirmations are not accepted for warranty verification. To obtain warranty services, an original or copy of the sales receipt from the original retailer is required.

TECHNICAL SUPPORT

This limited warranty is neither a service nor a support contract. Answers to technical support questions can be found at:

support.shotscope.com

SAFETY INFORMATION & HEALTH WARNINGS

For your personal safety and to avoid damage to device follow safety information guidelines detailed below. Failure to avoid the following potentially hazardous situations could result in serious injury:

- Always consult your Physician/Doctor before beginning or modifying any exercise program. If you have a pacemaker or other implanted electronics device, consult your Physician/Doctor before using any electronic devices from Shot Scope Technologies Ltd.
- Do not clean or wear the device when you are charging it. Always unplug the device first before cleaning it.
- Do not expose the device or any other electronics product used to charge the device to liquid, moisture, humidity, or rain whilst charging the device. Exposure to water or moisture during charging could result in damage to the electronics circuits and may result in failure or explosion.
- Do not pull or apply excessive strain or force on either the watch or the strap. Damage to the watch strap may cause damage to internal electronic circuits.
- Only use the device as detailed in the user manual.

BATTERY WARNINGS

If these guidelines are not followed, the internal lithium-ion battery may experience a shortened life span or may present a risk of damage to the device, fire, chemical burn, electrolyte leak, and/or injury.

- Do not charge or use the unit in a car or similar place where the inside temperature may be over 45 degrees Celsius (113°F). To prevent damage, remove the device from the vehicle or store it out of direct sunlight, such as in the glove box.
- Do not disassemble, modify, re-manufacture, puncture or damage the device.
- Do not short circuit the battery or device by bringing the terminals in contact with metal or another object. This could cause personal injury, explosion or fire.
- Do not immerse or expose the device to water, other liquids, fire, explosion, or any other hazard.
- Do not shock the battery by dropping or throwing it.
- Do not operate the device outside of the temperature ranges specified in the temperature specifications in this manual.
- If the device or battery shows any type of damage, such as bulging, swelling or disfigurement. Discontinue use immediately and contact Shot Scope Technologies Ltd.
- Keep any exposed battery out of reach of infants or small children.

CARE GUIDELINES

- Avoid extreme shock and harsh treatment, because it can degrade the life of the device.
- Only use a damp cloth or paper towel with water to clean the device. Do not spray with any chemicals to clean the device.
- Do not expose the device to extremely high or low temperatures.
- Do not bring the device into contact with any sharp objects. This could cause damage or scratches.
- Do not attempt to repair, modify or disassemble your Shot Scope watch; it does not contain any user-serviceable components and doing so will void the warranty.
- Use the supplied usb cable to charge the Shot Scope watch with usb compliant ports.
- If the device becomes submerged in a liquid, turn the device off, wipe excess liquid from the surface of the device and place the device in a dry area for 24 hours. In most cases the device should power up and function properly once completely dried. If the watch does not power up after following these steps contact customer support if your warranty period is still active.

GPS NOTICE

The device may experience degraded performance if you use it in proximity to any device that uses a terrestrial broadband network operating close to the frequencies used by any Global Navigation Satellite System (GNSS), such as the Global Positioning Service (GPS). Use of such devices may impair reception of GNSS signals.

RADIO FREQUENCY RADIATION EXPOSURE

This device is a mobile transmitter and receiver that uses an internal antenna to send and receive low levels of radio frequency (RF) energy for data communications. The device emits RF energy below the published limits when operating in its maximum output power mode and when used with Shot Scope authorized accessories. To comply with RF exposure compliance requirements, the device should be used as described in the user guide. The device should not be used in other configurations. This device must not be co-located or operated in conjunction with any other transmitter or antenna.

The device should only be used for the intended application as stated by the manufacturer.

POWER SPECIFICATIONS

Charging: 5V USB

BATTERY

The device has an internal Lithium Polymer rechargeable battery The battery should only be replaced by authorized Shot Scope Technologies Ltd approved personal. A customer should never attempt to replace the battery.

TEMPERATURE SPECIFICATIONS

Operating Temperature: 0°C to 50°C (32°F to 122°F)

Charging Temperature: 5°C to 40°C (41°F to 104°F)

Storage Temperature: -10°C to 45°C (14°F to 113°F)

PRODUCT DISPOSAL

Dispose of the Shot Scope device, battery and packaging in the accordance with local regulations. Do not dispose of the battery with regular household waste.

FEDERAL COMMUNICATIONS COMMISSION (FCC) STATEMENT

This equipment radiates radio frequency energy and if not used properly – that is, in strict accordance with the instructions in this manual – may cause interference to radio communications and television reception.

Operation is subject to the following two conditions: (1) this device may not cause harmful interference and (2) this device must accept any interference that may cause undesired operation of the device.

This device has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communication. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
 - Increase the separation between the equipment and receiver.
 - Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
 - Consult the dealer or an experienced radio/TV technician for help.
- Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment. FCC ID: 2AHWR-SS04

CE MARKING & EUROPEAN UNION COMPLIANCE



Products intended for sale within the European Union are marked with a (CE) mark which indicates compliance to applicable directives and European norms (EN) as follows.

DECLARATION OF CONFORMITY

Shot Scope declares that this device complies with the essential requirements and relevant provisions of Directive RED 2014/53/EU.

Go to www.shotscope.com/doc to view the Declaration of Conformity.

Shot Scope Technologies Ltd
Unit 27, Castlebrae Business Centre, 40 Pepper Place, Edinburgh, EH16 4BB,
United Kingdom

MODE, FREQUENCY AND POWER

Mode	Frequency	Power
Bluetooth Low Energy	2.4 GHz	10mW
RFID	13.56 MHz	<1mW

SOFTWARE LICENSE AGREEMENT

BY USING THE DEVICE, YOU AGREE TO BE BOUND BY THE TERMS OF THE FOLLOWING SOFTWARE LICENSE AGREEMENT. PLEASE READ THIS AGREEMENT CAREFULLY. Shot Scope Technologies Ltd grant you the user a limited license to use the software embedded in this device (the "Software") in binary executable form in the normal operation of the device & product. Title, ownership rights, and intellectual property rights in and to the Software remain with Shot Scope Technologies Ltd. You acknowledge that the software is the property of Shot Scope Technologies Ltd and is protected under international copyright treaties. You further acknowledge that the structure, organization, and code of the software, for which source code is not provided, are valuable trade secrets of Shot Scope Technologies Ltd. You agree not to decompile, disassemble, modify, reverse assemble, reverse engineer, or reduce to human readable form the software or any part thereof or create any derivative works based on the software.

Go to www.shotscope.com/legal/ for the latest terms and conditions, returns and privacy policies.



To find out more information visit:

www.support@shotscope.com

Join our social pages to be kept up to date with the latest Shot Scope news:



Facebook: [shotscope](#)



Twitter: [@shotscope](#)



Instagram: [@shot_scope](#)

Version 3 - 240621